


# Canon FAX-L300

## User's Guide

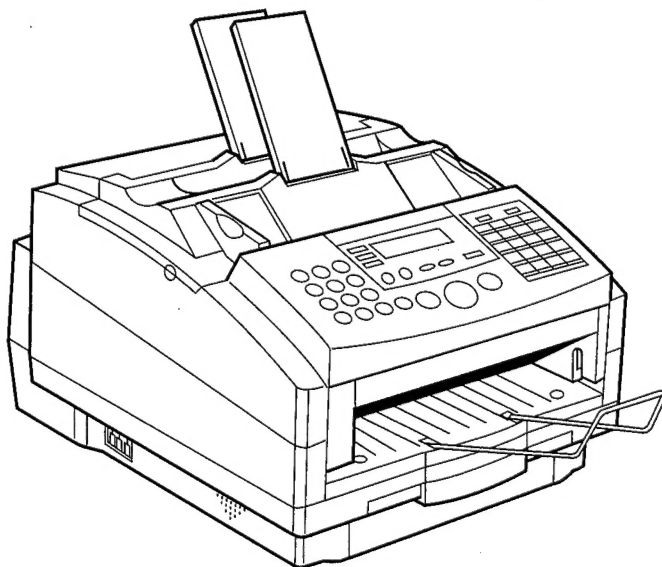

# **Canon**

# **FAX-L300**

**User's Guide**

Although this equipment can use either loop disconnect or DTMF signalling, only the performance of the DTMF signalling is subject to regulatory requirements for correct operation. It is therefore strongly recommended that the equipment is set to use DTMF signalling for access to public or private emergency services. DTMF signalling also provides faster call set up. (UK)

#### Copyright

Copyright © 1996 by Canon, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon, Inc.



As an Energy Star Partner, Canon has determined that the FAX-L300 meets the Energy Star guidelines for energy efficiency.

## TO BE PROVIDED BY CANON UK.

### NOTICE FOR CONNECTION TO TELECOMMUNICATION SYSTEMS IN THE UNITED KINGDOM

1. BABT Certificate Number/Approval Number for the Canon FAX-L300:

NS/1056/3/R/604543

APPROVED for connection to telecommunication systems specified in the instructions for use subject to the conditions set out in them.

2. This apparatus has been approved for the use of the following facilities.

1. Storage of telephone numbers for retrieval by a predetermined code. (If problems occur, verify stored number).
2. Automatic call initiation.
3. Operation in the presence or absence of initial or secondary proceed indication.
4. Automatic dialling facilities.
5. Automatic storage of last number dialled.
6. Automatic repeat attempt facilities.
7. Auto clear from the call originating end.
8. Series connection facility.
9. Modem
10. Automatic answer.
11. Automatic selection of incoming facsimile or telephone calls.

Any other usage will invalidate the approval of the apparatus if as a result, it then ceases to conform to the standards against which approval was granted.

3. This apparatus may be used on telecommunication systems employing loop disconnect or MF signalling.
4. This apparatus is suitable for connection only to direct exchange lines on the PSTN directly or via a compatible PABX. The supplier of the apparatus should be consulted for an up to date list of PABXs with which the apparatus is compatible.

It cannot be guaranteed that the apparatus will operate under all possible conditions of connection to compatible PABX. Any cases of difficulty should be referred in the first instance to the supplier of the apparatus.

5. Ringer Equivalence Number (REN) = 1

The REN is a customer guide indicating approximately the maximum number of items of apparatus that should be connected simultaneously to the line. Correct operation cannot be guaranteed in installations with mixed types of apparatus.

The sum of the REN's of the individual items should not exceed 4. The REN value of a BT telephone is assumed to be 1 unless otherwise marked.

Any telephones or other approved terminal must be connected to the appropriate socket on the facsimile apparatus only.

6. The series connection facility detects the off-hook condition of any associated terminal. The voltage drop introduced by the apparatus between the PSTN and the associated terminal at a current of 40 mA is 750 millivolts.

The apparatus should not be used in conjunction with other series connected apparatus such that the aggregate declared voltage drops of all the apparatus, together with the voltage drop introduced at 40 mA d by any separate wiring that is used to link apparatus, exceeds 2.0 Volts.

Only one FAX-L300 may be connected between other terminal apparatus and the telephone network.





This CE Marking shows compliance of this equipment with Directive 73/23/EEC and Directive 89/336/EEC (as amended by Directive 92/31/EEC), both as amended by Directive 93/68/EEC.

L'estampille CE indique que ce matériel est conforme aux dispositions de la Directive 73/23/CEE et de la Directive 89/336/CEE (modifiée par la Directive 92/31/CEE), toutes deux modifiées par la Directive 93/68/CEE.

Diese CE-Markierung weist darauf hin, daß dieses Gerät mit Richtlinie 73/23/EWG und der durch Richtlinie 92/31/EWG geänderten Richtlinie 89/336/EWG übereinstimmt, die beide durch Richtlinie 93/68/EWG geändert wurden.

Denne CE-mærkning indikerer, at dette udstyr følger Direktiv 73/23/EU og Direktiv 89/336/EU (som udvidet med Direktiv 92/31/EU), begge som udvidet med Direktiv 93/68/EU.

CE Märkningen visar att denna utrustning följer direktiven 73/23/EEC och 89/336/EEC (komplement till 92/31/EEC) båda som komplement till direktiv 93/68/EEC.

CE merkintä osoittaa tämän tuotteen yhteensopivuuden direktiivien 73/23/EEC ja 89/336/EEC (täydennetty direktiivillä 92/31/EEC) kanssa, joita on täydennetty direktiivillä 93/68/EEC.

Dette CE merket viser at utstyret er i samsvar med EU direktivene 73/23 og 89/336 (med korreksjon av EU direktiv 92/31), begge med korreksjon av EU direktiv 93/68.

Deze CE markering toont aan dat het product in overeenstemming is met de richtlijnen 73/23/EEC en 89/336/EEC (zoals geamendeeerd door richtlijn 92/31/EEC), welke beide zijn geamendeeerd door de richtlijn 93/68/CEE.

Questo contrassegno CE indica che l'apparecchio è conforme alle Direttive CEE 73/23 e 89/336 (successivamente modificata con la Direttiva 92/31), entrambe modificate con la Direttiva 93/68.

Este símbolo CE indica que el equipo cumple con las Directivas 73/23/EEC y 89/336/EEC (según la enmienda a la Directiva 92/31/EEC), ambas según la enmienda de la Directiva 93/68/EEC.

Esta marca CEE indica que este equipamento está de acordo com as Directivas 73/23/EEC e 89/336/EEC (conforme emenda da directiva 92/31/EEC), ambas emendas da directiva 93/68/EEC.

Αυτή η CE σήμανση δηλώνει την συμφωνία της Συσκευής με την Οδηγία 73/23/EEC και την Οδηγία 89/336/EEC (όπως τροποποιήθηκαν από την Οδηγία 92/31/EEC), όπως αμφότερες έχουν τροποποιηθεί από την Οδηγία 93/68/EEC.

Oznaka CE prikazuje, da oprema ustreza predpisu 73/23/EEC, in kot to predpisuje predpis 93/68/EEC.

A CE jelzés tanúsítja, hogy a berendezés megfelel az EEC 92/31 és 93/68 előírásokkal módosított EEC 73/23 és 89/336 követelményrendszernek.

Oznaczenie CE jest potwierdzeniem zgodności niniejszego urządzenia z wymaganiami Dyrektywy 73/23/EEC oraz Dyrektywy 89/336/EEC (zgodnie ze zmianami Dyrektywy 92/31/EEC), obie uzupełnione przez Dyrektywę 93/68/EEC.

Značka CE indikuje, že toto zařízení odpovídá Směrnici 73/23/EEC a Směrnici 89/336/EEC (doplňené Směrnici 92/31/EEC), které byly dále doplněny Směrnici 93/68/EEC.

Käesolev CE-markeerung näitab, et antud seade vastab Euroopa Liidu Direktiividele 73/23/EEC ja 89/336/EEC (koos muudatustega vastavalt Direktiivile 92/31/EEC) ning võttes arvesse, et mõlemad direktiivi on muudetud vastavalt Direktiivile 93/68/EEC.

CE marķējums norāda, ka šī iekārta atbilst prasībām, kas iekļautas EK direktīvās 73/23 un 89/336 (ar EK direktīvā 92/31 paredzētajām izmaiņām), kurās veikti labojumi saskaņā ar EK direktīvu 93/68.

Ženklas CE reiškia, kad šis įrenginys atitinka direktyvas 73/23/EEC ir 89/336/EEC (atlikus pataisas direktyva 92/31/EEC), kuriose buvo atliktos pataisos direktyva 93/68/EEC.

Маркировка CE указывает на то, что данное оборудование соответствует Директиве 73/23/EEC и Директиве 89/336/EEC (с изменениями в соответствии с Директивой 92/31/EEC) с изменениями, предписываемыми Директивой 93/68/EEC.

Маркуванням CE вказує на те, що дане обладнання відповідає Директивам МЕК 73/23/EEC і 89/336/EEC (із змінами у відповідності до Директиви 92/31/EEC) із змінами, що диктуються Директивою 93/68/EEC.

Fax IV

## Safety Information



Use of controls, adjustments or performance of procedures other than those specified in this user's guide may result in hazardous radiation exposure.

This label is attached to the laser scanner unit inside the fax and is not in a user access area.

	<b>DANGER</b>	- Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.
	<b>CAUTION</b>	- INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.
	<b>ATTENTION</b>	- RAYONNEMENT LASER INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
	<b>VORSICHT</b>	- UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
	<b>ATTENZIONE</b>	- RADIAZIONE LASER INVISIBILE IN CASO DI APERTURA. EVITARE L'ESPOSIZIONE AL FASCIO.
	<b>PRECAUTION</b>	- RADICION LASER INVISIBLE CUANDO SE ABRE. EVITAR EXPONERSE AL RAYO.
	<b>VARO!</b>	- AAVATTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
	<b>VARNING!</b>	- OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
	<b>ADVARSEL!</b>	- USYNLIG LASER STRÅLING, NÅR DENNE ER ÅBEN. UNDGÅ BESTRÅLING.
	<b>ADVARSEL</b>	- USYNLIG LASERSTRÅLING, NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
<b>注意</b>	- このカバーの内側では不可視レーザー光が放射されています。 レーザー光にさらされないようにしてください。	
		RS5-8169

# Table of Contents

## Part 1 Introduction

<b>Features of the Canon FAX-L300 .....</b>	<b>1-2</b>
Plain Paper Fax Features .....	1-3
Copier Features .....	1-3
Telephone Features .....	1-3
<b>How to Use Your Documentation .....</b>	<b>1-4</b>
Type Conventions .....	1-5
<b>Customer Support .....</b>	<b>1-6</b>
<b>Important Safety Instructions .....</b>	<b>1-7</b>

## Part 2 Getting Started

<b>Setting Up Your Fax .....</b>	<b>2-2</b>
Choosing a Location for Your Fax .....	2-2
Dimensions .....	2-3
<b>Unpacking Your Fax .....</b>	<b>2-4</b>
Do You Have Everything? .....	2-4
Removing Shipping Materials .....	2-6
Replaceable Parts .....	2-6
<b>Assembling Your Fax .....</b>	<b>2-7</b>
<b>Controls, Components, and Connections .....</b>	<b>2-8</b>
From the Front .....	2-8
From the Back .....	2-9
The Handset (Option) .....	2-9
The Operation Panel .....	2-10
Making Connections .....	2-13
Powering Up .....	2-15
<b>The Toner Cartridge .....</b>	<b>2-17</b>
Handling and Storing Cartridges .....	2-17
Installing/Replacing the Toner Cartridge .....	2-18
<b>Loading Recording Paper .....</b>	<b>2-22</b>
<b>Selecting Paper Delivery .....</b>	<b>2-26</b>
Paper Delivery Selector .....	2-26
<b>Storing Information in the Fax .....</b>	<b>2-29</b>
Guidelines for Registering Information .....	2-29
Entering Numbers, Letters, and Symbols .....	2-29
Editing Your Entry .....	2-31
Using the One-Touch Speed Dial/Special Function Buttons .....	2-31
Using the Menu System .....	2-32
Personalising Your Fax .....	2-33
Identifying Your Documents .....	2-33
Entering the Date and Time .....	2-34
Registering Your Fax Number and Name .....	2-35
Setting the Telephone Line Type .....	2-36

## Part 3 Sending Faxes

<b>Document Requirements .....</b>	<b>3-2</b>
Scanning Area .....	3-3
<b>Preparing to Send a Fax .....</b>	<b>3-4</b>
Preparing the Document .....	3-4
Loading the Document .....	3-4
<b>Two Ways to Send a Fax .....</b>	<b>3-6</b>
Adding Pages During Transmission .....	3-8
Cancelling a Transmission .....	3-8
Messages Displayed During Sending .....	3-9
Messages During Memory Sending .....	3-9
Redialling .....	3-10
Manual Redial .....	3-10
Auto Redial (in Memory Sending) .....	3-10
Cancelling Auto Redialling .....	3-10
Setting Up Redialling .....	3-11
<b>Maximizing Image Quality .....</b>	<b>3-13</b>
Resolution .....	3-13
Auto Halftone .....	3-13
Scanning Contrast .....	3-14

## Part 4 Receiving Faxes

<b>Three Ways to Receive a Fax .....</b>	<b>4-2</b>
How to Set the Receiving Mode .....	4-2
Automatic Receiving Options .....	4-3
Setting Up Fax/Telephone Auto-Switch Receiving .....	4-4
What Happens When the FAX/TEL AUTO SW is Selected .....	4-5
Manual Receiving .....	4-8
Using the Fax with an Answering Machine .....	4-9
Adjusting the Fax for Different Types of Answering Machines .....	4-9
Using an Answering Machine .....	4-9
Recording the Outgoing Message .....	4-10
Receiving Documents in Memory .....	4-11
Printing a Fax from Memory .....	4-11
Messages Displayed While Receiving a Fax .....	4-12
How to Cancel an Incoming Fax .....	4-13

## Part 5 Special Features

<b>Speed Dialling .....</b>	<b>5-2</b>
Storing Numbers for One-Touch Speed Dialling .....	5-2
Using One-Touch Speed Dialling .....	5-4
Storing Numbers for Coded Speed Dialling .....	5-5
Using Coded Speed Dialling .....	5-7
Creating Groups for Group Dialling .....	5-8
Using Group Dialling .....	5-10
<b>Adjusting the Transmission Settings .....</b>	<b>5-11</b>
Setting the Transmission Time .....	5-11
Setting the Transmission Type .....	5-12
Sending with a Subaddress and Password .....	5-12
Changing the Long Distance Setting .....	5-14
Setting the Transmission Speed .....	5-15
<b>Sending to More Than One Location .....</b>	<b>5-16</b>
<b>Sending a Fax Later .....</b>	<b>5-17</b>
<b>Special Dialling .....</b>	<b>5-18</b>
Dialling Through a Switchboard .....	5-18
Long Distance Dialling .....	5-18
How to Enter Pauses .....	5-18
Confirming a Dial Tone .....	5-19
<b>Using Memory .....</b>	<b>5-20</b>
Deleting a Stored Fax from Memory .....	5-20
Resending a Document that Encountered an Error Signal .....	5-20
Printing a List of the Documents in Memory .....	5-21
Printing a Stored Fax .....	5-21
Sending a Stored Fax to Another Destination .....	5-22
If the Power Goes Out .....	5-23
During a Power Failure .....	5-23
Memory Backup Function .....	5-23
<b>Making Copies .....</b>	<b>5-24</b>
<b>Polling to Receive Faxes .....</b>	<b>5-25</b>
Polling a Fax Machine .....	5-25
<b>Using Tone Dialling on a Pulse Line .....</b>	<b>5-26</b>
<b>Use of LOCK PHONE Feature .....</b>	<b>5-27</b>
<b>Using Alternative Telephone Networks (UK Only) .....</b>	<b>5-29</b>
Attaching the M Label (UK Only) .....	5-29
Registering an Alternative Telephone Network .....	5-29
Sending with an Alternative Telephone Network .....	5-30
Registering Speed Dialling with the M Button .....	5-31

## Part 6 Activity Reports

<b>Printing Transaction Reports .....</b>	<b>6-2</b>
Activity Management Reports .....	6-2
Transmission Reports .....	6-4
Reception Reports .....	6-6
Memory Clear Reports .....	6-6
<b>Printing Information Registered in the Fax .....</b>	<b>6-7</b>
Printing a List of User's Data .....	6-7
Printing a List of Registered Telephone Numbers .....	6-8
One-Touch Speed Dialling Report 1 .....	6-8
Coded Speed Dialling Report 1 .....	6-8
Group Dialling Report .....	6-9
Printing a Detailed List of One-Touch Speed Dialling Numbers .....	6-9
One-Touch Speed Dialling Report 2 .....	6-10
Printing a Detailed List of Coded Speed Dialling Numbers .....	6-10
Coded Speed Dialling Report 2 .....	6-10

## Part 7 Maintenance

<b>Maintaining the Fax .....</b>	<b>7-2</b>
Cleaning the Fax .....	7-2
Cleaning the Outer Casing .....	7-2
Cleaning the Inside of the Fax .....	7-3
Cleaning the Scanner Components .....	7-4

## Part 8 Troubleshooting

<b>Problems and Solutions .....</b>	<b>8-2</b>
Paper Jams .....	8-2
Document Feed Jams and Misfeeds .....	8-2
Recording Paper Jams .....	8-3
Problems Sending Faxes .....	8-9
The document does not feed properly .....	8-9
Can't send a fax .....	8-9
The faxes you send are spotted or dirty .....	8-9
Can't send using error correction mode (ECM) .....	8-9
Errors frequently occur during sending .....	8-9
Problems Receiving Faxes .....	8-10
The recording paper jams frequently .....	8-10
The fax doesn't automatically switch between phone and fax transmissions .....	8-10
The fax won't receive faxes automatically .....	8-10
The fax won't receive faxes manually .....	8-10
The fax won't receive using ECM .....	8-10
Errors frequently occur during receiving .....	8-10
Problems Printing .....	8-11
Nothing prints .....	8-11

Vertical White Streaks .....	8-12
Miscellaneous Problems .....	8-13
The telephone doesn't work .....	8-13
The phone disconnects while you are talking .....	8-13
Nothing appears in the display .....	8-13
Can't make copies .....	8-13
Can't poll other units .....	8-13
The paper cassette can not be inserted .....	8-13
The toner cartridge can not be removed .....	8-13
<b>Display Messages and Meanings .....</b>	<b>8-14</b>

## **Appendix A    The Menu System**

<b>The Menu System .....</b>	<b>A-2</b>
To Access SPEED DIAL SETUP: .....	A-2
To Access USER SETTINGS: .....	A-2
To Access REPORT SETTINGS: .....	A-4
To Access SEND (TX) SETUP: .....	A-6
To Access RECEIVE (RX) SETUP: .....	A-8
To Access FAX PRINTER SETUP: .....	A-10
To Access SYSTEM SETTINGS: .....	A-12

## **Appendix B    Specifications**

<b>Specifications .....</b>	<b>B-2</b>
-----------------------------	------------

## **Appendix C    Options**

<b>Handset .....</b>	<b>C-2</b>
Package Contents .....	C-2
Attaching the Handset to the Fax .....	C-2
<b>Memory Board .....</b>	<b>C-5</b>
Installing the Memory Board .....	C-6

## **Glossary**

## **Index**

# Introduction

Part


1

This chapter introduces you to your fax. It also explains how to get the most from the documents that come with the FAX-L300, and gives important safety instructions.



# Features of the Canon FAX-L300

Thank you for purchasing the new Canon FAX-L300 Facsimile Machine. The FAX-L300 is a G3 facsimile unit that allows you to send your documents in the shortest time possible at high speed. To gain the most benefit from all the new features, be sure to refer to this manual when you are not sure how to perform a task. The FAX-L300 will help you work more efficiently and expand your work capacity.

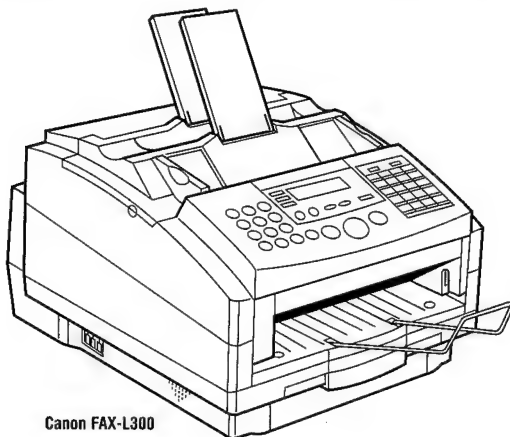

Canon FAX-L300

The FAX-L300 includes the following features:

■ **Excellent print quality**

Quiet, clean laser technology offers 400 × 400 dpi resolution for text and graphics.

■ **Automatic switching between fax and voice calls**

Fax/telephone switching allows you to receive fax messages and normal phone calls on a single line.

■ **Convenient paper handling**

The paper cassette holds up to 250 sheets of plain A4, letter, or legal paper, and the automatic document feeder (ADF) can hold up to 30 A4-size, letter-size or 20 legal-size pages.

■ **Simple maintenance**

When the toner runs out, simply replace the toner cartridge.

## Plain Paper Fax Features

- A transmission speed of six seconds per page\*
- A fax memory that can store approximately 42 received pages, and up to 138 received pages with the optional 2 MB memory board installed\*
- An Error Correction Mode (ECM) that reduces transmission errors
- Sophisticated networking features such as memory broadcasting, polling reception, restricted receiving and delayed transmission
- Automatic dialling methods, including One-Touch Speed Dialling, Coded Speed Dialling and Group Dialling

## Copier Features

- 400 × 400 dpi resolution
- Plain paper copier
- Up to 99 copies

## Telephone Features

- Automatic dialling methods, including One-Touch Speed Dialling and Coded Speed Dialling
- Connection for an answering machine or extension telephone
- On-hook dialling
- Optional handset available

\* Based on the Canon FAX Standard Chart No.1

# How to Use Your Documentation

The fax includes the following documentation to help you use the unit more effectively. Be sure to do the following before you begin setting up your fax:

- Read this chapter to learn about your fax's features, and guidelines for operating your new equipment safely.
- Carefully follow the instructions in Part 2, "Getting Started," to set up your fax properly.
- Use the rest of this user's guide to master your fax's basic operating procedures (such as registering information, making copies, sending and receiving faxes, and using the telephone features), and to learn more about its special features (such as sending to more than one location, and receiving documents in memory). Keep this manual handy so you can refer to it when you have a problem or need particular information about the FAX-L300.
- If you need help getting your fax to operate properly, see Part 8, "Troubleshooting." For the unit's technical specifications, see Appendix B.

If you still have questions about how to use your FAX-L300, feel free to contact your authorised Canon Facsimile Dealer's sales or service representative. They will be glad to answer your questions.

## Type Conventions

This manual uses the following type conventions to emphasize information:



---

Warnings tell you how to avoid actions that could injure you or others nearby.

---



---

Cautions tell you how to avoid actions that could damage your equipment.

---



---

Notes describe helpful hints, operating restrictions, or how to avoid minor difficulties.

---

In addition, this manual uses bold capital letters to show the names of buttons and switches on the fax, such as: **SET**, **FUNCTION**, or **STOP**. Text that appears in the unit's display, or the names of lamps, are shown using capital letters, such as: RECEPTION OK.

## Customer Support

Your Canon fax is designed with the latest technology to provide trouble-free operation. The warranty information at the back of this manual describes Canon's limited warranty for its products. Be sure to read this warranty information.

If you have a problem with your unit, try first to solve it by referring to the information in Part 8, "Troubleshooting." If you still can not solve the problem, contact your local Canon Facsimile Dealer.

If you think your fax needs service, only an authorised Canon Facsimile Service Dealer will do warranty service.



---

You must have your sales receipt for warranty service.

---

# Important Safety Instructions

Read these safety instructions thoroughly before using your fax, and refer to them later if you have any questions.




Except as explained in this manual, do not attempt to service your fax yourself. Never attempt to disassemble the unit: exposed power points inside the unit can cause electrical shock if you touch them. Take your fax to your local authorised Canon Facsimile Service Dealer for all service.

- Follow all warnings and instructions marked on the fax.
- Use the fax only on level, solid, stable surfaces.
- The back and bottom of the fax's cabinet include slots and openings for ventilation. To help keep the fax from overheating (which can cause it to operate abnormally), do not block or cover these openings. Do not place the unit on a bed, sofa, rug, or other similar soft surface, or near a radiator or heat register. Also, do not place the fax in a closet, on shelves, or in a similar structure unless properly ventilated.
- Operate the fax only from the type of power source indicated on the unit's label. If you are not sure of the type of power available, consult your dealer or local power company.
- Make sure that the total amperage used by all products plugged into the wall outlet does not exceed the ampere rating of the outlet's circuit breaker.
- Do not allow anything to rest on the power cord, and do not locate the fax where the cord will be walked on. Make sure the power cord is not knotted or kinked.
- Do not use the fax near water or other liquids. If you spill liquid on or into the unit, unplug it immediately and call your local authorised Canon Facsimile Service Dealer.
- Do not allow small objects (such as pins, paper clips, or staples) to fall into the fax. If something does fall into it, unplug the unit immediately and call your local authorised Canon Facsimile Service Dealer.
- Keep your fax away from direct sunlight as this can damage the unit. If you have to place it near a window, install heavy curtains or blinds.
- Avoid a location subject to extreme temperature fluctuation. Use in a room that is within a temperature range of 10° and 32.5°C.

## Important Safety Instructions

- Do not insert objects into the openings on the fax's cabinet, as they could touch dangerous voltage points or short out parts, possibly resulting in fire or electric shock.
- After you unplug the fax, wait at least five seconds before you turn it back on.
- Never unplug the fax during printing. This can cause the printing unit to jam.
- Always unplug the fax during thunderstorms.
- Always unplug the fax before moving or cleaning it.
- Before you transport your fax, remove its toner cartridge. When you reinstall the unit in its new location, replace the toner cartridge.
- Never lift the fax by its paper cassette – always hold it by the sides.

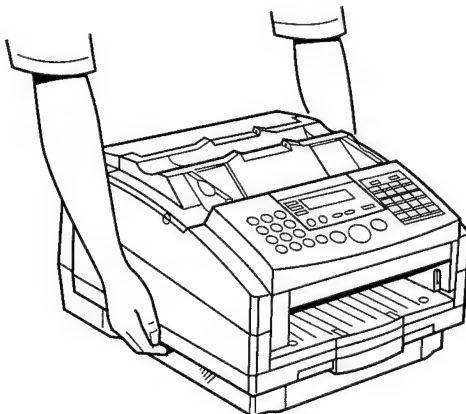

---

Unplug the fax from the wall outlet and refer servicing to your local authorised Canon Facsimile Service Dealer under the following conditions:

- When its power cord or plug is damaged or frayed.
  - If liquid has been spilled on or into the unit.
  - If you notice smoke or unusual noises or odors coming from it.
  - If it does not operate normally when you have followed the operating instructions in this manual. Improper adjustment of other controls may result in damage and may require extensive work by a qualified technician to restore the product to normal operation.
  - If it has been dropped or the cabinet has been damaged.
  - If it begins performing poorly.
-

# Getting Started

Part

2

This chapter tells you how to unpack your Canon FAX-L300 and get it ready to send, receive, and print documents.



# Setting Up Your Fax

## Choosing a Location for Your Fax


Before unpacking your fax, be sure to follow these guidelines to choose the best location for your fax.

- Choose a cool, dry, clean area:
  - Make sure the area is free from dust.
  - Make sure the area's temperature stays within 10 – 32.5°C.
  - Make sure the area's relative humidity stays within 20% – 80%.
  - Avoid direct sunlight. If you have to place the unit near a window, install heavy curtains or blinds.
- Place the fax near a standard 200–240 V AC power outlet and a telephone line with an RJ11-C wall jack.
- Do not plug the fax into a circuit that is also used by appliances such as air conditioners, electric typewriters, or copiers. Such appliances generate electrical noise that can interfere with faxing documents.
- Set the fax on a flat, sturdy, vibration-free surface.
- Do not set up the fax near a television, radio, or heavy equipment that can generate strong electromagnetic fields.
- Do not use or store the fax outdoors.


## Dimensions

Make sure there is enough room around the fax to allow adequate ventilation, and to allow paper to flow freely into and out of the unit. It requires this much space:


Top view

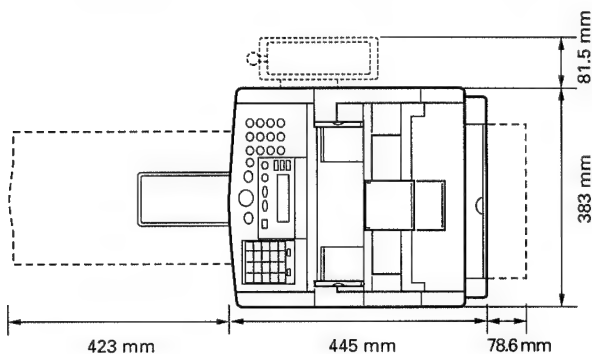

Side view

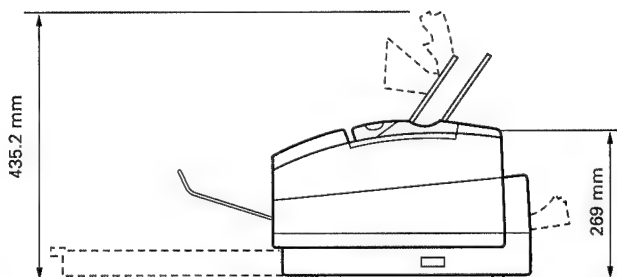

Footprint

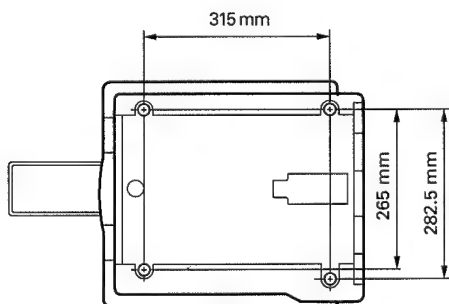


If you need assistance installing your fax, contact your local Canon authorised service representative or your local telephone company.

## Do You Have Everything?

As you unpack the fax, save the carton and packing material in case you want to move or ship the unit in the future.

**1**


Carefully remove all items from the box. You should have someone help by holding the box while you lift the fax and its protective packaging out of the carton.

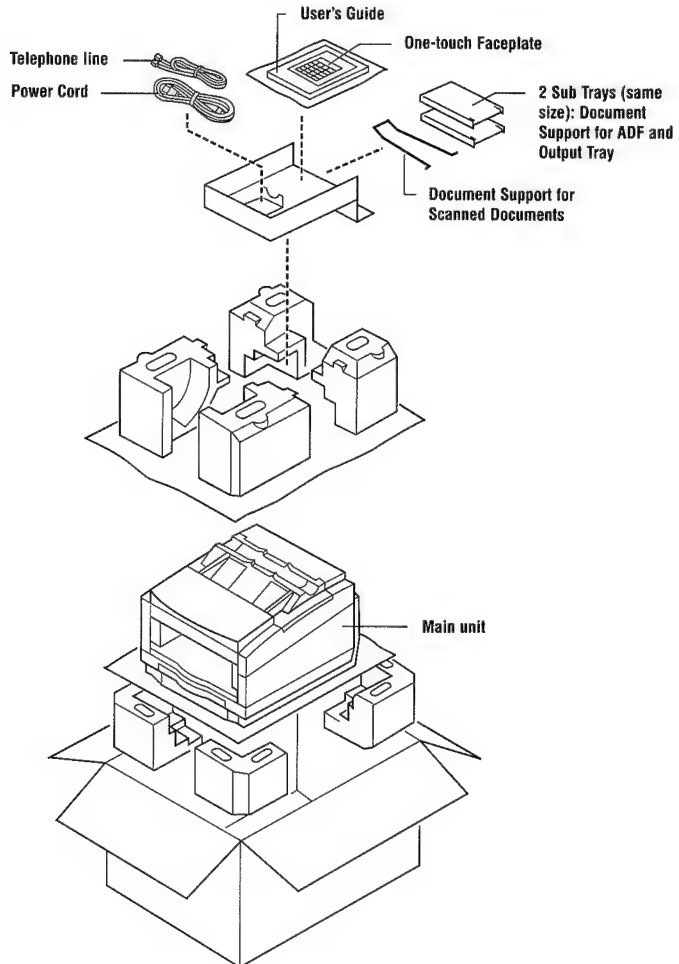


**2**

Make sure you have the following items:

■ **Hardware:**

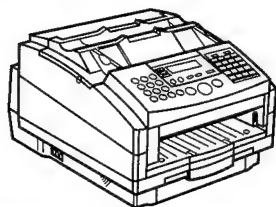

Main FAX-L300 with Paper Cassette

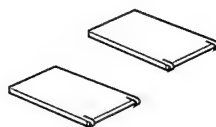

2 Sub Trays (same size)

- Output Tray
- Document Support for ADF



One-touch Faceplate



 
Document Support for  
Scanned Documents




FAX-L300 User's Guide



Telephone Line



Power Cord

 

B.T. Adaptor (UK Only)


■ **Miscellaneous:**

- M label (UK only)


## Removing Shipping Materials

Before setting up your fax, be sure to remove all shipping materials as described below:

- 1 Remove the shipping tapes from the printer door.

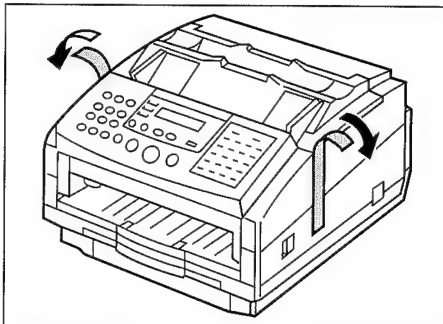

- 2 Remove the protective sheet from inside the operation panel.

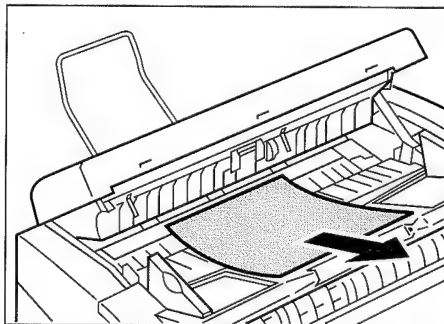

## Replaceable Parts


The only component of the fax that should need regular service or replacement is the FX3 toner cartridge.

# Assembling Your Fax

Attach the following parts to your fax as explained below:



## Output Tray and Document Support for ADF

Insert one tab first into the slot, then the other tab into the other slot. Make sure that the output tray and document support for ADF rest back.

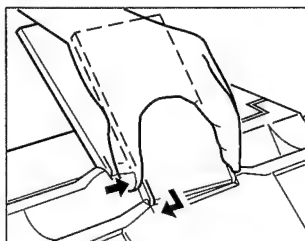


## One-Touch Faceplate

Fit the tabs on the one-touch faceplate into the slots on the fax.

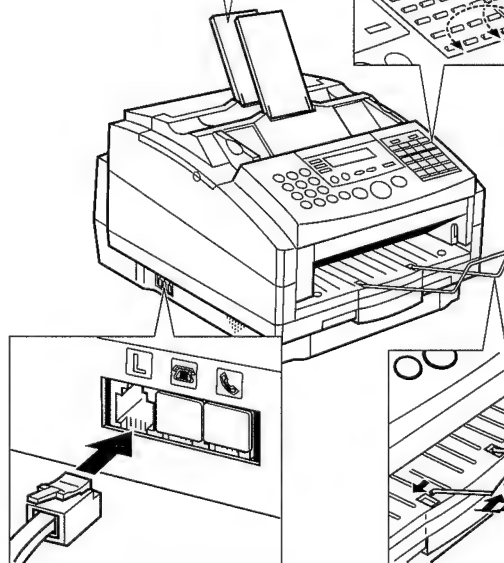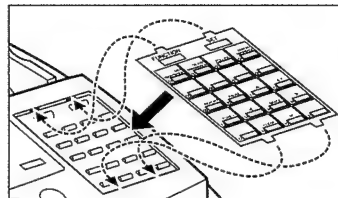


## Telephone Line

Connect the telephone line to the input jack marked .

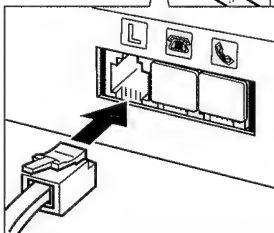

## Document Support for Scanned Documents

Insert the ends of the document support into the slots on the fax. (→p. 2-26)

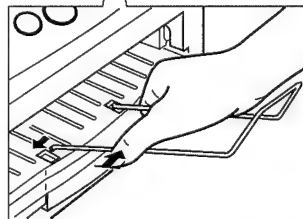


See Appendix C "Options" for attaching the optional handset.


# Controls, Components, and Connections

Now that you've assembled your fax, use the diagrams on the following pages to become familiar with its components and functions.


## From the Front

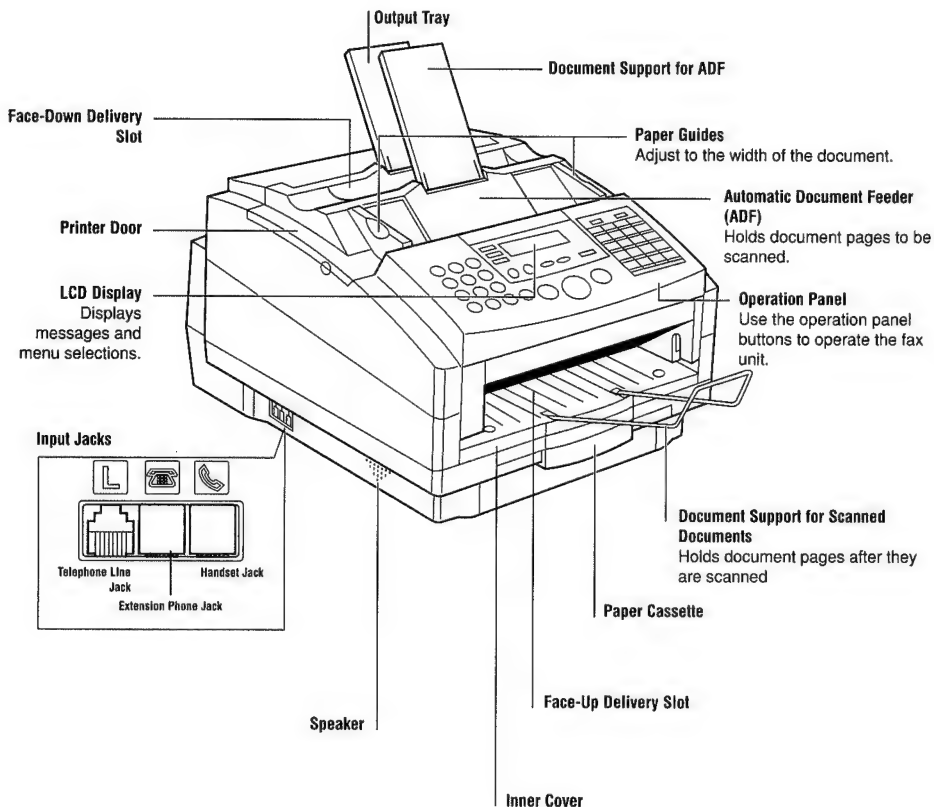

## From the Back

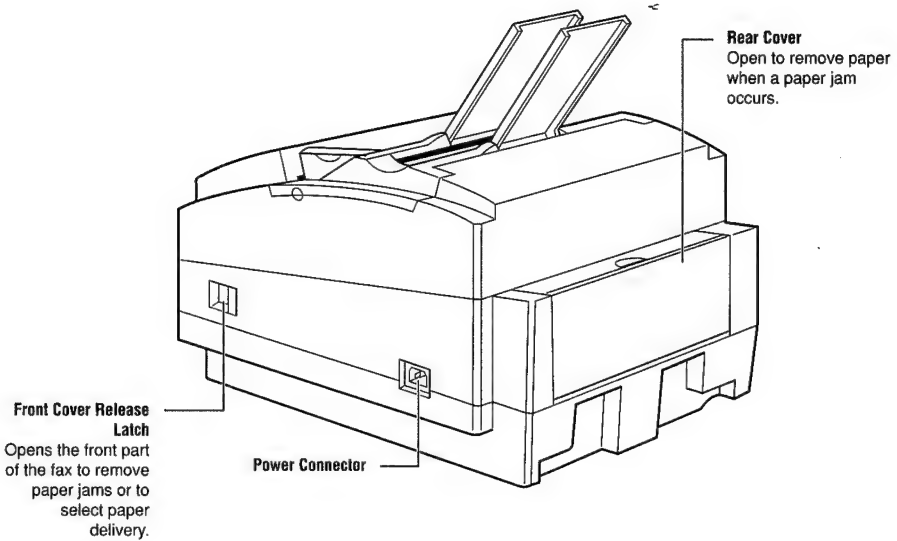


## The Handset (Option)

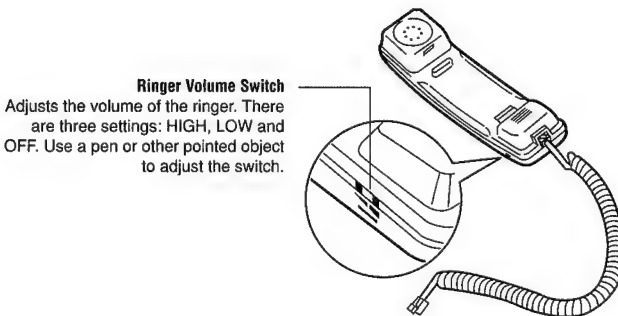



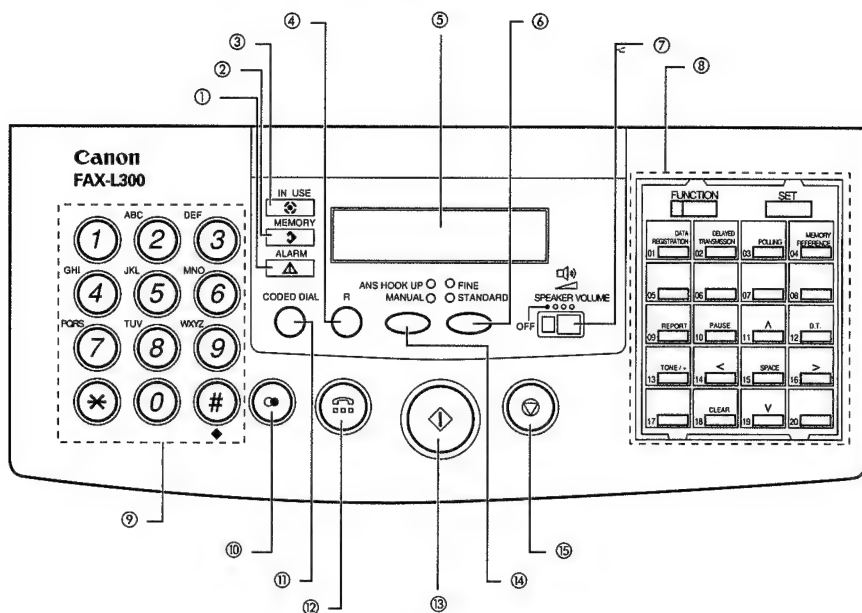


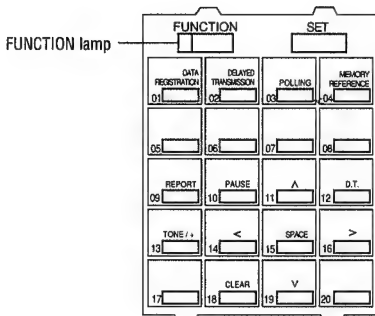


## The Operation Panel



- ① **ALARM lamp**  
Flashes when there is a paper jam, when the fax is out of paper or toner, when there is no cartridge installed, when the loaded paper size is incorrect, or when the printer door or front cover are open.
- ② **MEMORY lamp**  
Lights when a document has been received in memory.
- ③ **IN USE lamp**  
Lights when the telephone line is being used.
- ④ **R button (UK, ECG) I.P. (ECF)**  
Press to dial an outside telephone number when the fax is connected through a switchboard (PBX).
- ⑤ **LCD Display**  
Displays messages and prompts during operation. Displays selections, text, and names when registering information.
- ⑥ **FINE/STANDARD button**  
Use to set resolution for the type of document you want to send.

- ⑦ **SPEAKER VOLUME switch**  
Set the monitor volume of the speaker with this switch.
- ⑧ **One-Touch Speed Dial/Special Function buttons**   
Use these buttons for One-Touch Speed Dialling and to perform special operations.
- ⑨ **Numeric buttons**  
Use the numeric buttons to enter phone numbers when dialling. These buttons also enter text, numbers, and symbols when registering names and numbers.
- ⑩  **(REDIAL) button**  
Press to dial the previous number dialled with numeric buttons.
- ⑪ **CODED DIAL button**  
Press this button and then press a 2-digit number code under which you have previously registered a facsimile or telephone number for Coded Speed Dialling.
- ⑫  **(HOOK) button**  
Press to dial with the numeric buttons when using manual sending.
- ⑬  **(START/COPY) button**  
Press to start sending, receiving, copying, and other operations.
- ⑭ **ANS HOOK UP/MANUAL button**  
When both lamps are off, the fax is set for automatic receiving. Press and light ANS HOOK UP when an answering machine is connected. Press and light MANUAL for manual document receiving.
- ⑮  **(STOP) button**  
Press to cancel sending, receiving, or registering data, or to cancel any other operation.



- **FUNCTION button**

Use to select special functions such as Data Registration and Polling. The FUNCTION lamp must be lit to select these functions.

- **SET button**

Use to accept special function settings and activities.

The following buttons perform special operations when the FUNCTION lamp is on:

- **DATA REGISTRATION button**

Press to start data registration for facsimile numbers, names, and other important settings for sending, receiving and printing.

- **DELAYED TRANSMISSION button**

Press to start registering a time for delayed sending.

- **POLLING button**

Use for polling receiving.

- **MEMORY REFERENCE button**

Use to delete or resend documents stored in memory, or print a document or a list of documents in memory or memory TX.

- **REPORT button**

Use to print activity reports.

- **Search buttons (A, V)**

Use to scroll through selections during data registration.

- **Cursor buttons (<, >)**

Use to move the cursor during data registration.

- **SPACE button**

Press to enter a space between numbers or letters when you register facsimile numbers and names.

- **CLEAR button**

Press during data registration to clear a number or name.

- **TONE/+ button**

Press to use tone dialling, even if your fax is connected through a pulse dial telephone. Press also to enter a + in your facsimile number.

- **PAUSE button**

Press to enter pauses between digits when dialling or registering facsimile numbers.

- **D.T. button**

Press to confirm the dial tone when dialling a telephone number.


## Making Connections

Use the following instructions to connect phone lines to your fax.

### ■ Connecting the Telephone Line

1


Connect the telephone line to the fax jack marked .

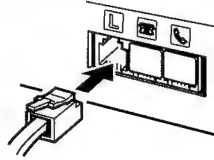


Your telephone line must have an RJ11-C wall jack. Contact your telephone company if you need one installed.

### ■ Connecting a Telephone or Optional Handset



1

If you wish to connect a telephone or optional handset to the fax, remove the cover of the jack marked .

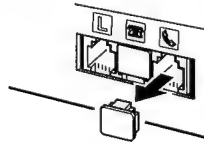

2

Connect the end of the telephone or optional handset cord to the jack marked .

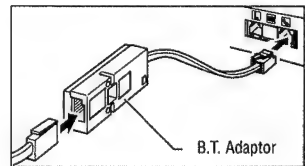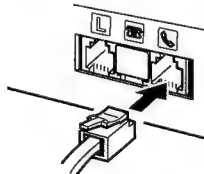


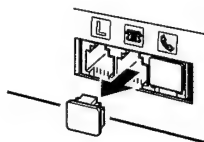
U.K. Only

- Users in the UK only  
When you connect a telephone or optional handset, be sure to connect the B.T. adaptor. Contact Canon UK concerning the B.T. adaptor.


## ■ Connecting an Extension Phone or Answering Machine



1

To connect an extension phone or answering machine to the fax, remove the cover of the jack marked .



2

Connect the end of the extension phone or answering machine cord to the jack marked .

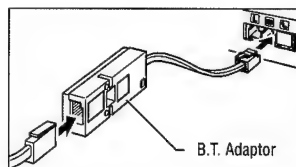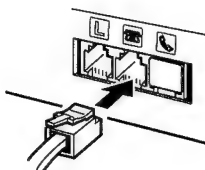

U.K. Only

- Users in the UK only  
When you connect an extension phone or answering machine, be sure to connect the B.T. adaptor. Contact Canon UK concerning the B.T. adaptor.



If the connector does not fit the jack or does not seat properly, contact your local Canon authorised service representative or telephone company to have the correct connector installed.

## Powering Up


Once you finish setting up your fax, you are ready to power it up.



Follow these guidelines when connecting your fax to a power source:

- The fax unit is intended for domestic use only and requires 200–240 V AC. Do not use it outside the country where you purchased it.
- Use only the power cord that came with the unit. Using a longer cord or extension cord can cause the fax to malfunction.
- Unplug the unit by pulling on the plug itself, not on the cord.
- Do not plug the fax into a power outlet shared with an appliance that generates electrical noise, such as an air conditioner, computer, electric typewriter, or copier.
- Make sure nothing is laying on the power cord, and that the cord is located where it can not be walked on or tripped over.
- Do not overload the electrical outlet. Make sure that the total amperage used by all products plugged into the wall outlet does not exceed the ampere rating of the outlet's circuit breaker.

To connect the power cord, plug the cord into the power receptacle on the fax, and then into a 200–240 V AC power outlet.

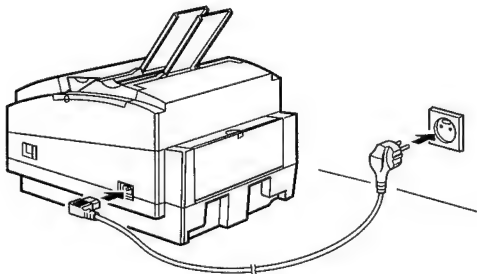

Before plugging in the fax, make sure there are no documents in the automatic document feeder (ADF).



- The fax has no power switch, so its power is on as soon as you plug it in. Once powered up, though, the unit still needs to warm up before you can use it.
- Depending on the number of pages accumulated in the fax memory, it can take up to four minutes for the unit to warm up.

## Controls, Components, and Connections

 
While the fax is warming up, the following message appears in the LCD display:

PLEASE WAIT

The unit is warmed up and ready for use when the date appears in the LCD display:

23/07 '95 FRI 12:34


When connecting the fax for the first time, the date display alternates with the following message:




See "The Toner Cartridge" on the following pages for details on installing the toner cartridge.

# The Toner Cartridge

 
## Handling and Storing Cartridges



 
- Do not expose the cartridge to direct sunlight or bright light for longer than five minutes.



 
- Do not open the drum protective shutter on the cartridge. If the drum surface is exposed to light and damaged, print quality may deteriorate.



 
- Do not stand the cartridge on end, and do not turn it upside down. If toner becomes caked in the cartridge, it may prove impossible to free it even by shaking the cartridge.



 
- Keep the cartridge away from computer screens, disk drives, and floppy disks. The magnet inside the cartridge may harm these items.



 
- Never touch the drum protective shutter. When holding the cartridge avoid touching the drum protective shutter with your hands.



 - Do not store the cartridge in direct sunlight.



- Avoid locations subject to high temperature, high humidity, or rapid changes in temperature. Store the cartridge between 0° and 35°C.

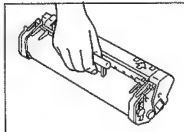

- Hold the cartridge as shown so that your hand is not touching the drum protective shutter.

- Store the cartridge in its protective bag. Do not open the bag until you are ready to install the cartridge in the fax.
- Save the protective bag. You may need to repack and transport the cartridge at a later date.
- Do not store the cartridge in salty air or where there are corrosive gases such as from aerosol sprays.



**DO NOT PLACE THE CARTRIDGE IN FIRE. TONER POWDER IS FLAMMABLE.**



## Installing/Replacing the Toner Cartridge

The fax uses a Canon FX3 toner cartridge. The procedure below explains how to install the cartridge when first using, and how to replace it when the toner runs out.

When the message REPLACE CARTRIDGE appears, the toner in the cartridge may simply be unevenly distributed. Before replacing the cartridge, follow the instructions on page 8-12 to evenly distribute the toner. If after doing this the message remains displayed or the print quality is low, replace the cartridge as described below.




If you try to install other cartridges, you may damage the fax.

**1**  
**2**  
**3**

Remove any documents or printed pages from the fax.


Make sure the unit is plugged in.

Open the printer door by grasping it at both sides and lifting it up.

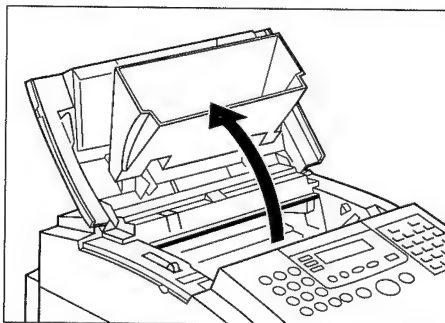

**4**

If replacing a used cartridge, remove the old one as shown.

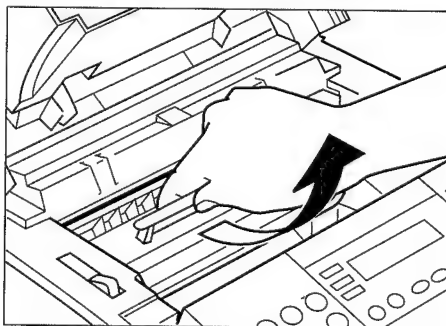


**5** Remove a new toner cartridge from its protective bag.

- Save the protective bag. You may need to repack and transport it in the future.



**6** Gently rock the cartridge from side to side five or six times.

- This evenly distributes the toner inside.

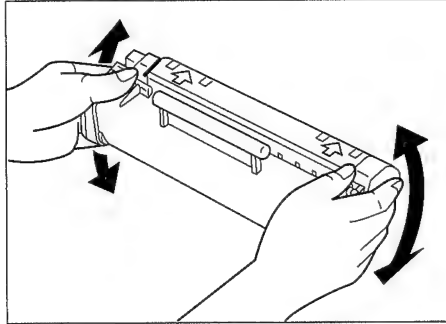

**7** Place the cartridge on a flat, clean surface, and steady it with one hand. Then remove the seal by gently pulling on the plastic tab with your other hand.



- Use a firm, even pull to remove the plastic seal. To avoid breaking the seal, do not jerk on it unevenly.

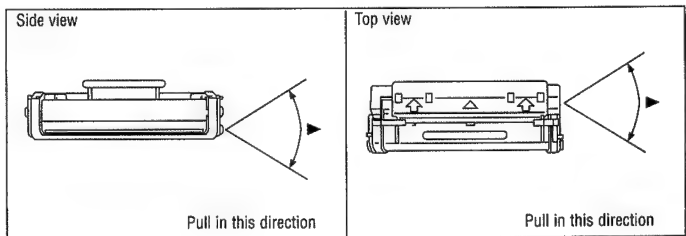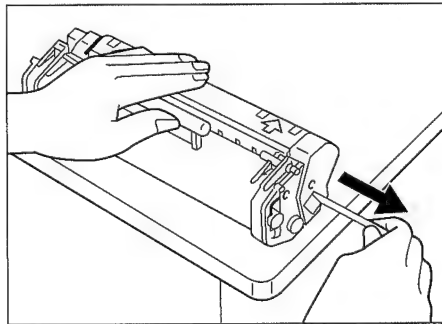


## 8

Hold the cartridge by its handle and insert as follows:

- Make sure the round large tabs on the sides of the cartridge are aligned with the arrow marks (▶, ◀) on the printer. <

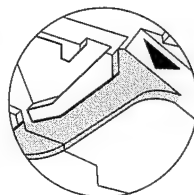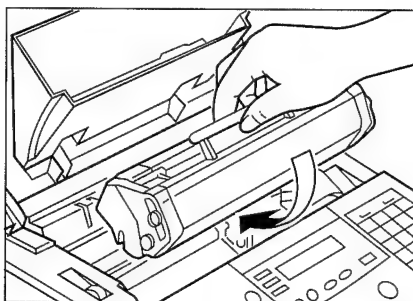


- Align the arrow marks on the cartridge (♣) with the arrow marks on the inside of the fax (▼).

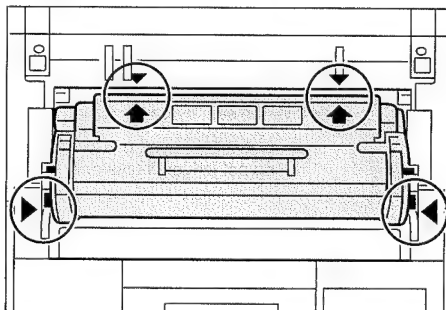

## 9


Gently slide the cartridge down and back and *push firmly until it clicks into position.*

- Make sure the cartridge is set all the way into the unit. Otherwise the fax won't operate properly.

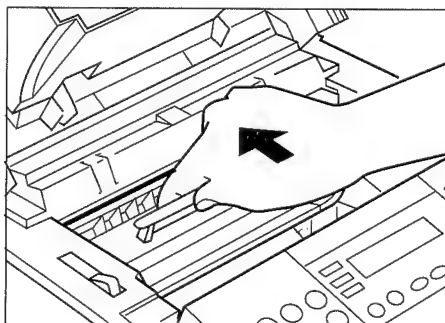

**10**

Gently close the printer door.

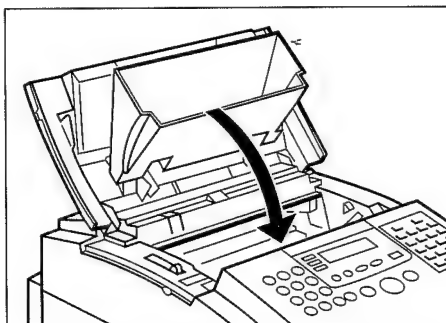

- Never leave the printer door open. Exposure to light can damage the drum surface.
- If you see CHECK PRT/FRNT COVRS in the display even after closing the printer door, the cartridge may not be installed properly. Try installing the cartridge again.
- If you see REPLACE CARTRIDGE in the display, the cartridge may not be installed properly even if the printer door closes completely. Try installing the cartridge again.
- After you have replaced the cartridge, make a copy of a document to check if the fax is printing properly. See p. 5-24, "Making Copies" for details on making a copy.

## Loading Recording Paper

When the message SUPPLY REC. PAPER appears in the display, you need to add paper to the paper cassette. Here are a few tips you should follow when you load paper into the paper cassette.

- Use A4-size paper.
- Use standard 60–90 g/m<sup>2</sup> weight paper.
- Do not use wrinkled or curled paper.



To keep the paper from curling, do not open paper packs until you are ready to use the paper. Store unused paper from opened packs in a cool, dry location in the original packaging.

- Let the paper run out before you refill the cassette. Avoid mixing new paper with paper remaining in the paper cassette.
- Stack the paper so the top and bottom edges and sides are straight and even before placing it in the paper cassette.



The paper cassette supplied with your fax holds up to 250 sheets of standard weight paper or a stack of 2.75 cm high.


To load paper in the paper cassette:



Do not load paper in the cassette when the fax is printing.

1

Lift the paper cassette slightly and pull it out.

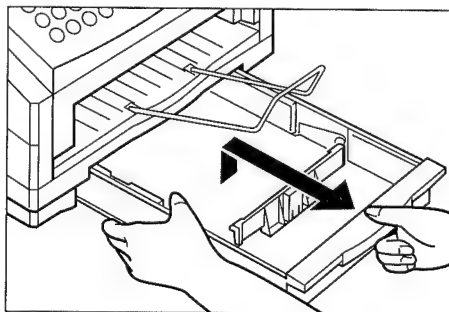




- Remove the paper cassette being careful not to drop it as you pull it out.
- Filling the paper cassette without removing it completely from the fax may cause the paper to misfeed. Be sure to remove the paper cassette completely before loading paper.


**2**

Before loading the paper, stack it so that the leading edge and sides of the paper are even.

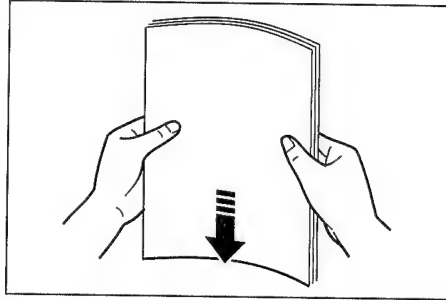


**3**

Load the stack of paper into the paper cassette.

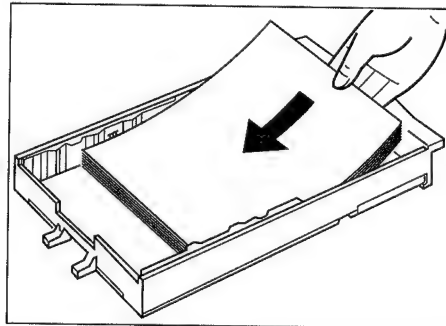



- Make sure the paper stack is not higher than the limit marks (▼▼▼) on the sides of the cassette, and is under the tabs on the paper selector.

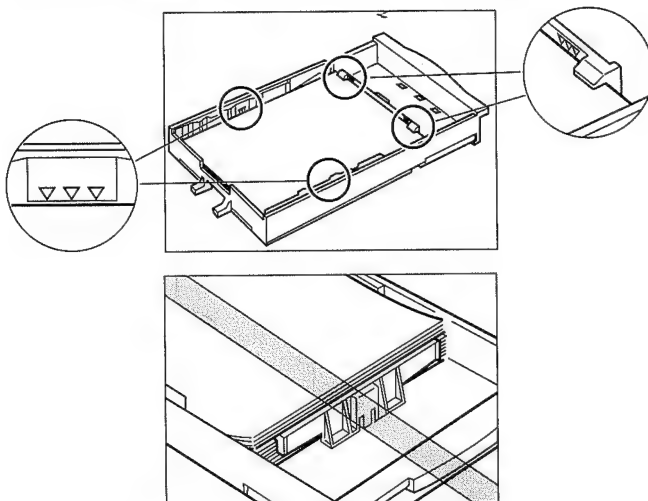


- Check all corners and edges of the paper stack to be sure they are flat and even.
- The cassette can hold about 250 sheets of paper (standard paper).

### 4


Gently insert the paper cassette into the fax until it clicks into position.

- If the paper cassette is not installed correctly, the received document image might shift, or the recording paper might jam.

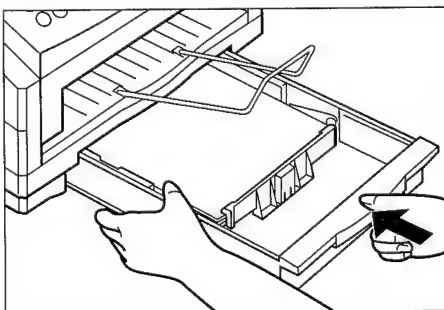



- If you pull out the paper cassette with paper remaining in the cassette, be sure to check the following before reinserting it:
  - Make sure no paper is out of the cassette.

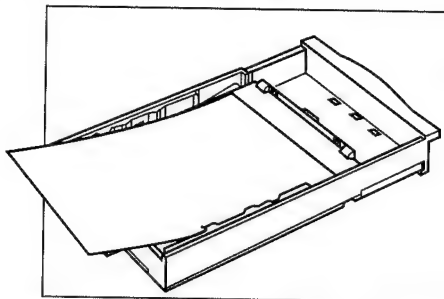

- Make sure there is no loose paper inside the fax unit.
- If you wish to use the Letter or Legal size paper, please contact your authorised Canon Facsimile Service Dealer.
- If the paper cassette jams when you try inserting it in the fax, remove it from the fax and open the printer door. Then close it and try reinserting the paper cassette.



## Selecting Paper Delivery

Received faxes or copies can be delivered through the face-up or face-down slots. Choose paper delivery according to the job the fax is performing.


### Face-Down Delivery (Factory default setting)

Face-down delivery is used in most situations. The printed pages come out through the face-down delivery slot, and the pages are stacked in their correct order. The face-down delivery slot can hold up to about 60 sheets of standard paper.

### Face-Up Delivery

Printed pages come out through the face-up delivery slot in reverse order. Since there is no limit in the number of pages that can be delivered, this setting is convenient when receiving a large number of faxes, when making many copies, or when you plan to be away from your office or home for a long period of time.

Remove the document support for scanned documents and place the fax machine on the edge of a table. This will allow the printed pages to come out without blocking the face-up delivery slot.

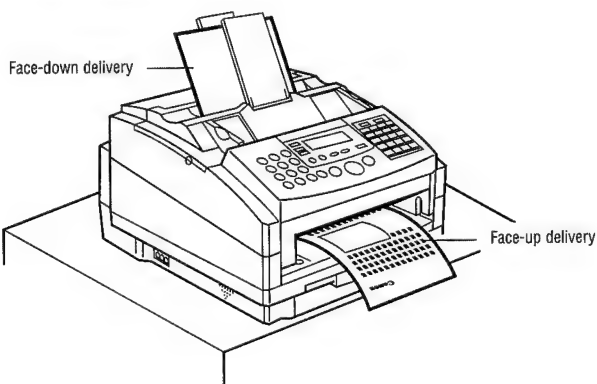



## Paper Delivery Selector

Follow the procedure below to select face-up or face-down delivery with the paper delivery selector:

- 1 Remove any documents or printed paper from the fax.

2


Use the front cover release latch to open the front cover.

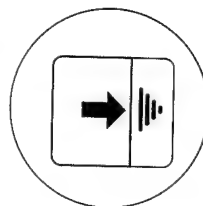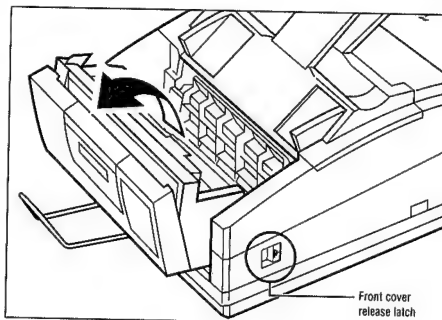

Front cover release latch





Do not open the front cover without pushing the release latch open as this may cause damage to your fax. Be sure to push the front cover release latch to open the front cover.

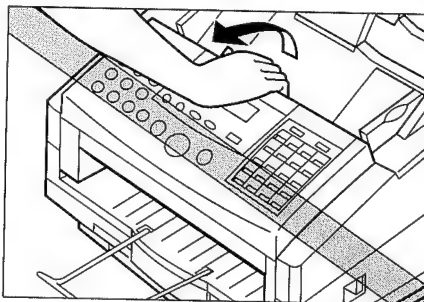


3

Move the paper delivery selector down for face-up delivery (☐), or up for face-down delivery (☑) delivery.

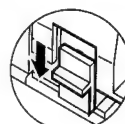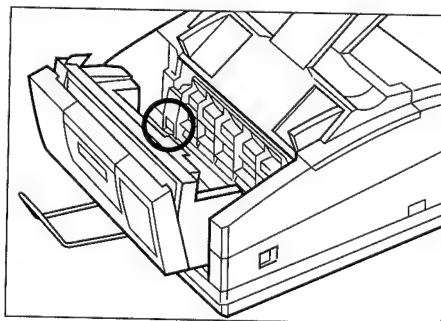

Face-up delivery (☐)

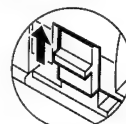

Face-down delivery (☑)

## Selecting Paper Delivery



---

If you select face-up delivery, be sure to remove the document support for scanned documents and to place the fax machine on the edge of a table. This will allow the printed pages to come out without blocking the face-up delivery slot.

---

**4**

---

Gently close the front cover.

---



---

When the face-down slot becomes full OUTPUT TRAY FULL is displayed. Faxes received after this message is displayed will be stored in memory.

---

# Storing Information in the Fax

This section describes how to store information in your FAX-L300. It includes:

- Guidelines for Registering Information
  - Entering numbers, letters, and symbols
  - Editing your entry
  - Using the One-Touch Speed Dial/Special Function buttons
  - Using the menu system
- Personalising Your Fax
  - Identifying your documents
  - Entering the date and time
  - Registering your fax number and name
  - Setting the telephone line type

## ■ Guidelines for Registering Information

Follow these guidelines when you enter information into the fax:

- If you pause and do not make an entry for more than 60 seconds, the fax returns to standby mode. You will then have to start entering the information all over again.
- If you make a mistake while making an entry, you can press **CLEAR** and repeat the entry, or press **⏏ (STOP)** and start again.

## Entering Numbers, Letters, and Symbols

Use the numeric buttons to enter numbers, letters, and symbols.

Button	Uppercase	Lowercase
1		
2	ABCĀĂĄĄĀĀĀĒÇ	abcăâăăăăăăăç
3	DEFĖĒĒĒĒĒ	defðëëëëë
4	GHIĭĭĭĭĭ	ghiïïïïï
5	JKL	jkl
6	MNONŌŌŌŌŌŌ	mnoñøóóóóó
7	PQRS Ꞥ	pqrs Ꞥ
8	TUVŮŮŮŮ	tuvůůůů
9	WXYZÝ	wxyzý
0		
*	→ Uppercase → Lowercase → Number →	
#	- . * # ! " , : ; ^ ` _ = / ' ? \$ @ % & + ( ) [ ] { } < >	

Each button contains a letter group; an upper case set, followed by a lower case set of characters. Every time you press, the character changes to the next one in the group.

## Storing Information in the Fax

To switch between number and letter mode, press \*.

When you are in numeric mode, the number 1 appears in the upper right corner of the display:

UNIT NAME : 1

When you are in letter mode, an A appears in the upper right corner:

UNIT NAME : A

Here is the general method of entering letters:

### ACTION

### DISPLAY

- 1 Make sure the unit is in letter mode (press \* if not).
- 2 Press the button that contains the letter you want. Each button contains upper and lower case characters. When you press the button, the upper case version of the first letter appears in the display.  
If you want to enter a space, press the **SPACE** (Special Function button).

- 3 Press the button repeatedly as needed until the letter you want appears in the display. Then press any other button to enter the letter.

For example, you would enter a lowercase letter k like this:

- 1 Press the \* button until an a appears in the upper right corner and press the 5 button. The letter j appears in the display.



UNIT NAME : a  
j

- 2 Press the 5 button once. The letter k appears in the display.



j → k

UNIT NAME : a  
k


 
 
 

 
- 3 To enter the k, press the button of the next letter you want to enter, or press the right cursor > (located in the One-Touch Dial buttons).



(for example)

UNIT NAME : a  
ka

To enter two letters from the same group, you have to use the right cursor button. For example, you would enter AA like this:

- | ACTION  | DISPLAY  |
|---|--|
| <b>1</b> Press 2 for the first A.<br>  |  |
| <b>2</b> Press the right cursor > (located in the One-Touch Dial buttons) to enter the A and move the cursor one space to the right.<br> |  |
| <b>3</b> Press 2 for the second A.<br>   |  |

### Editing Your Entry


You can also correct characters you've already entered, as follows:

- 1** Use the cursor buttons (<>) to move the cursor to the character you want to change.
- 2** Enter the correct character or a space.

If you want to erase the entire entry and start over, press **CLEAR** (located in the One-Touch Speed Dial/Special Function buttons).

### Using the One-Touch Speed Dial/Special Function Buttons

The One-Touch Speed Dial/Special Function buttons allow you to use speed dialling and special functions such as delayed fax transmissions, printing reports, and polling. The **FUNCTION** button switches the buttons' functions between One-Touch Speed Dialling and Special Functions.

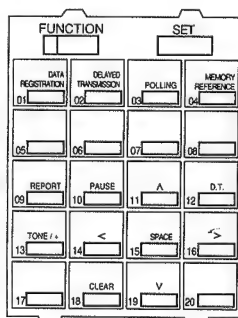

 

 
 




## Using the Menu System

The fax includes a menu system that you use to select fax, telephone, and printer operations, and to enter user information. The system includes these seven items:

- **SPEED DIAL SETUP**  
Lets you register numbers for One-Touch Speed Dialling, Coded Speed Dialling and Group Dialling.
- **USER SETTINGS**  
Lets you enter the information that prints on the faxes you send, to set scanning contrast, and to enter other basic data. Enter these settings when you plug your fax in for the first time; you will rarely need to change them thereafter.
- **REPORT SETTINGS**  
Lets you set the fax to print a report every time you send or receive a fax, and also contains options for printing summary reports.
- **SEND (TX) SETUP**  
Contains items that let you customize how your fax sends documents.
- **RECEIVE (RX) SETUP**  
Allows you to customize how your fax receives documents.
- **FAX PRINTER SETUP**  
Lets you customize how your unit prints documents.
- **SYSTEM SETTINGS**  
Allows you to set the date format, transmission and receive speed, etc.

For details, see Appendix A, "The Menu System."

 You'll use the Special Function buttons to display and select items from the menu system, as follows:

ACTION	DISPLAY
<b>1</b>  	<div style="border: 1px solid black; padding: 5px;">           DATA REGISTRATION            1. SPEED DIAL SETUP         </div>
<b>2</b>  	Use the search buttons to change the menu display. <ul style="list-style-type: none"> <li>• Press  to display the next item in the menu. (The list will wrap from the last item in the list back to the first.)</li> <li>• Press  to display the previous item in the menu. (The list will wrap from the first item in the list back to the last.)</li> </ul>
<b>3</b>  or 	<div style="border: 1px solid black; padding: 5px;">           23/07 '95 FRI 12:34         </div>

## ■ Personalising Your Fax

### Identifying Your Documents

When sending documents, you can have your fax number, your name, and the current date and time printed out by the receiving fax. This information is called your TTI (Transmit Terminal Identification) and appears at the top of the faxed document in small type.

By identifying the documents you send, the receiving party can recognise your fax messages at a glance. Here is a sample document with the identifying information:

The date and time you sent the document	Your Fax/ Telephone number	Your name or company name	The name of the party who is receiving the document	The page number
20/02 '80 TUE 06:54 FAX 31 20 545 8264	CANON EUROPA	+++ CANON-TEST	001	

**THE SLEREKE COMPANY LIMITED**

SAPORS LANE - BOOLE - DORSET - BH 25 8 ER  
TELEPHONE BOOLE (045 13) 51617 - TULAX 12346

Our Ref. 350/PJC/EAC 18th January, 1972.

Dr. P.N. Cundall,  
Mining Surveys Ltd.,  
Holroyd Road,  
Reading,  
Berks.

Dear Pete,

Permit me to introduce you to the facility of facsimile transmission.

In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

*Phil.*

 

 
 
 













F.J. CROSS  
Group Leader - Facsimile Research

The top line also includes the name of the receiving party when you send the document using One-Touch Speed Dialling, Coded Speed Dialling, or Group Dialling (if you registered it).

 

 
 
 

 
 



 









 
 
 



## Entering the Date and Time

Use the following procedure to enter the specific information included on every fax you send:

 

 
 
 






	ACTION	DISPLAY
1	   	<div>USER SETTINGS</div> <div>1.DATE &amp; TIME</div>
2	Press <b>SET</b> and use the numeric buttons to enter the correct date and time. Use the 24-hour system for the time (5:20 p.m. would be 17:20, for example).   Ex:          	<div>DATE &amp; TIME</div> <div>23/07 '95 FRI 12:34</div>
3	Press <b>SET</b> to save the date and time, then press <b>STOP</b> to return to standby mode.  	<div>23/07 '95 FRI 12:34</div>

## Registering Your Fax Number and Name

 - | ACTION   | DISPLAY                                      |
|--|--|
| <b>1</b><br>     | USER SETTINGS<br>1.DATE & TIME               |
| <b>2</b><br>Use the search buttons to display 2. UNIT TELEPHONE #.<br>   | USER SETTINGS<br>2.UNIT TELEPHONE #          |
| <b>3</b><br>Press <b>SET</b> and enter your fax number—up to 20 digits—using the numeric buttons.<br>  Ex:    <br>   <br>    | UNIT TELEPHONE #<br>TEL= 503 555 1212        |
| <b>4</b><br>Press <b>SET</b> to save the fax number, then press <b>SET</b> again to display 3. UNIT NAME.<br>    | USER SETTINGS<br>3.UNIT NAME<br>UNIT NAME :A |
| <b>5</b><br>Enter your name or your company name—up to 24 characters—using the numeric buttons. (→p. 2-29)<br> Ex: CANON INC  | UNIT NAME :A<br>CANON INC                    |
| <b>6</b><br>Press <b>SET</b> to save the name, then press <b>STOP</b> to return to standby mode.<br>   | 23/07 '95 FRI 12:34                          |

### Setting the Telephone Line Type

The FAX-L300 is factory set to work with rotary pulse {EC} touch tone {UK} telephone lines. If you have a touch tone {EC} rotary pulse {UK} line, you will need to change the telephone line setting. Follow the procedure below:

- | ACTION   | DISPLAY  |
|--|--|
| <b>1</b><br>                 | USER SETTINGS<br>1.DATE & TIME   |
| <b>2</b><br>Use the search buttons to display 10. TEL LINE TYPE.<br>   | USER SETTINGS<br>10.TEL LINE TYPE                                      |
| <b>3</b><br>Press <b>SET</b> , then use the search buttons to select TOUCH TONE {EC} ROTARY PULSE {UK}.<br>   | {EC} TEL LINE TYPE<br>TOUCH TONE<br>{UK} TEL LINE TYPE<br>ROTARY PULSE |
| <b>4</b><br>Press <b>SET</b> to save your selection, and press <b>STOP</b> to return to standby mode.<br>    | 23/07 '95 FRI 12:34  |

# Sending Faxes

Part

3

Now that you have installed and set up your Canon FAX-L300, you are ready to begin sending faxes.

This section describes how to enter the user information, the types of documents you can fax, two ways of sending faxes, and how to improve the appearance of your faxes.

# Document Requirements

Before sending a fax, make sure your document meets the fax's paper size, weight, and thickness requirements listed below.

## Weight

One-page document	34.7 <sup>g</sup> – 240 g/m <sup>2</sup>
Multipage document	50 – 90 g/m <sup>2</sup>

## Width

Paper	146.5 – 259 mm
Scanning	208 mm


## Length

103.5 – 366 mm


## Thickness

One-page document	0.06 – 0.3 mm
Multipage document	0.07 – 0.13 mm


To prevent paper jams in the automatic document feeder (ADF), make sure not to use any of the following with the fax:

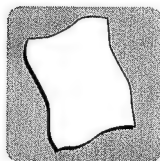


Wrinkled or creased paper

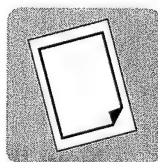


Carbon or carbon back paper

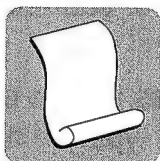


Curled paper

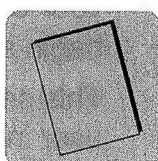

Coated paper

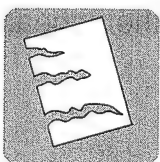

Torn paper

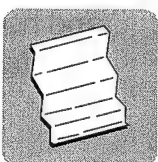


Onion skin or very thin paper



The scanned document may not be delivered properly onto the output tray (document support for scanned documents) if the paper of your document is thin. In this case, contact your Canon Facsimile Dealer.

**Scanning Area**

Also, make sure your document's text and graphics do not extend all the way to the edge of the page. The white area in the illustration below shows the area the fax can scan on an A4-size page.

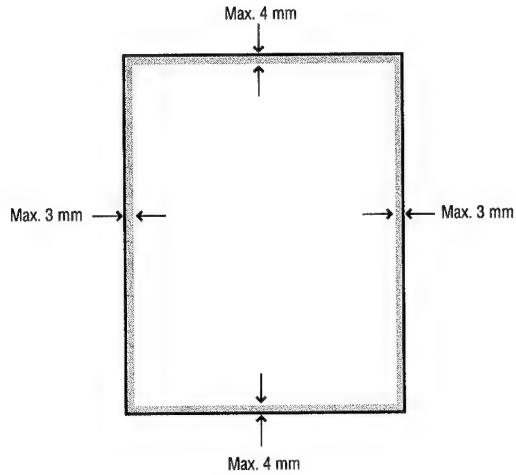

## Preparing the Document


- Remove all paper clips, staples, tape, etc. from the document.
- Let any wet ink, correction fluid, or paste dry completely.
- Make sure all pages are the same size and type.

## Loading the Document

The fax can hold up to 30 A4-size, letter-size or 20 legal-size pages at a time. If your document is longer than this, you can add more pages to the automatic document feeder (ADF) while the fax is being sent (see "Adding Pages During Transmission" later in this section).


**1**

Slide the paper guides to fit the width of the document.

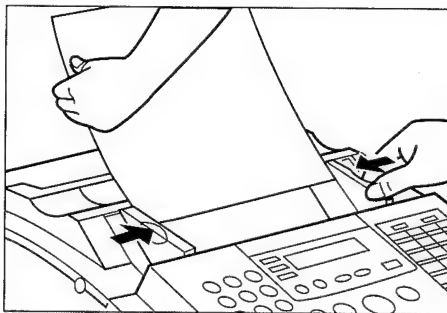


**2**


Place the document face down on the fax, and gently insert the document into the automatic document feeder (ADF) until it stops.

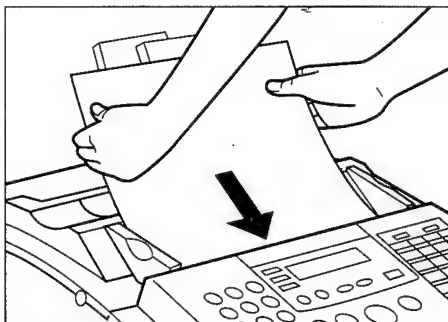

- If you are experiencing difficulty feeding multipage documents, remove the stack and tap it on a flat surface to even the edges.

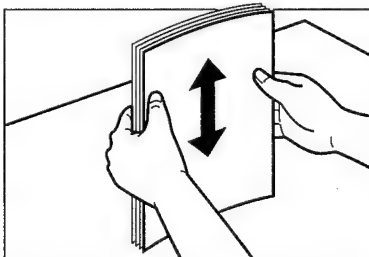

Then insert it into the automatic document feeder (ADF) until it stops.

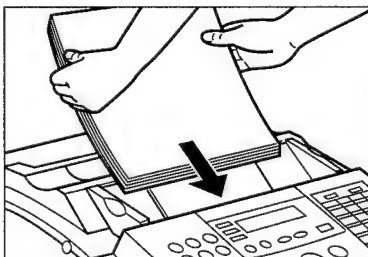

You are now ready to send the fax as described on the following pages.



# Two Ways to Send a Fax

The fax provides two ways of sending faxes:  
Memory Sending and Manual Sending.

## Memory Sending

Memory Sending scans your document into the fax's memory. As soon as it starts scanning if the telephone line is free, the unit will call the other party and will start to transmit the information even as the remaining pages are being scanned.

Memory Sending allows you to load faxes into memory while the fax performs other tasks, such as transmitting a fax. It also lets you send to numbers that are often busy (it automatically redials), or to send to more than one fax number.

1


Load the document into the automatic document feeder (ADF) as described previously.



2

Dial the fax number you're sending to.

Use the numeric buttons, One-Touch Speed Dialling, or Coded Speed Dialling to enter the number.

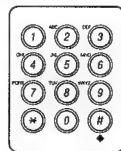

## Manual Sending

Manual Sending dials the number, makes the connection, and sends the fax immediately. It also lets you talk to the other party before sending the document. This is useful when the other party uses a single phone line for both voice and fax transmissions. You must use the handset for Manual Sending.

1

Load the document into the automatic document feeder (ADF) as described previously.




2

Press **HOOK**. This activates the speaker (you should hear the dial tone) and lights the IN USE lamp.



**3**

Check the display to make sure the number is correct. If not, press  (**STOP**) and begin again.

TEL= 1 503 555 1212


**4**

Send the fax by pressing **START/COPY**.



As the document is scanned into memory, a transaction number appears in the display: this number identifies the document and can be used to delete it from memory (see "Deleting a Stored Fax from Memory" in Part 5 for details).

**3**

Dial the fax number you're sending to. Use the numeric buttons, One-Touch Speed Dialling, or Coded Speed Dialling to enter the number. If you make a mistake, press  (**STOP**) and start again from step 2.

**4**

When you hear the other party answer, pick up the handset and tell them to get ready to receive a fax by pressing the start button on their fax machine. (You will hear a fax sound over the handset when they do this.)

**5**

Press **START/COPY** and hang up. The fax begins sending your document.



## Adding Pages During Transmission

Wait until the last page starts to feed into the fax. When all but about 2.5 cm of the last page is scanned, place the new page on top of the last page and gently feed it in.

## Cancelling a Transmission

### ACTION

### DISPLAY

1

Press **STOP**.



- If you're using memory sending, this message shown below appears. Go to step 2.

CANCEL DURING TX/RX? YES=(*) NO=(#)
--

- If you're using manual sending, the transmission is cancelled immediately.


2

Press **\*** to cancel the transmission, or press **#** to complete the transmission.



or



If you press the  (**STOP**) button while the fax is waiting to redial, the display will be deleted, but the transmission will not be cancelled. Follow the procedure on page 5-20, "Deleting a Stored Fax from Memory" to cancel the transmission.

## Messages Displayed During Sending

When the fax sends a document, the following messages are displayed. These messages allow you to see the progress of the transmission and know when it has been completed.

### Messages during memory sending

Message displayed when the fax is scanning document to be sent.

		Transaction No.
TRANSMIT	0040	
SCANNING DOC.	P.001	
		Page No.

During transmission, the following are displayed alternately:

- Condition (CALLING, TRANSMIT, etc.)
- Dialed number
- Other party's name
- Transmission mode (G3)
- ECM TX (in ECM)
- TX/RX No.
- Page No.

When the document has been transmitted, the following are displayed for about ten seconds before the fax returns to standby mode:

- Transmission result (TRANSMITTING OK or an error message)
- TX/RX No.

The fax will print a transmission report (TX Report) if it has been set to do so.  
(→p. 6-4, A-5)

## Redialling

### Manual Redial

To redial the last number dialled with the numeric buttons, press the **(REDIAL)** button.

To cancel manual redialling, simply press the **(STOP)** button.

 
### Auto Redial (in Memory Sending)

If the line is busy or there is no answer, the fax waits two minutes and then dials the same number.


When the fax is waiting to redial, the following messages are displayed:



These messages are displayed once the fax has redialled the number and is calling:



Auto redialling occurs even if the fax's memory becomes full when the document is being scanned. In this case, the following messages are displayed:

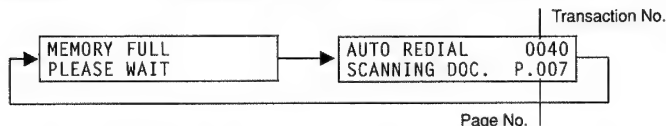

If after two attempts the line is still busy or there is no answer, the fax stops redialling, sending stops, and an activity report is printed to remind you that the transmission was not completed.

### Cancelling Auto Redialling

Auto redialling can not be cancelled with the **(STOP)** button while the fax is waiting to redial. To cancel, do one of the following:

- Wait until dialling begins and then press the **(STOP)** button.
- Delete the document from memory. See page 5-20, "Deleting a Stored Fax from Memory" for details.



The default settings for the auto redial feature are:

- Redials two times.
- Waits two minutes before redialling.
- If an error occurs during transmission, the fax resends the first page of the document and the error page.

You can change these settings by following the procedure on the next page.

## Setting Up Redialling

You can set up the following for automatic redialling:

 
- The number of times the fax attempts redialling
- The time interval between redialling attempts
- How the fax handles redialling when a transmission error occurs

Follow the procedure below to adjust these settings.

	ACTION	DISPLAY
<b>1</b>	<div> <div>FUNCTION</div> <div>DATA</div> <div>REGISTRATION</div> <div>REGISTRATION</div> </div>	<div>DATA REGISTRATION</div> <div>1.SPEED DIAL SETUP</div>
<b>2</b>	<div>Use the search buttons to display 4. SEND (TX) SETUP.</div> <div> <div>^</div> <div>V</div> </div>	<div>DATA REGISTRATION</div> <div>4.SEND (TX) SETUP</div>
<b>3</b>	<div>Press <b>SET</b>, then use the search buttons to display 3. AUTO REDIAL.</div> <div> <div>SET</div> <div>^</div> <div>V</div> </div>	<div>SEND (TX) SETUP</div> <div>3.AUTO REDIAL</div>
<b>4</b>	<div>Press <b>SET</b>, then use the search buttons to display ON.</div> <div> <div>SET</div> <div>^</div> <div>V</div> </div>	<div>AUTO REDIAL</div> <div>ON</div>
<b>5</b>	<div>Press <b>SET</b>, then use the numeric buttons to enter the number of times you want the fax to redial (1 to 15 times*).</div> <div> <div>SET</div> <div>1 2 3</div> <div>4 5 6</div> <div>7 8 9</div> <div>0</div> </div>	<div>REDIAL TIMES</div> <div>02TIMES</div>
	* Up to 3 times in the UK.	
<b>6</b>	<div>Press <b>SET</b>, then use the numeric buttons to enter the time interval during rediallings (02 to 99 minutes).</div> <div> <div>SET</div> <div>1 2 3</div> <div>4 5 6</div> <div>7 8 9</div> <div>0</div> </div>	<div>REDIAL INTERVAL</div> <div>02MIN.</div>

**7**

Press **SET**, then use the search buttons to select whether or not the fax redials when a transmission error occurs.



Select **ON** to redial when a transmission error occurs.

TX ERROR RESEND ON

Select **OFF** to cancel redialling when a transmission error occurs.

TX ERROR RESEND OFF

**8**

Press **SET**, then if you selected **ON** in step 7, use the search buttons to select which pages are sent when an error occurs.

Resends the first page of the document and the pages after the error occurred.

RESEND TX FROM  
ERROR & 1ST PG

Resends only the pages after the error occurred.

 
RESEND TX FROM  
ERROR PAGE

Resends all the document pages.

RESEND TX FROM  
ALL PAGES

**9**

Press **SET** to save your selection, then **STOP** to return to standby.



23/07 '95 FRI 12:34

# Maximizing Image Quality

Canon's Ultra High Quality (UHQ) and auto-half-tone imaging technology allows you to send and receive faxes that have print quality very close to that of the originals.

## Resolution

The fax has two resolutions:

### ■ STANDARD

This is the best setting for normal printed or typewritten text. It allows the fastest document transmission. To use it, press the resolution button (below the FINE and STANDARD indicator lamps) until the STANDARD lamp lights.

### ■ FINE

Fine provides twice the resolution of Standard, and is a good setting for documents with small text. To use it, press the resolution button until the FINE lamp lights.









When making copies, the fax automatically adjusts to FINE.

## Auto Half-tone

This setting tells the fax whether the fax includes halftone images, or is composed only of black text on a white background.

When Auto Half-tone is ON the fax automatically adjusts to accurately reproduce documents that contain halftone images (such as photographs). Set to OFF when you send faxes containing only black text on a white background.


To change the Auto Half-tone setting:

ACTION	DISPLAY
<b>1</b> 	
<b>2</b> Use the search buttons to display 5. AUTO HALFTONE. 	
<b>3</b> Press <b>SET</b> to display the current type of document setting. 	

 


- 4** Use the search buttons to display the setting you want.



You can cancel the procedure by pressing  (**STOP**) any time before pressing **SET** in step 5. This returns the fax to standby mode without saving the changes.

- 5** Press **SET** to save your selection, and press **STOP** to return to standby mode.



23/07 '95 FRI 12:34



When making copies, the fax automatically adjusts to Auto Halftone ON.


## Scanning Contrast

The fax can send faxes using any of three contrast settings: Dark, Standard, and Light. **STANDARD** is the default, and is fine for most documents. If the print on your document is very light, use **DARKER**; if the print is dark, use **LIGHTER**.

To change the Scanning Contrast setting:

### ACTION

### DISPLAY

- 1**
- 
- USER SETTINGS  
1.DATE & TIME

- 2** Use the search buttons to display 6. SCANNING CONTRAST.



USER SETTINGS  
6.SCANNING CONTRAST

 
- 3** Press **SET** to display the current scanning contrast setting.



SCANNING CONTRAST  
STANDARD

- 4** Use the search buttons to display the scanning contrast you want.



You can cancel and return to standby mode by pressing  (**STOP**) any time before pressing **SET** in step 5.

- 5** Press **SET** to save your selection, and press **STOP** to return to standby mode.



23/07 '95 FRI 12:34

# Receiving Faxes

Part

4

This chapter describes how to set up the Canon FAX-L300 to receive faxes in a way that best suits your needs.

# Three Ways to Receive a Fax

The fax can receive documents by any of three methods, each of which can be further customized to suit your needs.

## ■ Automatic receiving

Use automatic receiving when you want your fax to automatically receive faxes without any intervention from you. In this mode, the fax automatically receives calls from fax machines, and can ring or not (as you select) if it receives a telephone call.

## ■ Answering machine receiving

Use this mode if you have a combined fax/phone line with an answering machine, and want to leave it unattended. When your answering machine is set to answer, this mode receives fax calls, and routes telephone calls to the answering machine.

## ■ Manual receiving

For manual receiving, you need to have the optional handset installed or an extension telephone connected.

Use manual receiving when you want to answer every call yourself. In this mode the fax rings for every incoming call, whether from a fax machine or a telephone. You can also use extension telephones with this mode.

## How to Set the Receiving Mode

The fax is set for automatic receiving when you first plug it in. You can change to either of the other two receiving modes by pressing the button below the ANS HOOK UP and MANUAL indicator lamps: the lamps show which mode is active.

- If both lamps are off, the fax is set for automatic receiving. To adjust the automatic receiving options, turn to "Automatic Receiving Options," below.
- If the MANUAL lamp is on, the fax is set for manual receiving. For more information on manual receiving, see "Manual Receiving," below.
- If the ANS HOOK UP lamp is on, the fax is set for answering machine receiving. See "Using the Fax with an Answering Machine" below for more information.



---

Answering machine receiving mode will not work properly if you do not have an answering machine hooked up to your fax.

---

## Automatic Receiving Options

The fax's automatic receiving mode can operate two ways:

### ■ Fax-only receiving

Fax-only receiving answers all calls, but accepts only those from fax machines and disconnects all others. (This is the default setting.)

### ■ Fax/telephone auto-switch receiving

Use fax/telephone auto-switch receiving when you have a combined fax/telephone line. If the call is from a fax, your fax receives the document transmission without ringing. If the call is from a telephone, your fax rings to alert you to pick up the handset to answer the call.

You can choose one of these automatic receiving options as follows:

ACTION	DISPLAY
<b>1</b> <div> <div>FUNCTION</div> <div>DATA</div> <div>REGISTRATION</div> <div>REGISTRATION</div> </div>	<div>DATA REGISTRATION</div> <div>1.SPEED DIAL SETUP</div>
<b>2</b> Use the search buttons to display 5. RECEIVE (RX) SETUP. <div> <div>^</div> <div>V</div> <div></div> <div></div> </div>	<div>DATA REGISTRATION</div> <div>5.RECEIVE(RX) SETUP</div>
<b>3</b> Press <b>SET</b> , then use the search buttons to display 2. RX MODE. <div> <div>SET</div> <div>^</div> <div>V</div> <div></div> <div></div> </div>	<div>RECEIVE (RX) SETUP</div> <div>2.RX MODE</div>
<b>4</b> Press <b>SET</b> , then use the search buttons to display the receiving mode you want. <div> <div>SET</div> <div>^</div> <div>V</div> <div></div> <div></div> </div> <ul style="list-style-type: none"> <li>Fax only receiving—AUTO FAX RX:  <div> <div>RX MODE</div> <div>AUTO FAX RX</div> </div> </li> <li>Fax/telephone auto-switch receiving—FAX/TEL AUTO SW:  <div> <div>RX MODE</div> <div>FAX/TEL AUTO SW</div> </div> </li> </ul>	
<b>5</b> Press <b>SET</b> to set additional options, or press <b>STOP</b> to return to standby mode. See "Setting Up Fax/Telephone Auto-Switch Receiving" below for details. <div> <div>SET</div> <div>or</div> <div> </div> </div>	

### Setting Up Fax/Telephone Auto-Switch Receiving

When you select the FAX/TEL AUTO SW, you can also set these options.

- **F/T RING TIME**

When your fax is set to receive both fax and telephone calls automatically, it rings to alert you to pick up the handset if the call is from a person. If you do not pick up the handset within a certain amount of time, the fax stops ringing. Use this option to change the time from 10 to 45 seconds. The default is 15.

- **F/T SWITCH ACTION**

Not all fax machines are capable of sending a FAX TONE (the CNG tone that warns the receiving fax machine that a fax is coming). For those cases the fax may think that the call coming in is a voice call and rings to alert you of the call (the amount of time it is going to ring is determined by the F/T Ring Time setting above). If you do not answer the call, one of two things can happen:

1. If you set the F/T SWITCH ACTION to RECEIVE, the fax will switch to fax receive mode automatically at that point and start to receive the document. If no document comes in, it disconnects the call after approximately 35 seconds. The factory programmed default is RECEIVE.
2. If you set the F/T SWITCH ACTION to DISCONNECT, the fax will disconnect the phone call immediately freeing up your phone line at this point.


- **OUTGOING MESSAGE**

The outgoing message feature allows you to send an electronic voice message to the other party's fax when you receive a call: *"You are connected. Please hold."*

With a choice of 12 languages, you can select two languages if you want to send the message in two languages. Your choices for the message are: English, French, Spanish, German, Italian, Dutch, Finnish, Portuguese, Norwegian, Swedish, Danish and Greek.

\* Users in the UK and Switzerland can not set the outgoing message to OFF.

# What Happens When the FAX/TEL AUTO SW is Selected

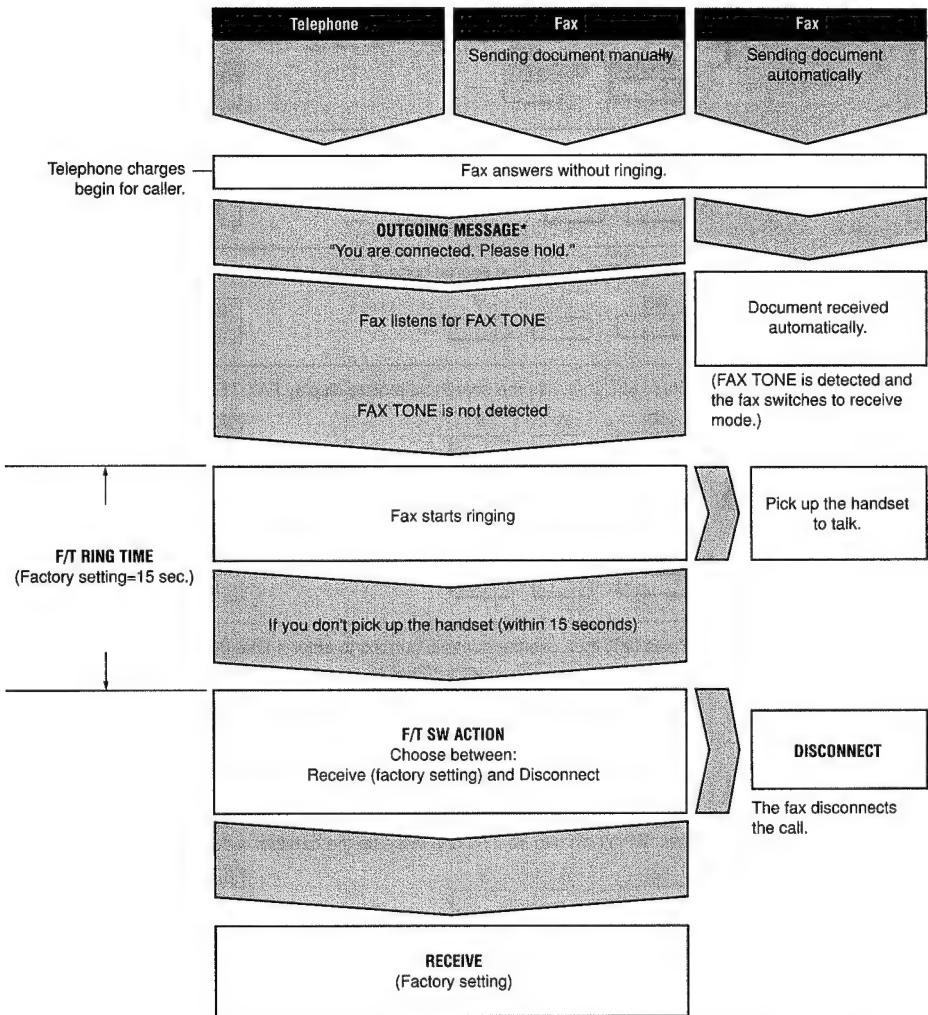


 

 
 
 
 
 


 
 
 
 




 


 

 
Not all fax machines are capable of sending a FAX TONE. For those cases if you set the F/T SW ACTION to RECEIVE, the fax switches to receive mode automatically and starts receiving the document. If no document comes in it disconnects after approximately 35 seconds.


\* When you set the outgoing message to ON. (Users in the UK and Switzerland can not set the outgoing message to OFF.)

You select these options in the RX MODE submenu of the RECEIVE (RX) SETUP menu when the FAX/TEL AUTO SW is selected. See below to change the settings.

## Three Ways to Receive a Fax

 
Set these options as follows:

- | ACTION  | DISPLAY   |
|---|---|
| <b>1</b><br>    | DATA REGISTRATION<br>1.SPEED DIAL SETUP   |
| <b>2</b><br>Use the search buttons to display 5. RECEIVE (RX) SETUP.<br>    | DATA REGISTRATION<br>5.RECEIVE(RX) SETUP  |
| <b>3</b><br>Press <b>SET</b> , then use the search buttons to display 2. RX MODE.<br>    | RECEIVE (RX) SETUP<br>2.RX MODE   |
| <b>4</b><br>Press <b>SET</b> , then use the search buttons to display FAX/TEL AUTO SW.<br>     | RX MODE<br>FAX/TEL AUTO SW  |
| <b>5</b><br>Press <b>SET</b> , then use the search buttons to display 1. F/T RING TIME: this is how many seconds the fax rings while waiting for someone to pick up the handset.<br>     | FAX/TEL AUTO SW<br>1.F/T RING TIME  |
| <b>6</b><br>Press <b>SET</b> , then use the numeric buttons to enter a time from 10 to 45 seconds.<br>  Ex:    | F/T RING TIME<br>015SEC   |
| <b>7</b><br>Press <b>SET</b> , then use the search buttons to display 2. F/T SWITCH ACTION: this tells the fax what to do if no one picks up the handset within the specified ring time.<br>     | FAX/TEL AUTO SW<br>2.F/T SWITCH ACTION  |
| <b>8</b><br>Press <b>SET</b> , then use the search buttons to display the setting you want.<br>    | <ul style="list-style-type: none"> <li>Choose RECEIVE to receive the call: F/T SWITCH ACTION<br/>RECEIVE</li> <li>Choose DISCONNECT to disconnect the call: F/T SWITCH ACTION<br/>DISCONNECT</li> </ul> |


**9**Press **SET**, then use the search buttons to display 3. OUTGOING MESSAGE.

FAX/TEL AUTO SW 3.OUTGOING MESSAGE
---------------------------------------

 - This allows you to send an electronic voice message to the other party's fax when you receive a call: "You are connected. Please hold."
- \* Users in the UK and Switzerland can not set the outgoing message to off. After completing this step, go to step 11.


**10**Press **SET**, then use the search buttons to display ON.

 OUTGOING MESSAGE ON
------------------------

**11**Press **SET**, then use the search buttons to select the first language of the message.

OGM 1 GERMAN
-----------------

 - With a choice of 12 languages, you can select one or two languages for the message. Your choices are: English, French, Spanish, German, Italian, Dutch, Finnish, Portuguese, Norwegian, Swedish, Danish, and Greek.

**12**Press **SET**. If you want to select a second language for the message, use the search buttons to select it.

OGM 2 ITALIAN
------------------

**13**Press **SET**, then press **STOP** to return to standby mode.

23/07 '95 FRI 12:34
---------------------



## Manual Receiving

For manual receiving, you need to have the optional handset installed or an extension telephone connected.

When the fax is set for manual receiving, it rings every time it receives a call, whether the call is from a telephone or a fax machine.

When the optional handset or extension telephone rings:

### 1

Pick up the handset:

- If you hear a slow, high-pitched beep, you are receiving a fax call. Go to the next step.
- If you hear someone on the line, you are receiving a regular phone call. If the caller later wants to send a fax, go to step 2 when you hear the slow beep.

### 2

Optional handset: Press **START/COPY** on the operation panel to start receiving the fax.

Extension telephone: Enter 25 using the telephone's keypad. This is the remote receiving ID.

- While the fax is coming in, the display shows a transaction number (a unique number used to identify the fax) and the sender's name. See "Messages Displayed While Receiving a Fax" below, and "Display Messages and Meanings" in Part 8.
- See Appendix A, "The Menu System" for instructions on how to change the remote receiving ID or turn it off. (→p. A-9)

### 3

Replace the handset in its cradle.

If the fax's handset is not properly seated, the off-hook alarm will sound and the fax will not be received. The alarm stops when the handset is placed correctly in its cradle.

## Using the Fax with an Answering Machine

1

Press the **ANS HOOK UP/MANUAL** button until the **ANS HOOK UP** lamp goes on.

ANS HOOK UP   
MANUAL 



2

Set your answering machine to answer.

- The fax allows the answering machine to answer, then listens for a fax tone, and switches to receive mode automatically if it detects the tone.
- The fax also listens for 6 seconds of silence, also an indication that a fax is coming in. After 6 seconds of silence, the fax automatically switches to receive mode.
- If the fax runs out of paper or toner, it receives the document and stores it in memory. To print out documents in memory, see page 5-21.

3

When not in use, turn the answering machine off and switch the mode to Manual receive (MANUAL lamp on) or Automatic receive (both the ANS HOOK UP and MANUAL lamps off) using the **ANS HOOK UP/MANUAL** button.

### Adjusting the Fax for Different Types of Answering Machines

Some answering machines listen for a pause and disconnect the line after a certain period of silence. When used with an answering machine, your fax also listens for a pause to determine if a fax is being received.

If your answering machine disconnects before the fax has a chance to switch to receive mode, the caller may not be able to send a fax on the same call.

If you experience this problem, adjust the **ANS/FAX SW TIME** setting in the **RECEIVE (RX) SETUP**, (→p. A-8). Adjust so that the required time for the fax to switch occurs prior to the time when your answering machine disconnects automatically.

### Using an Answering Machine

Connecting an answering machine to the fax allows you to receive not only documents sent from other fax machines, but also messages from people calling when you are out of the office. When the fax is connected to an answering machine, all incoming calls are first directed to the answering machine. If the call is from a person, the caller can leave a message. If the call is from a fax machine, your fax receives the document automatically. See Part 2, "Making Connections" for instruction on how to connect the answering machine to the fax.



---

We do not recommend the use of an "Answering Service" (like those offered by local telephone companies that provide voice mail) on the telephone line you are connecting to the fax. If you do subscribe to an "Answering Service" we suggest that you dedicate a different telephone line to be used for fax communication only and connect that telephone line to the fax.

---

### Recording the Outgoing Message

When recording a message...


- Try to keep your message to less than 15 seconds long.
- In the message tell your callers how to send a fax.
  - Here's a sample message:  
"Hello. I'm not in the office right now, but please leave a message after the beep. I'll return your call as soon as possible. If you would like to send a fax, press the start button on your fax after recording your message. Thank you."
- Leave a 4-second pause at the beginning of the message (the 4-second pause plus the outgoing message should not exceed a total of 15 seconds).
- Set the answering machine to answer on the first or second ring.

## Receiving Documents in Memory

When the fax unit is receiving a fax, it automatically stores unprinted pages in memory if:

- the fax runs out of paper.
- the fax runs out of toner.
- there is no toner cartridge installed.
- the paper size specified in the FAX PRINTER SETUP is different to the paper size in the paper cassette.
- a paper jam has occurred.
- the message OUTPUT TRAY FULL is displayed.

The fax displays the following messages telling you which of the above has occurred:

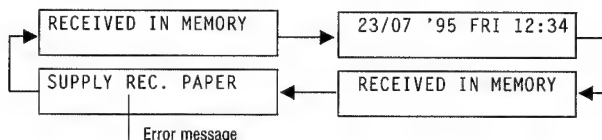

### Error messages

REPLACE CARTRIDGE	(→p. 2-17)
SUPPLY REC. PAPER	(→p. 2-22)
INSTALL CARTRIDGE	(→p. 2-17)
CHECK PAPER SIZE	(→p. A-10)
REC. PAPER JAM	(→p. 8-3)

You need to solve the problem before the fax automatically prints the received fax in memory (see below).

## Printing a Fax from Memory



If power to the fax is cut off, any faxes stored in its fax memory will be saved for approximately an hour. If the power failure lasts longer than an hour, the stored faxes will be lost.

Once you have solved the problem indicated by the error message above, the fax will automatically print the unprinted pages stored in memory.

The fax's memory can store up to 42 A4-size pages. If the memory fills up before a fax is completely received, the remaining pages of the fax will be lost and must be resent.



With the optional 2 MB memory board installed, you can increase the fax's memory to store up to 138 pages.

## Messages Displayed While Receiving a Fax

The messages shown below normally appear while the fax is receiving a fax.

### Receiving a transmission

23/07 '95 FRI 12:34
RECEIVE P.001

Page no. |

### Transaction number

23/07 '95 FRI 12:34
TX/RX NO. 5678

During receiving, the following are displayed alternately:

- Condition (RECEIVING)
- Other party's telephone No. (may not be displayed)
- Other party's name (may not be displayed)
- Receiving mode (G3)
- ECM RX (in ECM)
- TX/RX No.
- Page No.

When the document has been received, the following are displayed before the fax returns to standby mode:

- Reception result (RECEPTION OK or an error message)
- TX/RX No.

The fax will print a reception report (RX Report) if it has been set to do so.  
(→p. 6-6, A-5)

## How to Cancel an Incoming Fax

To cancel an incoming fax:

**ACTION**

**DISPLAY**

**1**

Press **STOP**.



CANCEL DURING TX/RX? YES=(*) NO=(#)
--

**2**

Press \* to cancel, or # to resume receiving the fax.



or





# Special Features

Part

5

 

 
 
 
 

 
 
This section describes the fax's speed dialling, group dialling, and special dialling features, along with its memory, copying, and polling functions.



# Speed Dialling

Your Canon fax can store up to 120 phone numbers: up to 20 of your most frequently used numbers can be stored for One-Touch Speed Dialling, and an additional 100 numbers can be stored for Coded Speed Dialling.

## Storing Numbers for One-Touch Speed Dialling

- | ACTION  | DISPLAY                                 |
|---|---|
| <b>1</b><br>    | DATA REGISTRATION<br>1.SPEED DIAL SETUP |
| <b>2</b><br>Press <b>SET</b> twice.<br>   | 1-TOUCH SPD DIAL<br>01=                 |
| <b>3</b><br>Use the search buttons to select a One-Touch Speed Dialling button between 01 and 20.<br>   | 1-TOUCH SPD DIAL<br>07=                 |
| <ul style="list-style-type: none"><li>• You can also do this by pressing <b>FUNCTION</b>, then pressing the One-Touch Speed Dialling button, then pressing <b>FUNCTION</b> again.</li><li>• If a number is already stored at the button you select, that number appears.</li><li>• If the button you select is registered for Group Dialling, GROUP DIAL appears.</li></ul> |   |
| <b>4</b><br>Press <b>SET</b> twice. Use the numeric buttons to enter the fax number you want to store.<br>               | TELEPHONE NUMBER<br>TEL=                |
- Press **SPACE** to enter spaces between numbers. (Spaces are optional and are ignored during dialling.)
  - If you want to clear a number or a mistaken entry, press **CLEAR**.
  - To enter a pause in the number, press **PAUSE** one or more times. {EC}
  - To enter a pause in the number, press **PAUSE** once. {UK}

**5**

Press **SET** twice, then use the numeric buttons to store the name that goes with the number. (See page 2-29 for details on entering letters.)

SET	SET		Ex: CANON INC	NAME	:A
<input type="text"/>	<input type="text"/>			CANON INC	

**6**

Press **SET**.

SET	1-TOUCH SPD DIAL
<input type="text"/>	3.OPTIONAL SETTING

**7**

To adjust the transmission settings, press **SET** and follow the instructions on page 5-11.

SET	OPTIONAL SETTING
<input type="text"/>	OFF

-or-

To continue registering more numbers and names for One-Touch Speed Dialling, press **DATA REGISTRATION**.

DATA REGISTRATION	1-TOUCH SPD DIAL
<input type="text"/>	08-

**8**

When you are finished registering numbers and names, press **STOP** to return to standby mode.



23/07 '95 FRI 12:34
---------------------

## Using One-Touch Speed Dialling

- 
- 1** Place the document face down on the fax, and gently insert it into the automatic document feeder (ADF) until you hear a beep.



- 
- 2** Press the desired One-Touch Speed Dialling button.

Here are some important points about One-Touch Speed Dialling:

- If you make a mistake, or want to cancel the dialling, press **⏏ (STOP)**.
- You can select up to 20 One-Touch Speed Dialling buttons in a row. The fax will automatically be sent to the numbers you select. (You can also include Coded Speed Dial numbers.)
- After you press a One-Touch Speed Dialling button, the fax will start scanning in five seconds, even if you don't press **⏏ (START/COPY)** (ten seconds if you press more than one One-Touch Speed Dialling button). So if you want to send to multiple destinations, be sure to press the second One-Touch Speed Dialling button within five seconds after pressing the first, and press any subsequent buttons within ten seconds.
- If you don't first place the document into the automatic document feeder (ADF), the fax will display **SET DOCUMENT**.
- If no number is stored under the button you press, the fax will display **NO TEL #**.

 
 
 
 
 
 

 


 
 

 


---

When using One-Touch Speed Dialling, make sure the **FUNCTION** lamp is off.

---

## Storing Numbers for Coded Speed Dialling

- |   | ACTION   | DISPLAY                                 |
|---|--|---|
| 1 |    | DATA REGISTRATION<br>1.SPEED DIAL SETUP |
| 2 | Press <b>SET</b> . Use the search buttons to display 2. CODED SPD DIAL.<br>     | SPEED DIAL SETUP<br>2.CODED SPD DIAL    |
| 3 | Press <b>SET</b> . Use the search buttons to select a two-digit code (00–99) in the display.<br>If a number is already stored for the code you select, that number appears.<br>   | CODED SPD DIAL<br>★00=                  |
|   | <ul style="list-style-type: none"> <li>• If a number is already stored at the code you select, that number appears.</li> <li>• If the code you select is registered for Group Dialling, GROUP DIAL appears.</li> </ul>   |   |
| 4 | Press <b>SET</b> twice, then use the numeric buttons to enter the fax number you want to store.<br>     | TELEPHONE NUMBER<br>TEL=                |
|   | <ul style="list-style-type: none"> <li>• Press <b>SPACE</b> to enter spaces between numbers. (Spaces are optional and are ignored during dialling.)</li> <li>• If you want to clear a number or a mistaken entry, press <b>CLEAR</b>.</li> <li>• To enter a pause in the number, press <b>PAUSE</b> one or more times. {EC}</li> <li>• To enter a pause in the number, press <b>PAUSE</b> once. {UK}</li> </ul>                      |   |
| 5 | Press <b>SET</b> twice, then use the numeric buttons to store the name that goes with the number. (See page 2-29 for details on entering letters.)<br>   Ex: CANON INC      | NAME : A<br>CANON INC                   |

**6**

Press **SET**.



CODED SPD DIAL  
3.OPTIONAL SETTING

**7**

To adjust the transmission settings, press **SET** and follow the instructions on page 5-11.



OPTIONAL SETTING  
OFF

-or-

To continue registering more numbers and names for Coded Speed Dialling, press **DATA REGISTRATION**.



CODED SPD DIAL  
★01-

**8**

When you are finished registering numbers and names, press **STOP** to return to standby mode.



23/07 '95 FRI 12:34

You may want to make a list of the numbers and names you store under the Coded Speed Dial codes, and post the list near the fax.

## Using Coded Speed Dialling

1

Place the document face down on the fax, and gently insert it into the automatic document feeder (ADF) until you hear a beep.





2

Press **CODED DIAL** and use the numeric buttons to enter the desired two-digit code (00–99). (You can enter several codes in a row by pressing **CODED DIAL** between each code.) Then press **START/COPY**.




 

 







Here are some important points about Coded Speed Dialling:

- If you make a mistake, or want to cancel the dialling, press  (**STOP**).
- You can enter multiple Coded Speed Dial codes. The fax will automatically be sent to the numbers you selected in the order in which you selected them. (You can also include 20 One-Touch Speed Dialling buttons.)
- Once you enter a two-digit code, the fax will start scanning in five seconds, even if you don't press  (**START/COPY**) (ten seconds if you enter multiple codes). So if you want to send to multiple destinations, be sure to enter the second Coded Speed Dialling code within five seconds after entering the first, and subsequent codes within ten seconds.
- If you don't first place the document into the automatic document feeder (ADF), the fax will display **SET DOCUMENT**.
- If no number is stored under the button you press, the fax will display **NO TEL #**.

## Creating Groups for Group Dialling

  Group Dialling lets you send a fax to a group of destinations with the press of a single button. The numbers you use in groups must already be stored in One-Touch Speed Dialling buttons or Coded Speed Dialling codes. Each group is stored under a One-Touch Speed Dialling button or a Coded Speed Dialling Code.

Create groups for Group Dialling as follows:

- |   | ACTION  | DISPLAY                                 |
|---|---|---|
| 1 |  FUNCTION<br> DATA<br>REGISTRATION  | DATA REGISTRATION<br>1.SPEED DIAL SETUP |
| 2 | Press <b>SET</b> , then use the search buttons to display 3. GROUP DIAL.<br>     | TEL REGISTRATION<br>3.GROUP DIAL        |
| 3 | Press <b>SET</b> .<br>   |   |
| 4 | To store a group under a One-Touch Speed Dialling button: Use the search buttons to select an unused One-Touch Speed Dial button code (01 to 20). If a group or number is already stored in the button you select, 1-TOUCH SPD DIAL or GROUP DIAL is displayed.<br>   | GROUP DIAL<br>01=                       |
|   | -or-<br>To store a group under a Coded Speed Dialling Code:<br>Press <b>CODED DIAL</b> , then enter an unused two-digit code (01 to 99). If a group or number is already stored in the code you select, CODED SPD DIAL or GROUP DIAL is displayed.<br>Ex:    | GROUP DIAL<br>★07=                      |



Each One-Touch Speed Dial button or Coded Speed Dial code can store either a name and number for speed dialling or a group. Be careful not to override speed dial names and numbers when creating and storing groups.

**5**

Press **SET** twice, then use the One-Touch Speed Dial buttons or the **CODED DIAL** button to enter the numbers you want to store in the group.



 
- If you want to enter a number that is already stored in a One-Touch Speed Dialling button, press **FUNCTION** (the FUNCTION lamp goes off), press the desired one-touch button(s), and press **FUNCTION** again (the FUNCTION lamp goes on).
- If you want to enter a number that is already stored in a Coded Speed Dialling code, press **CODED DIAL**, then enter the two-digit code for the number. (Press **CODED DIAL** between each entry.)



You can not register numbers in the group that have not been registered for Speed Dialling.

**6**

Press **SET** twice, then use the numeric buttons to enter a name for the group. (See page 2-29 for details on entering letters.)

**7**

Press **SET**.



To enter additional groups, use the search buttons to select additional One-Touch Speed Dial button codes, then repeat the above procedure starting with step 3. When you finish, press **(STOP)** to return to standby mode.



## Using Group Dialling


 
- 1 Place the document face down on the fax, and gently insert it into the automatic document feeder (ADF) until you hear a beep.



- 2 Press the desired One-Touch Speed Dialling button(s) or enter the Coded Speed Dialling code(s), then press **START/COPY**.



Here are some important points about Group Dialling:

- If you make a mistake, or want to cancel the dialling, press  (**STOP**).
- You can select several groups in a row. The fax will be sent to all the numbers you select in the order you select them. You can also include numbers stored for One-Touch Dialling or Coded Speed Dialling.
- Once you select a group, the fax will start scanning in five seconds, even if you don't press  (**START/COPY**) (ten seconds if you enter multiple codes). So if you want to send to multiple destinations, be sure to press the second Group Dialling, Coded Dialling, or One-Touch Speed Dialling button within five seconds after pressing the first, and press any subsequent buttons within ten seconds.
- If you don't place the document into the automatic document feeder (ADF), the fax will display SET DOCUMENT.
- The fax can detect if a number is registered more than once (One-Touch Speed Dialling button no.10, for example), and sends the document once only to that number.
- The TX TYPE set in One-Touch Speed Dialling buttons or Coded Speed Dialling codes remain effective when registered in a group.
- The TX TYPE feature can not be set in Group Dialling.

# Adjusting the Transmission Settings

When you register a number for One-Touch Speed Dialling or Coded Speed Dialling, you can also set the transmission time, transmission type, long distance setting, and the transmission speed.

Before you can set any of the transmission settings, you need to turn the **OPTIONAL SETTING** on. Follow the procedure below after completing step 7 on page 5-3 (One-Touch Speed Dialling) or page 5-6 (Coded Speed Dialling).

## ACTION

## DISPLAY

1

Use the search buttons to display ON.



OPTIONAL SETTING  
ON

2

Press **SET**.



OPTIONAL SETTING  
1.SET TIME

## ■ Setting the Transmission Time

Use this procedure to set the transmission time for a One-Touch Speed Dialling button or a Coded Seed Dialling code.

Make sure the **OPTIONAL SETTING** is on (see above) before following the procedure below.

## ACTION

## DISPLAY

1

Use the search buttons to display 1. SET TIME.

 


OPTIONAL SETTING  
1.SET TIME

2

Press **SET**, then use the search buttons to select a line.

- You can set 1 to 5 settings for the transmission time. The procedure is the same for all settings.



Ex: Setting 2

SET TIME  
2: : :

 


To clear a time setting, press **CLEAR**. If you clear all settings, the document will not be sent at a set time.

3

Press **SET**, then use the numeric buttons to enter the starting time.

- Use the 24-hour system to set the time.



Ex: 0 2 1 5

SET TIME  
2: 02:15

4

Press **SET**.



SET TIME  
3: :

5

To continue registering other features for the same number press **DATA REGISTRATION**.



OPTIONAL SETTING  
2.TX TYPE

- You do not need to press **DATA REGISTRATION** if the last time setting you set was 5.

—or—

If you are finished, press **STOP** to return to standby mode.



23/07 '95 FRI 12:34

## ■ Setting the Transmission Type

Use the expanded transmission feature to set up sending with subaddress and Password for a One-Touch Speed Dialling button or a Coded Speed Dialling code.

Make sure the **OPTIONAL SETTING** is on (→p. 5-11) before following the procedure below.

**ACTION**

**DISPLAY**

1

 
Use the search buttons to display 2. TX TYPE.



OPTIONAL SETTING  
2.TX TYPE

2

Press **SET**, then use the search buttons to display the setting you want to use.



TX TYPE  
REGULAR TX

TX TYPE  
PSWD/SUBADDRESS

Use the **REGULAR TX** setting to turn off a subaddress/password setting if one has been set up.

### Sending with a Subaddress and Password

With the **PASSWORD/SUBADDRESS** feature, you can send documents with a registered subaddress or password based on the ITU-T standard so that documents transmitted without the corresponding subaddress or password will not be received. To send a document with the **PASSWORD/SUBADDRESS** feature, it is necessary that the subaddress or the password of the document you wish to send is identical to the subaddress or password of the other fax to which the document is to be transmitted to.

When sending a document using this feature, it is necessary for the receiving party's fax machine to have the same function for receiving. If using a Canon fax machine, the "Memory Box" feature is suitable for this.

The PASSWORD/SUBADDRESS feature may differ depending on the receiving fax machine's settings. When using this feature, check with the other party on how they are using the PASSWORD, SUBADDRESS, and "Memory Box" features before sending a document.

Follow this procedure to set the subaddress and the password for a One-Touch Speed Dialling button or a Coded Speed Dialling code. To set the subaddress and password, display PSWD/SUBADDRESS.

## 3

Press **SET** twice, then use the numeric buttons to enter the subaddress.



- You can enter numbers, an asterisk \*, a sharp (#), or spaces up to 20 digits.
- If you wish not to register a subaddress, press **SET**.
- If you make a mistake and want to enter again, press **CLEAR**.

## 4

Press **SET** twice, then use the numeric buttons to enter a TX password.



- You can enter numbers, an asterisk \*, a sharp (#), or spaces up to 20 digits.
- If you wish not to register a password, press **SET**.
- If you make a mistake and want to enter again, press **CLEAR**.

 
## 5

Press **SET**.



## 6

If you are finished, press **STOP** to return to standby mode.



## ■ Changing the Long Distance Setting

Use this procedure to change the long distance setting for a One-Touch Speed Dialling button or a Coded Seed Dialling code. Change this setting if you are getting transmission errors when you send documents long distance.

Make sure the **OPTIONAL SETTING** is on (→p. 5-11) before following the procedure below.

### ACTION

### DISPLAY

**1**

 
Use the search buttons to display 3. LONG DISTANCE.



OPTIONAL SETTING  
3. LONG DISTANCE

**2**

Press **SET**, then use the search buttons to change the setting.



LONG DISTANCE  
DOMESTIC

Select (1), then try to send your document.

LONG DISTANCE  
LONG DISTANCE(1)

If the setting (1) does not solve the problem, try setting (2) and (3).

LONG DISTANCE  
LONG DISTANCE(2)

LONG DISTANCE  
LONG DISTANCE(3)

**3**

Press **SET**.



OPTIONAL SETTING  
4. TX SPEED

**4**

If you are finished, press **STOP** to return to standby mode.



23/07 '95 FRI 12:34

## ■ Setting the Transmission Speed

Use this procedure to change the transmission speed for a One-Touch Speed Dialling button or a Coded Seed Dialling code. Change the speed when it takes a long time for your document transmissions to begin.

Make sure the **OPTIONAL SETTING** is on (→p. 5-11) before following the procedure below.

### ACTION

### DISPLAY

**1**

Use the search buttons to display 4. TX SPEED.



OPTIONAL SETTING  
4. TX SPEED

**2**

Press **SET**, then use the search buttons to change the speed setting.



TX SPEED  
14400bps

- If it takes a long time for your document transmissions to begin, this may mean that the telephone lines in your area are in poor condition. If you experience this problem, change the transmission speed from 14400 to 9600 bps or 4800 bps.

TX SPEED  
9600bps

TX SPEED  
4800bps

**3**

Press **SET**.



**4**

To continue registering other speed dial numbers and names, continue with the procedure from step 2 on page 5-2 (One-Touch Speed Dialling) or page 5-5 (Coded Speed Dialling).

—or—

If you are finished, press **STOP** to return to standby mode.



23/07 '95 FRI 12:34

# Sending to More Than One Location

In addition to Group Dialling, you can use One-Touch Speed Dialling, Coded Speed Dialling, and manual dialling to send a fax to multiple destinations.

- 1 Place the document face down on the automatic document feeder (ADF), and gently insert it until it stops.



- 2 Enter the numbers you want to send the fax to. You can do this by pressing One-Touch Speed Dialling buttons, pressing **CODED DIAL** and entering Coded Speed Dial codes, or entering numbers manually using the numeric buttons (one location only), in any combination. (Press **SET** after the number you have entered manually and press **CODED DIAL** between each Coded Speed Dialling entry.)

- 3 If you want to review the numbers you entered, press **FUNCTION** and use the search buttons. You can clear a displayed number from the list by pressing **SET**, then **CLEAR**.



- 4 Press **START/COPY** to send the fax or wait 10 seconds and the fax will begin scanning automatically.



The numbers you entered are dialled in this order: Coded Speed Dialling, One-Touch Speed Dialling, then manual dialling.

If you find that you frequently send faxes to the same numbers, you can save time by creating a group containing those numbers and using Group Dialling.



If **MEMORY FULL** is displayed while the document is being scanned, do the following:

- If the message appears while the fax is scanning a one-page document, you can not send it to several locations. Send the document to one location at a time.
- If the message appears after scanning some pages of a multipage document, divide the document into several parts and send each part separately to the locations you have selected.

# Sending a Fax Later

The fax lets you scan a fax into its memory and send it sometime later. This lets you take advantage of lower long-distance rates at night, for example.

## ACTION

## DISPLAY

1

Place the document face down on the automatic document feeder (ADF), and gently insert it until it stops.



2

 
Press **FUNCTION**, then **DELAYED TRANSMISSION**, and then **SET**. (The current time is displayed.)



DELAYED TX	
SET TIME	01:40

3

Use the numeric buttons to enter the time at which you want to send the fax. (Enter the time in 24-hour form: 10:00 p.m. would be 22:00, for example).



Ex: (2) (1) (4) (0)

DELAYED TX	
SET TIME	21:40

4

Press **SET**.



TEL=
------

5

Enter the number or numbers you want to send to. You can do this by pressing One-Touch Speed Dialling buttons (with the **FUNCTION** lamp off), pressing **CODED DIAL** and entering Coded Speed Dial codes, or entering numbers manually using the numeric buttons (one location only), in any combination. (Press **SET** after the number you entered manually and press **CODED DIAL** between each Coded Speed Dialling entry.)

6

Press **SET**.



If **MEMORY FULL** is displayed while the document is being scanned, the fax can not be sent later.



# Special Dialling

In this section, we'll explain some special dialling features like dialling through a switchboard, and dialling international numbers.

## Dialling Through a Switchboard

A PBX (private branch exchange) is an on-site telephone switchboard.

- If your fax is connected through a switchboard, dial the outside line number first. Then dial the rest of the number.
- If you want to dial with automatic dialling, you may have to insert a pause between the outside line number and the telephone number when you register the number for One-Touch (→p. 5-2) or Coded Speed Dialling (→p. 5-5).
- When you have to make calls to an extension, you may have to press the **R** {UK, ECG} **I. P.** {ECF} button before you dial the extension number. Before you can use the **R** {UK, ECG} **I. P.** {ECF} button, you have to register it (→p. A-3, 11. R-KEY SETTING).

## Long Distance Dialling

 
When you register a long distance number, you may have to insert a pause either within or after the number. For long distance dialling, the location and length of the pause may differ depending on the telephone system.

### How to Enter Pauses

Use this procedure to enter pauses within or at the end of numbers.

**1**

During dialling registration, when you come to a step that asks you to enter a number for dialling, use the numeric buttons to enter the number.



TELEPHONE NUMBER	
TEL=	03

**2**

To enter a pause within a number, make sure the FUNCTION lamp is on, then press **PAUSE**.



{EC}

TELEPHONE NUMBER
TEL= 03PP37579448P

{UK}

TELEPHONE NUMBER
TEL= 03P37579448P

- To enter a pause at the end of a number, press **PAUSE** and press **SET**.
- A pause entered within a number is two {EC} four {UK} seconds long.
- If necessary, you can adjust the length of a pause within a number.  
(→p. A-7) {EC}
- To make a longer pause within a number, press **PAUSE** again. Each pause adds two seconds to the length of the pause. {EC}
- You can not enter continuous pauses. If necessary, adjust the length of a pause within a number. (→p. A-7) {UK}
- A pause at the end of a number is ten seconds long.

## Confirming a Dial Tone

 
Use this feature only when you register a number. In some areas you may have to confirm the dial tone in the middle of the facsimile number before dialling the rest of the number. This is called dial tone detection.

### ACTION

### DISPLAY

**1**

Use the numeric buttons to enter the first part of the number until dial tone detection is required.



TELEPHONE NUMBER
TEL= 348

**2**

When a dial tone detection is required, make sure the FUNCTION lamp is on, then press the **D.T.** button.

 


TELEPHONE NUMBER
TEL= 348.

- Where the dial tone is inserted, you will see a small dot. During dialling this is where the fax waits for the dial tone.

**3**

Enter the remainder of the number.



TELEPHONE NUMBER
TEL= 348.2121

# Using Memory

 
## Deleting a Stored Fax from Memory

### ACTION

### DISPLAY

1


Press **FUNCTION**, then **MEMORY REFERENCE**.



MEMORY REFERENCE  
1.DELETE DOCUMENT

2

 Press **SET**, then use the search buttons to select the TX/RX number of the fax you want to delete.



DELETE DOCUMENT  
TX/RX NO. 0002

3

Press **SET**, then press \* to delete the fax or # to cancel.



OK TO DELETE?  
YES=(\*) NO=(#)

4

Press **STOP** to return to standby mode.



## Resending a Document that Encountered an Error Signal

 
If you get an error signal when sending a fax from memory, you can try resending it to the same destination without having to scan it again.

### ACTION

### DISPLAY

1

Press **FUNCTION**, then **MEMORY REFERENCE**.



MEMORY REFERENCE  
1.DELETE DOCUMENT

2

Use the search buttons to display 2. MEM. RETRANSMIT.



MEMORY REFERENCE  
2.MEM. RETRANSMIT

3

Press **SET**, then use the search buttons to select the TX/RX number of the fax you want to resend.



MEM. TRANSMIT  
RX/TX NO. 0002

4

Press **SET**.



- This function can only be used when the ERASE FAILED TX setting in the SEND (TX) SETUP menu is set to OFF. (The default setting is ON). See page A-6, for details on changing the setting.
- The fax is erased from memory after it is sent.

## Printing a List of the Documents in Memory

 
The fax can print out a list of any faxes it has stored in memory, along with the transaction (TX/RX) number of each. Once you know the transaction number of a fax in memory, you can print the fax, send it to another location, or delete it.

### ACTION

### DISPLAY

**1**

Press **FUNCTION**, then **MEMORY REFERENCE**.



MEMORY REFERENCE  
1.DELETE DOCUMENT

**2**

Use the search buttons to select 3. DOC. MEMORY LIST, then press **SET** to print the list.



MEMORY REFERENCE  
3.DOC. MEMORY LIST

PRINTING REPORT

17/02 '96 SAT 00:56 FAX 31 20 545 8264				CANON EUROPA		0001
*****						
* DOC. MEMORY LIST *						
*****						
TX/RX NO	MODE	CONNECTION TEL/ID	PGS.	SET TIME	ST. TIME	
0001	DELAYED TX	6566	2	16/02 01:03	01:03	
0003	DELAYED TX	865	18	16/02 01:04	01:04	
0014	TRANSMIT	05458261	1	16/02 01:18	-----	
0042	TRANSMIT	8261	1	17/02 00:16	-----	
0043	TRANSMIT	8261	1	17/02 00:19	-----	

 
## Printing a Stored Fax

### ACTION

### DISPLAY

**1**

Press **FUNCTION**, then **MEMORY REFERENCE**.



MEMORY REFERENCE  
1.DELETE DOCUMENT

**2**

 
Use the search buttons to select 4. PRINT DOCUMENT.



MEMORY REFERENCE  
4.PRINT DOCUMENT

**3**

Press **SET**, then use the search buttons to select the TX/RX number of the fax you want to print.



PRINT DOCUMENT  
TX/RX NO. 0002

- 4** Press **SET**; then press **\*** to print the first page of the fax, or **#** to print the entire fax.



PRINT 1ST PG ONLY?  
YES=(\*) NO=(#)

TX/RX NO. 0002  
PRINTING P.001/001

- 5** Press **STOP** to return to standby mode.



## Sending a Stored Fax to Another Destination

Faxes stored in memory can easily be sent out again. If you get an error or busy signal when sending a fax from memory, for example, you can send it to another destination without having to scan it again. Also, faxes the unit receives into memory can be sent to another location.

### ACTION

### DISPLAY

- 1** Press **FUNCTION**, then **MEMORY REFERENCE**.



 
MEMORY REFERENCE  
1.DELETE DOCUMENT

- 2** Use the search buttons to select 5. MEMORY TX.



MEMORY REFERENCE  
5.MEMORY TX

- 3** Press **SET**, then use the search buttons to select the TX/RX number of the fax you want to resend.



MEMORY TX  
TX/RX NO. 0002

- 4** Press **SET**, then enter the number or numbers you want to send to. You can do this by pressing One-Touch Speed Dialling buttons (with the FUNCTION lamp off), pressing **CODED DIAL** and entering Coded Speed Dial codes, or entering numbers manually using the numeric buttons (one location only), in any combination. (Press **SET** after the number you entered manually and **CODED DIAL** between each Coded Speed Dial code.)

- 5** Press **SET** twice.



The fax is erased from memory after it is sent.

## **If the Power Goes Out...**

The fax includes a built-in lithium battery and a backup battery for use in case power to the fax is cut off.

The lithium battery has a life of about five years and will save the fax's registered data for One-Touch Speed Dialling, Coded Speed Dialling, Group Dialling, etc.

However, the backup battery will only save the documents stored in memory for approximately one hour. If the power failure lasts longer than an hour, the stored documents will be lost (in this case, the fax automatically prints a list of the lost documents when power is restored).

### **During a Power Failure**

While power is out, you can only use the fax to receive telephone calls. You can not make calls, nor send or receive faxes.

### **Memory Backup Function**

To make the best use of the fax's memory backup, avoid turning the fax off unless absolutely necessary. The backup battery recharges while the fax is powered on, and takes 15 minutes to recharge fully.

# Making Copies

You can use the fax to make one or more copies of your document, as follows.

## ACTION

## DISPLAY

1

Place the document face down on the automatic document feeder (ADF), and gently insert it until it stops.



2

 
Press **START/COPY**.



COPY	
COPY PAGE	01

3

If you want to make more than one copy, use the numeric buttons to enter the number of copies you want (up to 99).



Ex: 2

COPY	
COPY PAGE	02

To make a single copy, leave COPY PAGE set to 01.  
The resolution is always set to FINE.

4

Press **START/COPY**. If you change your mind, press  (**STOP**).



COPY	
------	--



- You may prefer to use face-up delivery if you are making a large number of copies. See "Selecting Paper Delivery" in Part 2 for more details.
- If MEMORY FULL is displayed while making multiple copies of a document, change the COPY PAGE setting to 01 and make single copies instead (as many times as required).
- When making copies, the AUTO HALFTONE setting is set to ON.

# Polling to Receive Faxes

The fax's polling feature allows you to request a fax to be sent from another fax machine. The sender only needs to make sure the document is on the fax machine and ready to be sent: when the fax polls that machine, the fax is sent automatically. The fax can poll any fax machine that supports polling. (This process doesn't work in reverse, however: the fax can not be polled by other fax machines.)

## Polling a Fax Machine

 
To poll another fax machine and receive a fax from it, do the following:

### ACTION

### DISPLAY

**1**

Press **FUNCTION**, then **POLLING**.



POLLING RX  
1.SELECT LOCATIONS

**2**

Press **SET**.



TEL=

**3**

Enter the fax number or numbers to poll. You can do this by pressing One-Touch Speed Dialling buttons (with the FUNCTION lamp off), pressing **CODED DIAL** and entering Coded Speed Dial codes, or entering numbers manually using the numeric buttons (one location only), in any combination. (Press **SET** after the number you entered manually and press **CODED DIAL** between each Coded Speed Dialling entry.)

**4**

Press **START/COPY** and the fax will start to poll automatically.



The fax then begins to receive the fax.



 
If the sender is using a Canon fax machine, ask him to set the polling ID of his fax to 255 (1111 1111 binary number).  
For details on the polling ID, refer to the sender's fax machine manual.




## Using Tone Dialling on a Pulse Line

Even if you have a pulse line, the fax enables you to use tone dialling once you've connected to the number you're calling. This lets you take advantage of many services that require tones, such as selecting options from telephone "touch-line" services.

- 1** Press **HOOK** or pick up the handset, then dial the number using the numeric buttons. The fax connects using the pulses required by your phone line.



 - 2** Press **FUNCTION**, then press **TONE/+** to switch to tone dialling.



- 3** When you're done, press **HOOK** or hang up the handset.

 
 
 


 

 





When registering One-Touch Speed Dialling and Coded Speed Dialling numbers, you can also switch to tone dialling.

# Use of LOCK PHONE Feature

 
If you don't want unauthorised people using your Fax-L300 to make calls (with the optional handset or extension telephone) and running up your telephone bill when the office is closed, set LOCK PHONE to ON. When this feature is ON, no one can make a telephone call until the setting is set to OFF.

To restrict access to the LOCK PHONE option, you need to register a password. Set the password and LOCK PHONE option as follows:

- | ACTION  | DISPLAY  |
|---|--|
| <b>1</b><br><div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <b>FUNCTION</b><br/>  </div> <div style="text-align: center;"> <b>DATA REGISTRATION</b><br/>  </div> </div>  | <div style="border: 1px solid black; padding: 5px; text-align: center;"> DATA REGISTRATION<br/> 1.SPEED DIAL SETUP </div>  |
| <b>2</b><br>Use the search buttons to display 7. SYSTEM SETTINGS.<br><div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> <math>\wedge</math><br/>  </div> <div style="text-align: center;"> <math>\vee</math><br/>  </div> </div>  | <div style="border: 1px solid black; padding: 5px; text-align: center;"> DATA REGISTRATION<br/> 7.SYSTEM SETTINGS </div>   |
| <b>3</b><br>Press <b>SET</b> , then use the search buttons to display 1. UN/LOCK PHONE.<br><div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="text-align: center;"> <b>SET</b><br/>  </div> <div style="text-align: center;"> <math>\wedge</math><br/>  </div> <div style="text-align: center;"> <math>\vee</math><br/>  </div> </div>   | <div style="border: 1px solid black; padding: 5px; text-align: center;"> SYSTEM SETTINGS<br/> 1.UN/LOCK PHONE </div>   |
| <b>4</b><br>Press <b>SET</b> .<br><div style="margin-top: 10px;"> <div style="text-align: center;"> <b>SET</b><br/>  </div> <ul style="list-style-type: none"> <li>If a password has already been registered, enter it now, then press <b>SET</b>.</li> </ul> </div>   | <div style="border: 1px solid black; padding: 5px; text-align: center;"> UN/LOCK PHONE<br/> PASSWORD     _ </div>  |
| <b>5</b><br>Press <b>SET</b> .<br><div style="margin-top: 10px;"> <div style="text-align: center;"> <b>SET</b><br/>  </div> <ul style="list-style-type: none"> <li>If a password is already registered, it will be displayed:</li> <li>If a password is not registered, the following is displayed:</li> </ul> </div>  | <div style="margin-top: 10px;"> <div style="display: flex; align-items: center;"> Ex: <div style="border: 1px solid black; padding: 5px; margin-left: 10px;"> PASSWORD<br/> 1234 </div> </div> <div style="border: 1px solid black; padding: 5px; margin-top: 10px; text-align: center;"> PASSWORD </div> </div> |
| <b>6</b><br>To register or change the current password, enter four numbers, then press <b>SET</b> .<br><div style="margin-top: 10px;"> Ex: <div style="display: flex; align-items: center; margin-left: 10px;"> <div style="border: 1px solid black; border-radius: 50%; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin: 0 5px;">4</div> <div style="border: 1px solid black; border-radius: 50%; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin: 0 5px;">3</div> <div style="border: 1px solid black; border-radius: 50%; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin: 0 5px;">2</div> <div style="border: 1px solid black; border-radius: 50%; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin: 0 5px;">1</div> <div style="margin-left: 10px;"> <b>SET</b><br/>  </div> </div> </div> | <div style="border: 1px solid black; padding: 5px; text-align: center;"> PASSWORD<br/> 4321 </div>   |
| <p><b>-01-</b></p> <p>To keep the current password, press <b>SET</b>.</p> <div style="margin-top: 10px;"> <div style="text-align: center;"> <b>SET</b><br/>  </div> </div>   |  |

7

Use the search buttons to set LOCK PHONE on or off, then press **SET**.



- The default setting is OFF. Anyone can send documents or dial normally.
- When set to ON, no one can send documents or dial until the setting is changed to OFF.

LOCK PHONE	OFF
------------	-----

LOCK PHONE	ON
------------	----

8

Press **SET** to save the setting, then press **STOP** to return to standby mode.



23/07 '95 FRI 17:20
---------------------


# Using Alternative Telephone Networks (UK only)

The fax has a built-in feature that allows you to send documents and make telephone calls with an alternative long-distance service, such as the 2300 Service of Mercury Communications Limited. If you subscribe to such a service, you can save money on most long distance international communications.

The procedures described in this section show you how to use your fax with the 2300 Service of Mercury Communications Limited. For details on using your fax with alternative telephone services, contact your Canon authorised representative.

## Attaching the M Label (UK only)

Before operating the fax, attach the M label to help you identify the button as shown below.

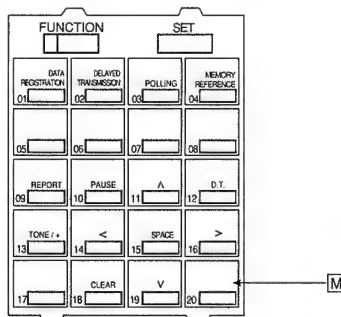


## Registering an Alternative Telephone Network

**ACTION**

**DISPLAY**

**1**

 Press **FUNCTION** and **DATA REGISTRATION**.



DATA REGISTRATION  
1.SPEED DIAL SETUP

**2**

 
Use the search buttons to display 2. USER SETTINGS.



DATA REGISTRATION  
2.USER SETTINGS

**3**


Press **SET**, then use the search buttons to display 12. M-KEY SETTING.



USER SETTINGS  
12.M-KEY SETTING

4

 Press **SET**, then use the search buttons to select.




ACCESS CODE  
132

- You can select 132 (default) or 131P ("P" means a four-second pause).

5

 Press **SET**, then use the numeric buttons to enter the ID code.



ID CODE  
1234567890

- This code is given to you by Mercury Telecommunications Limited.
- If your access code is 132, you don't have to enter the ID code. Go on to the next step.
- If your access code is 131 you will need to enter your Personal Identification Number (PIN).
- If you need to enter a code, you can enter up to 20 digits (pauses are unnecessary).
- If an ID code is already registered, you will see a string of asterisks \*\*\*\*\* on the display.

6

Press **SET**, then press **STOP** to return to standby mode.



23/07 '95 FRI 17:20

## Sending with an Alternative Telephone Network

1

Place the document face down on the automatic document feeder (ADF), and gently insert it until it stops.



2

 
Press **FUNCTION**, then **M**.



TEL= M

**3**

Use the numeric buttons to enter the facsimile or telephone number of the other party.



Ex: 4 1 6 7 9  
5 1 1 1 1

TEL= M4167951111

**4**

Press **START**.



- The fax automatically dials the access code and ID code registered under the M button. Next, the fax dials the number of the other party and connects the call. In order to protect your codes, the access code and ID code are not printed on activity reports.

## Registering Speed Dialling with the M Button

Follow this procedure to enter your access code and ID code when you register a number for One-Touch or Coded Speed Dialling. This allows you to send documents over the 2300 Service of Mercury Communications Limited at the press of a button.

**1**

Before you can do this procedure, you must register the access code and ID code.

**2**

 
While you are registering a number for One-Touch or Coded Speed Dialling, and you come to a step that asks you enter the facsimile number of the other party, press **M**.



TELEPHONE NUMBER  
TEL= M

**3**

Use the numeric buttons to enter the facsimile number.



Ex: 4 1 6 7 9  
5 1 1 1 1

TELEPHONE NUMBER  
TEL= M4167951111

**4**

Continue with the procedure for registering One-Touch or Coded Speed Dialling.

- After you have registered the number for speed dialling, you can dial and use the 2300 Service without press the M button.



# Activity Reports

Part

6

This part describes how to print a variety of reports.



# Printing Transaction Reports

The fax can print a variety of reports that will help you keep track of your transactions and the information registered in your fax. To select specific report types, see "REPORT SETTINGS" in Appendix A. (→p. A-4)

## Activity Management Reports

Activity management reports provide a record of the last 40 transmissions your fax sends or receives.

1

Press **FUNCTION** then **REPORT**.



An activity management report similar to that shown below prints out.

20/02 '96 TUE 16:35 FAX 31 20 545 8264

CANON EUROPA

001

\*\*\*\*\*

\* ACTIVITY REPORT \*

\*\*\*\*\*

ST. TIME	CONNECTION TEL	CONNECTION ID	NO.	MODE	PGS.	RESULT
*17/02 01:57	8261	CENV	0059	TRANSMIT ECM	1	OK 00'23
*17/02 01:58	8261	CENV	0060	TRANSMIT ECM	1	OK 00'24
*17/02 01:59	8261	CENV	0061	TRANSMIT ECM	1	OK 00'26
*17/02 02:00	8261	CENV	0062	TRANSMIT ECM	1	OK 00'24
*17/02 02:01	8281	CENV PATRICIA	0063	TRANSMIT ECM	1	OK 00'24
*17/02 02:02	8261	CENV	0064	TRANSMIT ECM	1	OK 00'26
*17/02 02:03	8260	CENV/BMTS	0065	TRANSMIT ECM	1	OK 00'26
*17/02 02:04	8261	CENV	0066	TRANSMIT ECM	1	OK 00'25
*17/02 02:05	8261	CENV	0067	TRANSMIT ECM	0	NG 00'10
						0 STOP
*17/02 02:06	8261	CENV	0068	TRANSMIT ECM	1	OK 00'22
*17/02 02:07	05458261		0069	TRANSMIT	0	NG 00'10
						0 #018

If marked with an asterisk, the document has already been printed out.

Transaction number

Sending mode

Transaction via Error Correction Mode

The number of the page with an error

Error code: Describes the nature of the error

**STOP** was pressed during transaction

- The fax will automatically print an activity management report after every 40 transactions. You can also set it not to do so. (→p. A-5)
- The fax prints sending and receiving transactions together in the same report, though you can also set it to print sending and receiving transactions in separate reports. (→p. A-5)

# Printing Transaction Reports

20/02 '96 TUE 19:18 FAX 31 20 545 8264				CANON EUROPA		001	
* * * * *							
*       ACTIVITY MANAGEMENT REPORT TX       *							
* * * * *							
ST. TIME	CONNECTION TEL	CONNECTION ID	NO.	MODE	PGS.	RESULT	
*17/02 02:01	8281	CENV PATRICIA	0063	TRANSMIT ECM	1	OK	00'24
*17/02 02:02	8261	CENV	0064	TRANSMIT ECM	1	OK	00'26
*17/02 02:03	8260	CENV/BMTS	0065	TRANSMIT ECM	1	OK	00'26
*17/02 02:04	8261	CENV	0066	TRANSMIT ECM	1	OK	00'25
*17/02 02:05	8261	CENV	0068	TRANSMIT ECM	1	OK	00'22
*17/02 02:06	8261	CENV	0069	TRANSMIT ECM	1	OK	00'25
*17/02 02:07	8281	CENV PATRICIA	0070	TRANSMIT ECM	1	OK	00'25
Send and receive transactions listed separately							

* * * * * *       ACTIVITY MANAGEMENT REPORT RX       * * * * * *							
ST. TIME	CONNECTION TEL/ID	RX NAME	NO.	MODE	PGS.	RESULT	
*19/02 20:25	+31 20 545 8208	CENV SMD	5008	AUTO RX ECM	1	OK	00'35
*19/02 20:28	31 20 5458281	CENV PATRICIA	5009	AUTO RX ECM	1	OK	00'34
*19/02 21:18			5010	AUTO RX G3	0	NG	00'10
					0		
*19/02 21:22			5011	AUTO RX G3	0	NG	00'10
					0		
*20/02 00:21		CENV	5012	AUTO RX ECM	1	OK	00'30
*20/02 00:23		CENV	5013	AUTO RX ECM	1	OK	00'33
*20/02 16:13	+31 20 545 8208	CENV SMD	5014	AUTO RX ECM	1	OK	00'35

## Transmission Reports

The fax normally prints an activity report for sending only when an error occurs during sending, but you can also set it to print a report every time you send a fax. (→p. A-5)

17/02 '96 SAT 01:10 FAX 31 20 545 8264	CANON EUROPA	0001
*****		
* ERROR TX REPORT *		
*****		
TX FUNCTION WAS NOT COMPLETED		
TX/RX NO	0003	
CONNECTION TEL		865
SUBADDRESS		
CONNECTION ID		
ST. TIME	17/02 01:10	
USAGE T	00'00	
PGS.	0 ( 0)	
RESULT	NG	
	0	#018

The "PGS." item of the report displays the number of pages sent or unsent according to the results of the transmissions. Below are some examples:

- 3 OK: All three pages sent.
- 2 (3) OK: Two pages sent in the second attempt. Total number of pages sent is three.
- 2 (1) NG: An error occurred while sending the second page during the second attempt. Total number of pages sent is one.
- 0 (0) NG: No pages sent in the first or second attempt.
- 2 (2) NG: An error occurred while sending the second page during the second attempt. Total number of pages sent is two.

The fax will print a report after a second attempt at sending a document.

When you set the fax to print the first page of the documents

20/02 '96 TUE 19:27 FAX 31 20 545 8264	CANON EUROPA	2001
<p>*****          * TX REPORT *          *****</p>		
TRANSMISSION OK		
TX/RX NO	0092	
CONNECTION TEL		8261
SUBADDRESS		
CONNECTION ID	CENV	
ST. TIME	20/02 19:27	
USAGE T	00'31	
PGS.	1	
RESULT	OK	

**THE SLEREXE COMPANY LIMITED**  
 SAPHORS LANE - BOOLE - DORSET - BH 25 8 ER  
 TELEPHONE BOOLE (545 13) 51617 - TELEX 122456

Our Ref. 350/PJC/RAC 18th January, 1972.

Dr. F.M. Cundell,  
 Mining Surveys Ltd.,  
 Holroyd Road,  
 Reading,  
 Berks.

Dear Pete,

Permit me to introduce you to the facility of facsimile transmission.

In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

*Phil.*

F.J. CROSS  
 Group Leader - Facsimile Research

■ You can print part of the first page of the fax being sent on the activity report.

## Reception Reports

The fax normally does not print an activity report for receiving, but you can set it to do so every time you receive a fax. (→p. A-5)

20/02 '96 TUE 16:14 FAX 31 20 545 8264		CANON EUROPA		0001
<p>*****          * RX REPORT *          *****</p>				
RECEPTION OK				
TX/RX NO		5014		
CONNECTION TEL		+31 20 545 8208		
SUBADDRESS				
CONNECTION ID		CENV SMD		
ST. TIME		20/02 16:13		
USAGE T		00'35		
PGS.		1		
RESULT		OK		

- You can also set the fax to print an activity report only when an error occurs during receiving. (→p. A-5)

## Memory Clear Reports

If you experience a power failure, every document stored in memory will be lost after about one hour. As soon as power is restored, the fax will automatically print out a list of documents that were stored in memory at the time of the power failure.

19/02 '96 MON 09:27 FAX 31 20 545 8264			CANON EUROPA		0001	
*****						
* MEMORY CLEAR REPORT *						
*****						
TX/RX NO.	MODE	CONNECTION TEL	PAGES	SET TIME	START TIME	
0033	MEMORY RX	31 20 545 8264	1	16/02 19:05		
0034	MEMORY RX	31 20 545 8264	1	16/02 19:06		
0032	MEMORY RX	31 20 545 8264	1	16/02 19:03		
0035	MEMORY RX	31 20 545 8264	1	16/02 19:08		
0036	MEMORY RX	31 20 545 8264	1	16/02 19:09		
0037	MEMORY RX	31 20 545 8264	1	16/02 19:10		
0038	MEMORY RX	31 20 545 8264	1	16/02 19:10		
0039	MEMORY RX	31 20 545 8264	1	16/02 19:11		
0040	MEMORY RX	31 20 545 8264	1	16/02 19:12		

## Printing a List of User's Data

Use the following procedure to print a list of the data registered in the fax. This list allows you to review all the settings available and the selections currently in place for your FAX-L300.

### ACTION

### DISPLAY

1

Press **FUNCTION**, **DATA REGISTRATION**, and **SET**.

FUNCTION [F]	DATA REGISTRATION [R]	V [V]	SET [S]
-----------------	-----------------------------	----------	------------

USER SETTINGS  
1.DATE & TIME

2

Press **REPORT** to print the user's data list.

REPORT [R]
---------------

PRINTING REPORT

20/02 '96 TUE 19:29 FAX 31 20 545 8264		CANON EUROPA	2001
EC-01-03 /02		* * * * * * USER'S DATA LIST * * * * * *	
USER SETTINGS UNIT TELEPHONE # 31 20 545 8264 UNIT NAME CANON EUROPA TX TERMINAL ID ON TTI POSITION OUTSIDE IMAGE TELEPHONE # MARK FAX AUTO HALFTONE OFF SCANNING CONTRAST STANDARD OFFHOOK ALARM ON VOLUME CONTROL CALLING VOLUME VOL MID KEYPAD VOLUME VOL MID ALARM VOLUME VOL MID RX CALL LEVEL STANDARD TEL LINE TYPE TOUCH TONE R-KEY SETTING PBX PBX EARTH CONNECTION			
REPORT SETTINGS TX REPORT OUTPUT YES REPORT WITH TX IMAGE ON			
-----			
SYSTEM SETTINGS RESTRICTIVE CODES OFF TEL SETTING OFF RX RESTRICTION OFF DATE FORMAT DD/MM 'YY DISPLAY LANGUAGE ENGLISH TX START SPEED 14400bps RX START SPEED 14400bps			
DIAL DIGITS REMAIN		98%	
EXTENSION MEMORY		2.208MByte	

Amount of memory remaining for One-Touch or Coded Speed Dialling

## Printing a List of Registered Telephone Numbers

Use this procedure to print separate lists of the One-Touch, Coded Speed, and Group Dialling numbers registered in the fax.

### ACTION

### DISPLAY

1

Press **FUNCTION**, **DATA REGISTRATION**, and **SET**.

FUNCTION [ ]	DATA REGISTRATION [ ]	SET [ ]	SPEED DIAL SETUP 1.1-TOUCH SPD DIAL
-----------------	-----------------------------	------------	--

2

Press **REPORT** to print a list of registered speed dial numbers.

REPORT [ ]	PRINTING REPORT
---------------	-----------------

### One-Touch Speed Dialling Report 1

20/02 '96 TUE 19:55 FAX 31 20 545 8264 CANON EUROPA 001				
***** * 1-TOUCH SPD DIAL LIST 1 * *****				
NO.	CONNECTION TEL	CONNECTION ID	TX TYPE	
[ 01]	8261	CANON-TEST	REGULAR TX	
[ 02]	05458261	CENV	REGULAR TX	
[ 03]	05458281	CENV PATRICIA	REGULAR TX	
[ 04]	05458260	CENV/BMTS	REGULAR TX	
[ 05]	05458208	CENV SMD	REGULAR TX	

Sending method | Preset sending time

### Coded Speed Dialling Report 1

20/02 '96 TUE 19:55 FAX 31 20 545 8264 CANON EUROPA 001				
***** * CODED SPEED DIAL LIST 1 * *****				
NO.	CONNECTION TEL	CONNECTION ID	TX TYPE	
[* 00]	00441256841300	CANON AUDIO	REGULAR TX	
[* 01]	6128052011	CANON AUSTRIA	REGULAR TX	
[* 02]	14167951111	CANON CANADA	REGULAR TX	
[* 03]	33149392525	CANON FRANCE	REGULAR TX	
[* 04]	26822672	GINGI	REGULAR TX	
[* 05]	5706425	ALEXANDRIA	REGULAR TX	

Group Dialling Report

20/02 '96 TUE 20:23 FAX 31 20 545 8264

CANON EUROPA

2001

\*\*\*\*\*~

\* GROUP DIAL LIST \*

\*\*\*\*\*

[ 06] CANON GERMANY

[ 01] 8261

CANON-TEST

[ 03] 05458281

CENV PATRICIA

[ 05] 05458208

CENV SMD

[ 07] CANON HQ

[ 04] 05458260

CENV/BMTS

[ 05] 05458208

CENV SMD

[ 08] GROUP A

[ 03] 05458281

CENV PATRICIA

[ 04] 05458260

CENV/BMTS

[ 09] GROUP SIX

[ 01] 8261

CANON-TEST

[ 02] 05458261

CENV

[ 03] 05458281

CENV PATRICIA

[ 10]

[ 01] 8261

CANON-TEST

[ 02] 05458261

CENV

[ 03] 05458281

CENV PATRICIA

[ 05] 05458208

CENV SMD

Printing a Detailed List of One-Touch Speed Dialling Numbers

Use this procedure to print a detailed list of the One-Touch Speed Dialling numbers registered in the fax.

ACTION

DISPLAY

1

Follow steps 1 to 3 on page 5-2.

1-TOUCH SPD DIAL  
00=

- If there is a group registered in "00", use the search buttons to select a button registered for One-Touch Speed Dialling.

2

Press **SET**, then press **REPORT** to print the list.

SET      REPORT  
   

1-TOUCH SPD DIAL  
1. TELEPHONE NUMBER



## One-Touch Speed Dialling Report 2

20/02 '96	TUE	20:28	FAX	31	20	545	8264	CANON EUROPA	2001
*****									
* 1-TOUCH SPD DIAL LIST 2 *									
*****									
[ 01]	CONNECTION TEL	8261							
	CONNECTION ID	CANON-TEST							
	TX SPEED	14400bps(0)							
	TX TYPE	REGULAR TX							
[ 02]	CONNECTION TEL	05458261							
	CONNECTION ID	CENV							
	TX SPEED	14400bps(0)							
	TX TYPE	REGULAR TX							
[ 03]	CONNECTION TEL	05458281							
	CONNECTION ID	CENV PATRICIA							

## Printing a Detailed List of Coded Speed Dialling Numbers

Use this procedure to print a detailed list of the Coded Speed Dialling numbers registered in the fax.

### ACTION

### DISPLAY

1

Follow steps 1 to 3 on page 5-5.

CODED SPD DIAL  
\*00=

- If there is a group registered in "\*00", use the search buttons to select a code registered for Coded Speed Dialling.

2

Press **SET**, then press **REPORT** to print the list.

SET REPORT

CODED SPD DIAL  
1.TELEPHONE NUMBER

## Coded Speed Dialling Report 2

20/02 '96	TUE	20:29	FAX	31	20	545	8264	CANON EUROPA	2001
*****									
* CODED SPEED DIAL LIST 2 *									
*****									
[* 00]	CONNECTION TEL	00441256841300							
	CONNECTION ID	CANON AUDIO							
	TX SPEED	14400bps(0)							
	TX TYPE	REGULAR TX							
[* 01]	CONNECTION TEL	6128052011							
	CONNECTION ID	CANON AUSTRIA							
	TX SPEED	14400bps(0)							
	TX TYPE	REGULAR TX							
[* 02]	CONNECTION TEL	14167951111							
	CONNECTION ID	CANON CANADA							

# Maintenance

## Part

# 7

The fax is designed to operate with a minimum of regular maintenance, as described in this chapter.

---

# Maintaining the Fax

Use the procedures in this section to keep your fax in top working order.

## Cleaning the Fax

Clean your fax regularly to help ensure good performance.



Follow these precautions whenever you clean the fax:

- Before you clean the fax, be sure to print any faxes stored in memory.
- Do not use tissue paper, paper towels, or similar materials for cleaning; they can stick to the components or generate static charges.

## Cleaning the Outer Casing

Clean the fax's outer casing as follows:



When you unplug the fax, be sure to plug it in again as soon as possible: without power, it will retain any data in image memory for about an hour. After this, the data will be lost.

**1**

Unplug the fax.

**2**

Lightly wipe the unit's outer casing with a clean, soft, lint-free cloth moistened with water or diluted dishwashing detergent solution.



Do not use thinner, benzene, alcohol, or other inorganic solvents to clean the fax, or you can discolour it or cause it to malfunction.

**3**

Plug the fax back in.

### Cleaning the Inside of the Fax

To prevent toner powder and paper dust from accumulating and affecting the quality of the fax's printing, clean the inside of the fax periodically as follows:




When you unplug the fax, be sure to plug it in again as soon as possible: without power, it will retain any data in image memory for about an hour. After this, the data will be lost.

**1**

Unplug the fax.

**2**

Open the printer door.

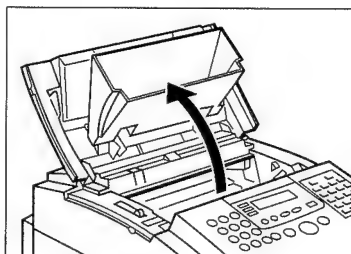


**3**

Remove the toner cartridge.

- Store the cartridge in its protective bag to avoid exposure to light.

**4**

Use a clean, soft, dry, lint-free cloth to remove any toner or paper debris from the shaded area.

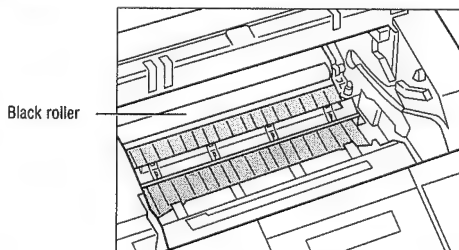

Do not touch the black roller at the back, as this may affect the print quality of your faxes.

**5**

Replace the toner cartridge.

**6**

Close the printer door.

**7**

Plug the fax back in.

### Cleaning the Scanner Components

Periodically check the scanning glass and rollers.




When you unplug the fax, be sure to plug it in again as soon as possible: without power, it will retain any data in image memory for about an hour. After this, the data will be lost.

**1**

Unplug the fax.

**2**


Open the operation panel.

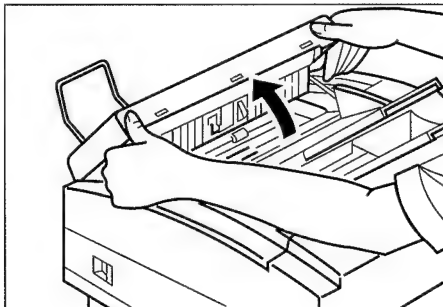

**3**


Use a soft, dry clean cloth to clean the scanning glass and rollers (shaded areas).

- If the document scanning glass and rollers are dirty, the documents you send or print will be dirty, too.
- Clean with a soft cloth that will not scratch the glass or rollers.

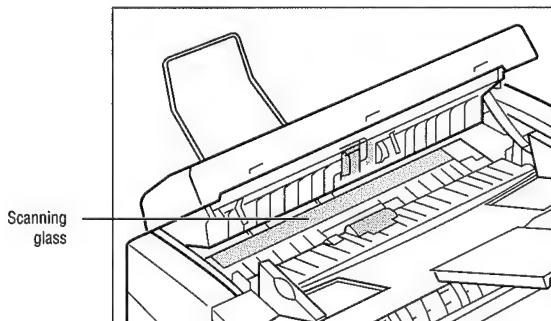


- 
- 4** Clean the shaded areas of the operation panel and the fax.

- Dirt and dust particles that collect on the underside of the operation panel also affect the quality of documents you copy and send.

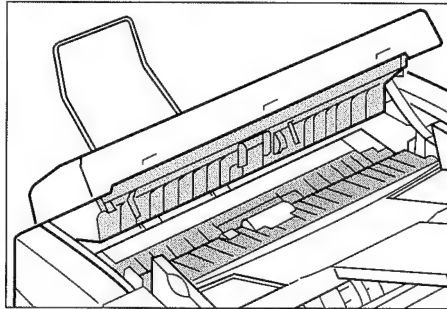

- 
- 5** Use a soft, dry clean cloth to wipe up paper dust around the rollers.

- 
- 6** When you are finished, close the operation panel by pressing it down from the centre as shown.

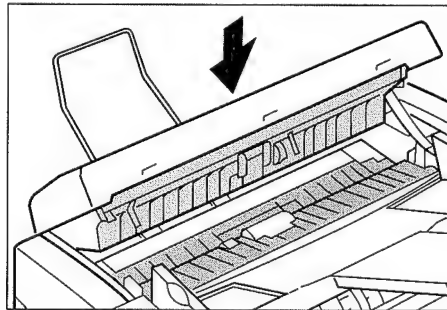

- 
- ✓ Be sure to close the operation panel until it locks into place. Otherwise the fax will not function properly.

- 
- 7** Plug the fax back in.
-



# Troubleshooting

Part

8

This part describes the troubleshooting procedures to use should a problem occur when using the fax.

---



# Problems and Solutions

Use the information in this section to solve any problems you may have when using your fax.

## Paper Jams

On occasion, the document feeding into the fax or the paper in its printing unit may misfeed or jam. If this happens, you can usually fix the problem easily using the procedures below.




You do not need to unplug the fax while clearing paper jams.

### Document Feed Jams and Misfeeds

Use this procedure if the document being fed into the fax jams or misfeeds. In this case, CHECK DOCUMENT is displayed.

1


Lift and open the operation panel.

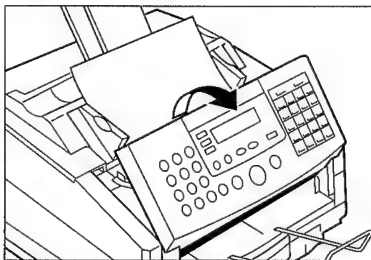

- Pulling the document without opening the operation panel may cause it to tear or become soiled.

2

With the operation panel open, remove the document by pulling it up.

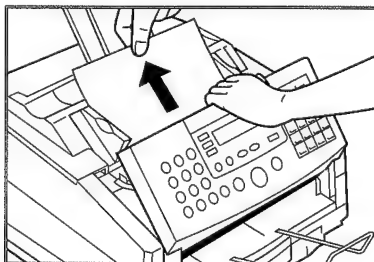

3

Close the operation panel by pressing it down from the centre.

4

Press **STOP**.



5

Reset the document as described on page 3-4.

### Recording Paper Jams


If the recording paper jams or misfeeds while you are printing or copying, check the following areas in the order described below.

Be sure to remove any documents or printed pages from the fax before removing the paper jam.

#### ■ Paper Cassette Area

**1**


Remove the paper cassette.

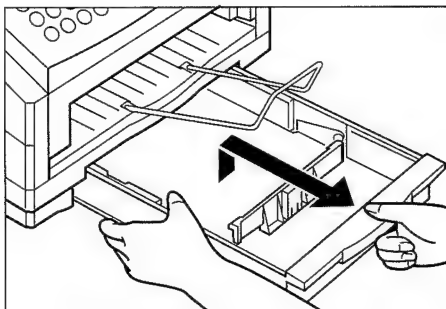

- Be careful not to drop the cassette as you pull it out.

**2**


If there is any jammed paper inside the fax, gently pull it out of the unit being careful not to tear it.

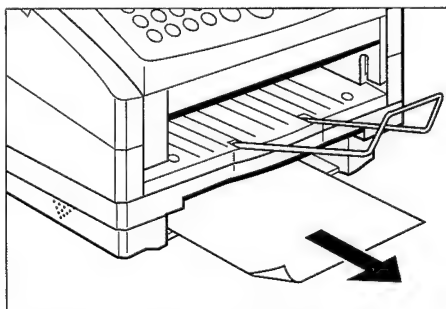

**3**

Remove the stack of paper from the cassette and do the following:

- a. Fan the stack of paper, and tap it on a flat surface to even out the stack.
- b. Reinsert the stack of paper into the cassette. Make sure all corners and edges are flat and even, that the stack is not higher than the limit mark (▼▼▼), and that it fits under the tabs on the paper selector.

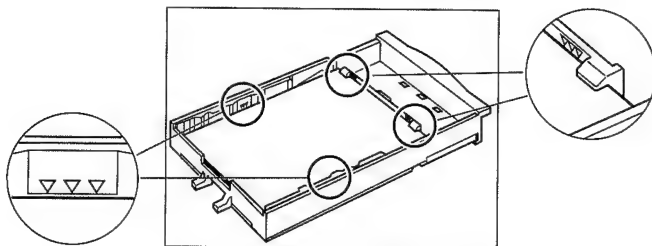

**4**

Replace the paper cassette.




- If the paper cassette jams when you try inserting it in the fax, remove it from the fax and open the printer door. Then close it and try reinserting the paper cassette.
- If the paper jam occurred while receiving a document, the remainder of the document is received in memory. Once the paper jam is cleared, the document in memory will automatically be printed.
- If the error message remains displayed, there may be more jammed paper in other areas. Check the other areas as described on the following pages.

## ■ Inside the Fax

**1**

Open the printer door by grasping it on both sides and lifting it up.


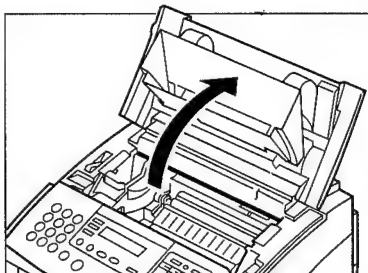
**2**

Remove the toner cartridge from the fax.


- Store the cartridge in its protective bag to avoid exposure to light.

**3**

Use the front cover release latch to open the front cover.

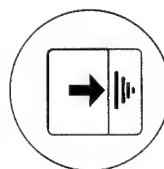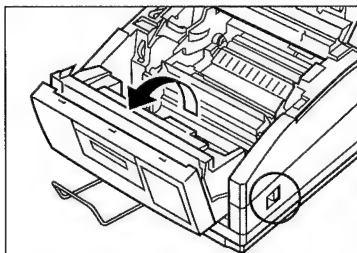

Do not open the front cover without pushing the release latch as this may cause damage to your fax. Be sure to use the front cover release latch to open the front cover.

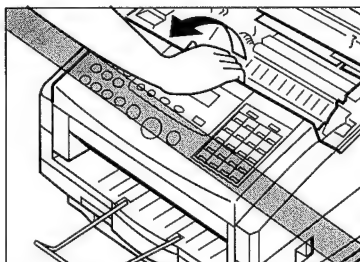


---

**4** Check where the paper is jammed.

---

**5** If the leading edge of the jammed paper is visible, gently pull it out being careful not to tear it.

---

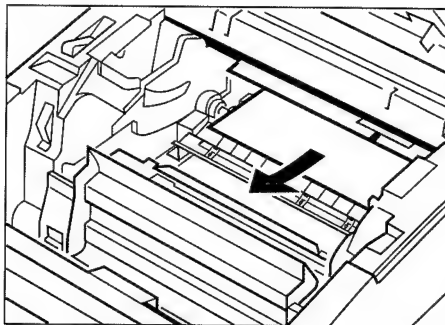


---

The toner is not yet fixed to the paper in this area; take care not to dirty yourself or the inside of the printer.


---

**6** Lower the plastic cover and gently remove any jammed paper from the unit by pulling it forward.


---

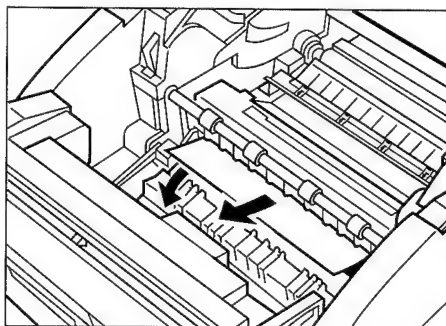


- 7** If necessary, gently pull the paper upwards to remove it from the fax.

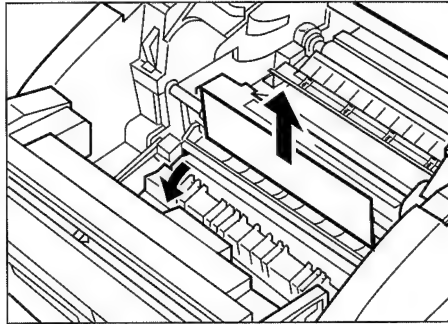

- 8** Open the rear cover.

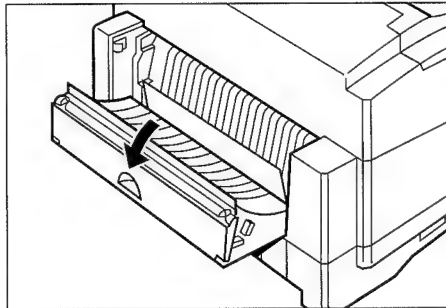

- 9** Gently pull out any jammed paper from the rear area being careful not to tear it.

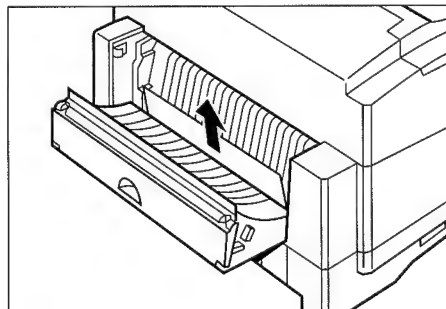

- 10** Close the rear cover.

**11**

---

Replace the toner cartridge.

---

**12**

---

Close the printer door and front cover.

---

- If the paper jam has been cleared completely, the fax will work normally.

## Problems Sending Faxes

### The document does not feed properly

- Remove the document, stack it, and place it back in the automatic document feeder (ADF). For multipage documents remove the document and tap the edge of the stack on a flat surface to even the edges. Then place it back in the automatic document feeder (ADF) until it stops. (→p. 3-4)
- Clean the fax roller as described on page 7-4.
- Make sure the operation panel is properly closed. (→p. 7-5, step 6)

### Can't send a fax

- Make sure you get a dial tone when you lift the handset. If there is no dial tone, make sure the fax is properly connected as described on page 2-13. If there is still no dial tone, contact your local telephone company.
- Make sure the dialling method (tone or pulse) is set correctly. See page A-3, "TEL LINE TYPE" and page 2-36 for details on setting.
- If you used a One-Touch or Coded Speed Dialling button, check its contents to make sure they are correct.
- If using memory sending, make sure no documents are waiting to be sent ahead of your document or that your document was not deleted from memory.
- The unit may have overheated and shut itself down. If you suspect this, turn it off and let it cool for several minutes, then try using it again.
- Print an activity report and check for an error code. (→p. 6-2)
- Call the person you're sending the fax to and make sure their fax machine has paper in it and is ready to receive faxes.
- Make sure the receiving fax machine is a G3 machine.
- If none of the above seem to help, try turning the fax off. Wait five seconds and turn it on again.

### The faxes you send are spotted or dirty

- Find out whether the problem is in your fax by making a copy with it: if the copy is clear, the receiving fax machine may be causing the problem; if the copy is spotted or dirty, clean the inside of your fax (→p. 7-3)

### Can't send using error correction mode (ECM)

- Make sure your fax is set for ECM sending. (→p. A-7)
- Make sure the receiving fax machine supports ECM; many do not. If the receiving machine does not support ECM, the fax automatically sends the fax in normal mode.

### Errors frequently occur during sending

- Lower the speed at which the unit sends faxes in the TX START SPEED setting of the SYSTEM SETTINGS (14400 bps to 9600 bps for example). (→p. A-13)  
If lowering the speed solves the problem for a number registered in a One-Touch Speed Dial button or a Coded Speed Dial code, register this speed in the transmission settings so that future documents are also sent at this speed. (→p. 5-15)



## Problems Receiving Faxes

### The recording paper jams frequently

- Make sure the recording paper and the paper cassette are properly set as described on page 2-22.

### The fax doesn't automatically switch between phone and fax transmissions



- Make sure the ANS HOOK UP and MANUAL lamps are off. If necessary, press the button below them repeatedly until both are off.
- Make sure the receiving mode is set to FAX/TEL AUTO SW. See page A-8 for details on setting.

### The fax won't receive faxes automatically

- Make sure you have printed out or deleted any documents in the fax's memory.
- Make sure the fax is set to receive automatically: press the button below the ANS HOOK UP and MANUAL lamps repeatedly until both lamps are off.
- Make sure the paper cassette has paper in it.
- Check the display for an error message. (→p. 8-14)
- Make sure all phone line connections are secure. (→p. 2-13)
- Print an activity report and check for an error code. (→p. 6-2)
- Make sure the receiving mode is set to AUTO RX.

### The fax won't receive faxes manually

#### (Optional handset or extension phone connected to the fax machine)

- You may have pressed  (START/COPY) after hanging up the handset. When receiving a fax manually, you must hang up the handset after pressing  (START/COPY).
- Check the display for an error message. (→p. 8-14)
- Print an activity report and check for an error code. (→p. 6-2)

### The fax won't receive using ECM

- Make sure the fax is set for ECM receiving. (→p. A-8)
- Make sure the sender's fax machine supports ECM. If it doesn't, the fax is sent in normal mode without error checking.

### Errors frequently occur during receiving

- Lower the speed at which the unit receives faxes in the RX START SPEED setting of the SYSTEM SETTINGS (14400 bps to 9600 bps for example). (→p. A-13)

If the faxes you receive don't print out properly, see "Problems Printing," below.

## Problems Printing

If the fax's print quality becomes unsatisfactory, consider the following suggestions:

- Most paper has one side that provides better print quality than the other. If the print quality is poor, try turning the paper over and printing on the other side.
- If the characters and images are blurred, make sure you're using the correct type of paper, and printing in the correct printing area.
- If the reverse side of the printed page is smudged, the inside of the fax is probably soiled with toner powder. Clean the inside of the unit with clean soft, dry, lint-free cloth. (→p. 7-3)
- If printed images are blotched or uneven, the problem may be noise in the phone/fax lines. Try using ECM receiving (though if the lines are very busy or in poor condition, you may have to ask the sender to try again). See page A-8 for details on setting ECM.

Also, remember that the sending fax machine usually determines the quality of the fax. To see if your fax is the cause of the problem, use it to make a copy: if the copy is clear, the sending fax machine may be the problem; if the copy is not clear, the fax may need to be cleaned.

### Nothing prints


- Make sure the seal has been removed from the toner cartridge.
- Replace the toner cartridge.
- If the following print quality problems occur over the entire printing area, try the remedies listed below.

Print	Most Probable Cause	Remedy
Smudged	Wrong paper type	Try a different type
Blurred	Wrong paper type	Try a different type
Faded	Toner is low or unevenly distributed	See page 8-12
White streaks	Toner is low or unevenly distributed	See page 8-12

## Vertical White Streaks

Vertical white streaks may appear when the error message REPLACE CARTRIDGE is displayed. This indicates that the toner level is low or that the toner is unevenly distributed. If this happens, follow these steps:

- 1** Open the printer door and take out the toner cartridge.
- 2** Gently rock the cartridge from side to side five or six times to evenly distribute the toner inside.

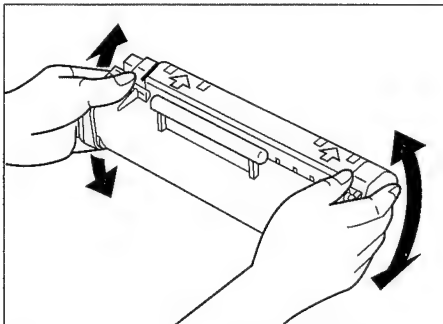

- 3** Put the cartridge back into the fax.
- 4** Close the printer door.

If the problem continues, the cartridge needs to be replaced. See page 2-17, "The Toner Cartridge" for details on replacing the FX3 toner cartridge.

## Miscellaneous Problems

### The telephone doesn't work

- Make sure the phone line is correctly connected to the fax. (→p. 2-13)
- Make sure the fax is set for the type of line you have (pulse or tone). (→p. 2-36, A-3)


### The phone disconnects while you are talking

- If the ANS HOOK UP lamp is lit, press the button below it repeatedly to turn it off. The ANS HOOK UP lamp should light only when an answering machine is connected and turned on.

### Nothing appears in the display

- Make sure the fax is plugged in.

### Can't make copies

- Make sure the  (HOOK) button is not depressed. Press it to release if needed.
- Make sure the handset is in its hook.
- When making multiple copies and MEMORY FULL is displayed: There is not enough memory for the whole document. Divide your document into several parts and copy each part separately.  
If this message occurs when your document is only one page long, we recommend you increase the fax's memory with the optional memory board.

### Can't poll other units

- Make sure the other fax machine is ready to send.

### The paper cassette can not be inserted

- Make sure there is no jammed paper inside the fax. Open the printer door, then close it and try reinserting the paper cassette.

### The toner cartridge can not be removed

- Remove the cartridge following the instruction described on page 2-18.


# Display Messages and Meanings

The following pages show the messages that may appear on your fax's display, along with the meaning of each, and what to do if that message appears.

Message	Error #	Meaning	Solutions
AUTO REDIAL		The receiving fax was busy, and the fax is redialling.	Refer to page 3-8 to cancel the transmission if you want.
BUSY/NO SIGNAL	#005	The other party did not answer.	Start again from the beginning.
	—	The other party is not using a G3 unit.	Contact the other party and have them send or receive the document using a G3 machine.
	#018	The other party does not answer, even after redialling.	Wait a while and try again. If you still can't send, the receiving fax may be off.
		The touch tone/rotary pulse setting on your fax is incorrect.	Set your fax to the setting that matches your telephone line. (→p. 2-36)
		The receiving fax did not answer within 35 seconds.	Contact the other party and have them check their fax. You can try to send the document manually. For an overseas call, add pauses at the end of the registered number. (→p. 5-18)
CANNOT DO POLLING RX	#021 #008	You can not poll.	If the other party is using a Canon fax machine, ask him to set the polling ID of his fax to 255. (→p. 5-25)
CHECK DOCUMENT		A page may be jammed in the automatic document feeder (ADF). Polling error. The document has not been fed into the automatic document feeder (ADF) correctly on the sender's fax machine.	Remove the jammed page and try again. (→p. 8-2) Ask the sender to remove the document and reinsert it properly in the fax machine. (→p. 3-4)
CHECK PAPER SIZE	—	The recording paper size loaded in the paper cassette and that specified in the fax printer setup are different.	Set the correct paper size in the FAX PRINTER SETUP. (→p. A-11)
CHECK PRINTER	—	Fax malfunction.	Press  (STOP) or unplug the fax, then plug it in again. If the display doesn't change, call for service.
CHECK PRT/FRNT COVRS	—	The printer door or front cover is open.	Make sure that the printer door and front cover are completely closed.
COMMUNICATING PLEASE WAIT	—	You tried to use manual sending while the fax was sending from memory.	Wait until the fax is sent, then try again, or use memory sending. (→p. 3-6)
DIALING	—	The fax is dialling the receiving fax machine.	Press  (STOP) if you want to cancel the transmission.
DOCUMENT READY	—	The document is in the automatic document feeder (ADF) and ready for faxing or copying.	Send the fax or make a copy, or remove the document from the automatic document feeder (ADF).

Message	Error #	Meaning	Solutions
DOCUMENT TOO LONG	#003	The document is longer than 1 m.	Use a copy machine to make a reduced copy of the document. Then send again.
ECM RX	—	The fax is receiving a fax using ECM.	ECM transmissions may take longer than normal transmissions. Try turning it off if you need to receive quickly, or if you know your local phone lines are in good condition.
ECM TX	—	The fax is sending a fax using ECM.	ECM transmissions may take longer than normal transmissions. Try turning it off if you need to transmit quickly, or if you know your local phone lines are in good condition.
ERASING END	#995	The document was deleted from the memory.	—
HANG UP PHONE	—	The optional handset or the extension telephone is off the hook.	Make sure the handset is set properly in its cradle.
INSTALL CARTRIDGE	—	The toner cartridge is not installed.	Install the cartridge, making sure it is all the way in. See page 2-17 for replacing the toner cartridge.
MEMORY FULL	#037	The fax's memory is full because it has received too many documents or a very detailed document.	Print out any documents that are stored in memory. Then start the operation again.  If the memory contains any faxes you don't need, delete them.  You can not receive a fax in memory if the fax was scanned with fine graphic images.
MEMORY FULL PLEASE WAIT	—	The fax's memory is full because you tried to send too many pages at once.	Divide the document and send each part separately. Turn AUTO HALFTONE OFF. (→p. 3-13)
	—	The fax is sending a fax from memory and its memory is full.	Wait until the fax is sent. The fax continues to send the fax as memory becomes available.
MEMORY IN USE nn%	—	Shows the percentage of memory currently in use.	If you need more space, print and check the memory list, then clear any unnecessary documents.
NO ANSWER		The receiving fax machine does not answer.	Make sure you dialed the correct number. Try again later.
NO RX PAPER	#012	The receiving fax machine is out of paper, or its memory is full.	Call the other party and ask them to put paper in their machine, or to clear their fax machine's memory.
NO TEL #	#022	The button you pressed has no number registered for One-Touch Speed Dialling, Coded Speed Dialling, or Group Dialling.	Print a list of registered numbers and make any corrections needed, then try again.

## Display Messages and Meanings

Message	Error #	Meaning	Solutions
NOT AVAILABLE NOW	#025	In manual sending (using OFF HOOK) you tried to use a One-Touch or Coded Speed Dial number that has a group registered.	In manual sending you can not send a document to multiple destinations. Send the document to each location at a time.
OUTPUT TRAY FULL		The face-down slot is full with printed pages.	Remove the pages from the face-down slot.
PLEASE WAIT	—	The fax is warming up.	Wait until you see the standby mode message, then begin.
REC. PAPER JAM	#009	The fax has a paper jam.	Clear the paper jam. (→p. 8-2)
RECEIVED IN MEMORY	—	The fax received a fax in memory because the paper or toner ran out.	Change the cartridge or add recording paper, then print the fax from memory.
REPLACE CARTRIDGE	—	The toner cartridge is out of toner.	Replace the toner cartridge. (→p. 2-17)
START AGAIN	—	An error occurred on the phone line or in the system.	Start the procedure again from the beginning.
	#080	The other party might not have set the subaddress.	Call the other party and check to see if the subaddress has been set.
	#081	The other party might not have set the password.	Call the other party and check to see if the password has been set.
	#102	The subaddress and/or password does not match the settings on the other party's fax unit.	Call the other party and check to see if the subaddress and the password are the same as those of the other party.
SUPPLY REC. PAPER		The fax is out of paper.	Add more paper to the paper cassette. Make sure the stack is below the limit mark (▼▼▼). (→p. 2-24)
TX/RX CANCELLED	—	You pressed the  (STOP) button to cancel the current operation.	—
TX/RX NO. nnnn	—	When the fax sends or receives a fax, it assigns it a unique identification number.	Write the number down if you'll need it later.

# The Menu System

## Appendix

# A

This appendix summarizes the FAX-L300's menu system. Use this as a guide to help customize how your fax operates.

---



# The Menu System

The fax's menu system allows you to customize the way your fax works. The following pages outline the fax's various menus and settings, and shows how to use them.



The default settings in the following tables are shown by asterisks (\*).

## To Access SPEED DIAL SETUP:

### ACTION

### DISPLAY

1

 
Press **FUNCTION** and **DATA REGISTRATION**.



DATA REGISTRATION  
1.SPEED DIAL SETUP

2

Press **SET**, then use the search buttons to display the item you want to set or change.



- For more details on registering numbers, see page 5-2.


## To Access USER SETTINGS:
 
### ACTION

### DISPLAY

1

Press **FUNCTION** and **DATA REGISTRATION**.



DATA REGISTRATION  
1.SPEED DIAL SETUP

2

Use the search buttons to display 2. USER SETTINGS.



DATA REGISTRATION  
2.USER SETTINGS

3

 
Press **SET**, then use the search buttons to display the item you want to set or change (see the following table).



USER SETTINGS  
3.UNIT NAME

4

Press **SET**, then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information.



5

Press **SET**.


 


 
 





 


## USER SETTINGS

Menu Item Sub-item	Description	Options	Comments
1. DATE & TIME	Enter the date and time.	—	Enter the time (in 24-hour form) and date with the numeric buttons.
2. UNIT TELEPHONE #	Enter your fax number.	—	Enter up to 20 digits.
3. UNIT NAME	Enter your name or your company name.	—	Enter up to 24 characters.
4. TX TERMINAL ID	Prints your fax information at the top of each fax you send.	ON*, OFF	ON: Prints your fax information. OFF: Does not print your fax information.
1. TTI POSITION	Select the position of the TX Terminal ID on your outgoing fax.	OUTSIDE IMAGE*, INSIDE IMAGE	Set where you want the information to print on the faxes you send.
2. TELEPHONE# MARK	Choose the prefix that will appear before the fax number.	FAX*, TEL	Example: FAX 1-800-555-1234 TEL 1-800-555-1234
5. AUTO HALFTONE	Select the type of document you are going to scan. (Can not be set for copying.)	ON*, OFF	Select auto halftone for documents that contain halftone images (such as photographs).
6. SCANNING CONTRAST	Select a setting to fine-tune the contrast of the faxes you send.	DARKER, STANDARD*, LIGHTER	Choose the setting for the type of document you send most often.
7. OFFHOOK ALARM {Not ECG}	Turn the handset off-hook alarm on or off.	ON*, OFF	You may want to turn this off if you work in a quiet office.
8. VOLUME CONTROL	Adjust the volume of the fax's speaker for F/T switching, the keypad touch beep, and alarms.		Adjust the volume to suit your office environment.
1. CALLING VOLUME		MIN, MID*, MAX	
2. KEYPAD VOLUME		OFF, MIN, MID*, MAX	
3. ALARM VOLUME		OFF, MIN, MID*, MAX	
9. RX CALL LEVEL	Adjust the fax's volume sound level of incoming calls for F/T switching.	STANDARD*, HIGH	Adjust the volume to suit your office environment.
10.TEL LINE TYPE	Choose the dialling method.	TOUCH TONE*, ROTARY PULSE (UK) TOUCH TONE, ROTARY PULSE* (EC)	Choose the setting that matches your phone line.
11.R-KEY SETTING	Sets the type of the PBX through which your fax is connected.	PSTN*, PBX	PSTN: Your fax is connected to the outside line. PBX: Your fax is connected through a PBX. You can set the type of the PBX among PREFIX, HOOKING, and EARTH CONNECTION. If you select PREFIX, you can set the number up to 20 digits that will access the outside line. Be sure to enter a pause (P) after the prefix number.
12.M-KEY SETTING (UK only)	Sets an access code and an ID code for the 2300 service of Mercury Communications Limited.	—	You can enter up to 20 digits for an access code and an ID code.

\*Default

## To Access REPORT SETTINGS:

 
ACTION	DISPLAY
<b>1</b> Press <b>FUNCTION</b> and <b>DATA REGISTRATION</b> . <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <b>FUNCTION</b>   </div> <div style="text-align: center;"> <b>DATA REGISTRATION</b>   </div> </div>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DATA REGISTRATION  1.SPEED DIAL SETUP </div>
<b>2</b> Use the search buttons to display 3. REPORT SETTINGS. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DATA REGISTRATION  3.REPORT SETTINGS </div>
<b>3</b> Press <b>SET</b> , then use the search buttons to display the item you want to set or change (see the following table). <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <b>SET</b>   </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> </div>	<div style="border: 1px solid black; padding: 5px; text-align: center;"> REPORT SETTINGS  2.RX REPORT </div>
<b>4</b> Press <b>SET</b> , then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information. <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <b>SET</b>   </div> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <div style="border: 1px solid black; padding: 5px;">  </div> </div>	
<b>5</b> Press <b>SET</b> . <div style="text-align: center;"> <b>SET</b>   </div>	

## REPORT SETTINGS


Menu Item	Description	Options	Comments
Sub-item			
1. TX REPORT	Set whether the fax prints an activity report for faxes it sends.	PRINT ERROR ONLY*, OUTPUT YES, OUTPUT NO	PRINT ERROR ONLY prints a report only when an error occurs during sending. OUTPUT YES: Prints a report every time you send a fax or after redialling is complete. OUTPUT NO: Prints no report when sending.
REPORT WITH TX IMAGE	If you choose OUTPUT YES or PRINT ERROR ONLY, set whether the first page of the fax also prints.	ON*, OFF	Use the printed first page for filing and reference.
2. RX REPORT	Set whether the fax automatically prints an activity report when it receives a fax.	PRINT ERROR ONLY, OUTPUT YES, OUTPUT NO*	OUTPUT YES: Prints a report every time the fax receives a fax. OUTPUT NO: Prints no reports when receiving. PRINT ERROR ONLY prints a report only when an error occurs when receiving.
3. ACTIVITY REPORT	Set how and when the fax automatically prints activity management reports.		
1. AUTO PRINT	Print a report automatically after every 40 transactions.	ON*, OFF	ON: A report prints after every 40 transactions. OFF: No report is printed automatically.
2. TX/RX SEPARATE	Set how the report will be printed.	ON, OFF*	ON: Transmitted faxes and received faxes are included in separate reports. OFF: All transactions are included in a single report.

\*:Default

## To Access SEND (TX) SETUP:

ACTION	DISPLAY
<b>1</b> Press <b>FUNCTION</b> and <b>DATA REGISTRATION</b> .	<div data-bbox="351 277 539 328"> <div>FUNCTION</div> <div>DATA REGISTRATION</div> </div> <div data-bbox="799 277 1034 328">           DATA REGISTRATION 1.SPEED DIAL SETUP         </div>
<b>2</b> Use the search buttons to display 4. SEND (TX) SETUP.	<div data-bbox="351 386 497 437"> <div>^</div> <div>v</div> </div> <div data-bbox="799 399 1034 450">           DATA REGISTRATION 4.SEND (TX) SETUP         </div>
<b>3</b> Press <b>SET</b> , then use the search buttons to display the item you want to set or change (see the following table).	<div data-bbox="351 536 591 587"> <div>SET</div> <div>^</div> <div>v</div> </div> <div data-bbox="799 536 1034 587">           SEND (TX) SETUP 1.ECM TX         </div>
<b>4</b> Press <b>SET</b> , then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information.	<div data-bbox="351 673 573 724"> <div>SET</div> <div>^</div> <div>v</div> </div> <div data-bbox="584 673 669 788">  </div>
<b>5</b> Press <b>SET</b> .	<div data-bbox="351 855 423 906"> <div>SET</div> </div>

**SEND (TX) SETUP**

Menu Item Sub-item	Description	Options	Comments
1. ECM TX	Turn Error Correction Mode (ECM) for transmissions on or off.	ON*, OFF	ON: Transmitting is done in error correction mode. OFF: Transmitting is done without error correction.
2. MID PAUSE SET	Set the length of the pause entered by each press of the PAUSE button.	01-15 SEC (02*) (EC) 04-11 SEC (04*) (UK, HK)	
3. AUTO REDIAL	Set whether the fax automatically redials when receiving line is busy or when an error occurs.	ON*, OFF	If you turn AUTO REDIAL on, you can make the additional settings below.
1. REDIAL TIMES	Set the maximum number of redials.	01-15 (02*) TIMES 01-02 (02*) (AUS) 01-03 (02*) (UK, HK) 01-04 (02*) (IRE) 01-05 (02*) (NZ) 01-10 (02*) (SIN)	
2. REDIAL INTERVAL	Set how long the fax waits between redialings.	02-99 (02*) MIN 01-99 (02*) (AUS, HK, MAL) 06-99 (02*) (NZ)	
3. TX ERROR RESEND	Set whether the fax redials if an error occurs while sending.	ON*, OFF	ON: The fax redials after a sending error. OFF: The fax does not redial.
RESEND TX FROM	Set which pages to resend if TX ERROR RESEND is on.	ERROR & 1ST PG*, ERROR PAGE, ALL PAGES	ERROR PAGE: Resends only the pages after the error occurred on. ERROR & 1ST PG: Resends the first page and the pages after the error occurred on. ALL PAGES: Resends all the document pages.
4. ERASE FAILED TX	Set whether the fax in memory is erased if an error occurs during sending.	ON, OFF* (EC) ON*, OFF (UK, GER)	ON: The fax is automatically erased after being successfully sent (originally an error occurred during sending.) OFF: The document will remain in memory even if an error occurs during sending.
5. AUTO START TX	When sending to multiple numbers, set whether the fax starts scanning the document five seconds after the first number is entered, and ten seconds after the second and all subsequent numbers. If the machine begins scanning before you have entered all numbers, you must scan the document again for those missed numbers.	ON*, OFF	ON: The fax scans the document in five or ten seconds. OFF: The fax does not scan the document in 5 or 10 seconds. Press  (START/COPY) to scan the document. Otherwise, the fax will return to standby mode after 60 seconds.

\*:Default

## To Access RECEIVE (RX) SETUP:

- |   | ACTION   | DISPLAY                                  |
|---|--|--|
| 1 | Press <b>FUNCTION</b> and <b>DATA REGISTRATION</b> .   | DATA REGISTRATION<br>1.SPEED DIAL SETUP  |
| 2 | Use the search buttons to display 5. RECEIVE (RX) SETUP.   | DATA REGISTRATION<br>5.RECEIVE(RX) SETUP |
| 3 | Press <b>SET</b> , then use the search buttons to display the item you want to set or change.                                    | RECEIVE (RX) SETUP<br>2.RX MODE          |
| 4 | Press <b>SET</b> , then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information. |  |
| 5 | Press <b>SET</b> .   |  |

## RECEIVE (RX) SETUP

Menu Item Sub-item	Description	Options	Comments
1. ECM RX	Turn Error Correction Mode (ECM) receiving on or off.	ON*, OFF	ON: Receiving is done in error correction mode. OFF: Receiving is done without error correction.
2. RX MODE	Set how the fax handles incoming calls.	AUTO FAX RX*, FAX/TEL AUTO SW,	AUTO FAX RX: Treats all calls as faxes. FAX/TEL AUTO SW: Switches between fax/phone receiving automatically.

Menu Item	Description	Options	Comments
Sub-item			
2. RX MODE (Cont.)			
If you select FAX/TEL AUTO SW, you can also set items 1. to 3. below:			~
1. F/T RING TIME	Set how long the fax rings when it receives a phone call.	10-45 SEC (22*)	Set the time of fax rings.
2. F/T SWITCH ACTION	Set the response when no one lifts the handset within the specified time in 1. F/T RING TIME.	RECEIVE*, DISCONNECT	RECEIVE: the fax switches to receive mode. DISCONNECT: the fax disconnects the call.
3. OUTGOING MESSAGE	Sets the language of the outgoing message to send when a call is received.	OFF*, ON {EC} ON* {UK}	If you select ON {EC}, you can select one or two languages for the outgoing message: English, French, Spanish, German, Italian, Dutch, Finnish, Portuguese, Norwegian Swedish, Danish, and Greek. {UK, EC}
3. FAX INCOMING RING	Set whether the fax rings when it receives a fax.	ON, OFF*	ON: The fax rings when it receives a fax. OFF: The fax does not ring when it receives a fax.
RING COUNT	Set how many times the fax rings when it receives a fax.	01-99 times (02*)	
4. ANS/FAX SWITCH	Set whether the fax switches to automatic fax receive mode when the caller does not talk.	ON*, OFF	ON: The fax switches to automatic fax receive mode when the answering machine is turned on.
ANS/FAX SW TIME	Set how long the fax waits before switching to automatic fax receiving mode when the caller does not talk.	01-99 SEC (06*)	Set a time from 01 to 99 seconds.
5. MAN/AUTO SWITCH	Set whether the fax switches from manual receive mode to document receive mode after ringing for a set time.	ON, OFF*	ON: The fax switches to document receive mode after ringing for a set time. OFF: In manual receive mode, the fax does not switch to document receive mode.
RING TIME	Set how long the fax rings before switching to document receiving.	01-99 SEC (10*)	Set a time from 01 to 99 seconds.
6. REMOTE RX	Set whether remote receiving is on or off.	ON*, OFF	With ID #remote receiving ON, you can dial a number code on a remote extension to receive a fax.
REMOTE RX ID	Lets you change the remote receiving ID (ID CALL #).	00-99 (25*)	Enter a new ID from 00 to 99.
7. MEMORY RX	Set whether the fax stores the reminder of an incoming fax in memory if paper runs out during reception.	ON*, OFF	ON: The fax stores the remainder of the fax if paper runs out. OFF: The fax does not store the remainder of the fax if paper runs out.
8. RX PAGE FOOTER	Sets the fax to print the time a document is received, the transaction number, page numbers, and other useful information.	ON, OFF*	OFF: Prints no footer information ON: Prints footer information

\*:Default



## To Access FAX PRINTER SETUP:

 



 

 
 
- |   | ACTION   | DISPLAY                                  |
|---|--|--|
| 1 | Press <b>FUNCTION</b> and <b>DATA REGISTRATION</b> .   | DATA REGISTRATION<br>1.SPEED DIAL SETUP  |
| 2 | Use the search buttons to display 6. FAX PRINTER SETUP.  | DATA REGISTRATION<br>6.FAX PRINTER SETUP |
| 3 | Press <b>SET</b> , then use the search buttons to display the item you want to set or change.                                    | FAX PRINTER SETUP<br>4.TONER SUPPLY LOW  |
| 4 | Press <b>SET</b> , then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information. |  |
| 5 | Press <b>SET</b> .   |  |

## FAX PRINTER SETUP

Menu Item Sub-item	Description	Options	Comments
1. SELECT PAPER SIZE	Select size of paper being used.	LTR, LGL, A4*	Select either Letter-, Legal-, or A4-size paper. The paper cassette needs to be adjusted for paper sizes other than A4. For more details, contact an authorised Canon Facsimile Service Dealer.
2. AUTO RX REDUCTION	Reduce received faxes to fit on the recording paper.	ON*, OFF	ON: Documents are reduced to fit the recording paper. OFF: Documents are not reduced to fit the recording paper. In this case, one page may be printed on two pages.
3. TONER SAVER	Set whether economy print is on or off. If set to on, you can print about twice as many pages.	ON, OFF*	ON: Decreases the amount of toner used during printing. (Note: With this setting, print quality may deteriorate even before the toner cartridge runs out.) OFF: Prints normally.
4. TONER SUPPLY LOW	Determine if printing continues when the toner level drops in the cartridge.	RECEIVE IN MEMORY*, PRINT AUTOMATICALLY	RECEIVE IN MEMORY: Receives the documents in memory as soon as the toner level in the cartridge is low. KEEP PRINTING: Continues printing even after the toner level in the cartridge is low. (Note: With this setting, print quality may deteriorate even before the toner cartridge runs out.)

\*:Default

## To Access SYSTEM SETTINGS:

- | ACTION   | DISPLAY  |
|--|--|
| <b>1</b> Press <b>FUNCTION</b> and <b>DATA REGISTRATION</b> .<br>   |  |
| <b>2</b> Use the search buttons to display 7. SYSTEM SETTINGS.<br>  |  |
| <b>3</b> Press <b>SET</b> , then use the search buttons to display the item you want to set or change.<br>                                    |  |
| <b>4</b> Press <b>SET</b> , then use the search buttons to select menu items and sub-items, and the numeric buttons to enter information.<br> |  |
| <b>5</b> Press <b>SET</b> .<br>   |  |

## SYSTEM SETTINGS

Menu Item	Description	Options	Comments
Sub-item			
1. UN/LOCK PHONE	Restricts sending documents and dialling (with the optional handset or extension telephone). Does not restrict incoming calls.		After a password is set, you have to enter it before you can access the menu below.
1. PASSWORD	Register a password.	0000-9999	Set a four-digit password.
2. LOCK PHONE	Lets you restrict sending documents and dialling.	ON, OFF*	OFF: Anyone can send documents or dial normally. ON: No one can send documents or dial until the setting is set to OFF.
2. RX RESTRICTION	Enable/disable reception that is restricted to only numbers registered in your fax for One-Touch or Coded Speed Dialling to avoid receipt of "junk" mail.	ON, OFF*	OFF: Anyone can dial your fax and send a document. ON: A party can dial your fax and send a document only if their number is registered on your fax speed dialling.
3. DATE FORMAT	Set the format used for dates displayed on the fax and printed on faxes you send.	DD/MM 'YY*, MM/DD YY, 'YY MM/DD	YY: Year MM: Month DD: Day
4. DISPLAY LANGUAGE	Set the language for the message displayed in the LCD during operation of the fax.	ENGLISH*, FRENCH, SPANISH, ITALIAN, FINNISH, GERMAN, DANISH, SWEDISH, DUTCH, NORWEGIAN, PORTUGUESE, SLOVENE	Choice of 12 languages.
5. TX START SPEED	Set the transmission speed used to send faxes.	14400 bps*, 9600 bps, 7200 bps, 4800 bps, 2400 bps	The higher the setting, the faster the transmission. If you experience problems when sending faxes, try a lower setting.
6. RX START SPEED	Set the speed used to receive faxes.	14400 bps*, 9600 bps, 7200 bps, 4800 bps, 2400 bps	The higher the setting, the faster the fax is received. If transmission errors occur frequently, set a lower speed.

\*:Default



# Specifications

## Appendix

# B

The specifications for the FAX-L300 are listed in this section.

---

# Specifications

<b>Document size:</b>	Maximum width	259 mm
	Minimum width	146.5 mm
	Minimum length	105 mm
<b>Effective image size:</b> (When scanning)	Width (A4) 208 mm	
<b>Recording paper size:</b>	Width (A4) 210 mm	
<b>Transmission time:</b>	ECM-MMR	approx. 6 sec./page*
	G3 MR Standard mode	approx. 12 sec./page*
	G3 MH Standard mode	approx. 15 sec./page*
<b>Scanning line density:</b>		
Horizontal	8 dots/mm	
Vertical	Standard	3.85 line/mm
	Fine	7.7 line/mm
<b>Scanning method:</b>	Solid state electronic scanning by contact image sensor	
<b>Recording method:</b>	Laser beam printing	
<b>Applicable lines:</b>	Subscriber's telephone circuit (PSTN)	
<b>Auto dial functions:</b>	One-Touch Speed Dialling (Registration for 20 numbers)	
	Coded Speed Dialling (Registration for 100 numbers)	
<b>Power source:</b>	200-240 V/50-60 Hz	
<b>Power consumption:</b>	Standby	approx. 6 W
	Operation	approx. 540 W (20% of document black copy)
<b>Operating environment:</b>	Temperature	10-32.5°C
	Humidity	20%-80% RH
<b>Weight:</b>	Approx. 12 kg	
<b>Dimensions:</b> (W x D x H)	383 mm x 445 mm x 269 mm	
	(Without optional handset or trays)	
<b>Image memory capacity</b> (transmission/reception)	Standard: 42 pages*	
	138 pages* (with 2 MB extension memory)	

\* Based on Canon FAX Standard Chart No. 1, standard mode

Specifications subject to change without notice.

# Options

Appendix

C




# Handset

You may want to attach a handset to your fax unit instead of using an extension telephone.

## Package Contents

Make sure you have the following items. If anything is damaged or missing, notify your Canon dealer immediately.

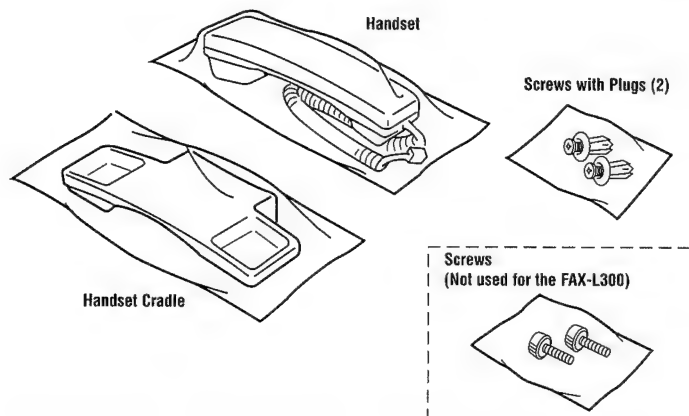


The two screws with a plastic white head are not for use with this fax model. You only need the two screws with plugs provided.

## Attaching the Handset to the Fax


To attach the handset to the FAX-L300 fax, follow these steps:

1


Use a screwdriver to remove the two covers on the left side of the fax unit.

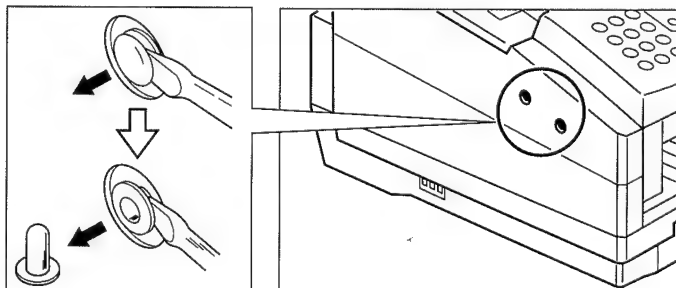


- 2** Remove the plugs from the screws and insert them in the holes on the handset cradle.

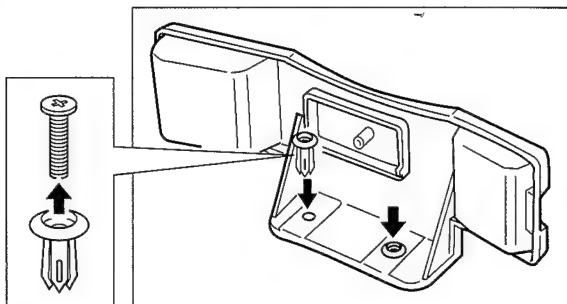


- 3** Insert the plugs with the handset cradle in the holes on the fax.

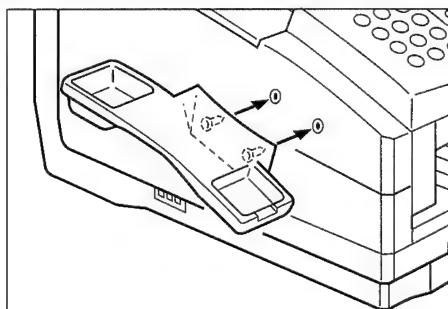


- 4** Insert the screws into the plugs and push them in with your finger.

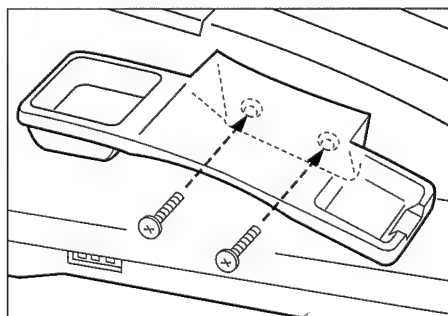


If you can't push the screws in with your finger, use a Phillips screwdriver.

- 
- 5** Connect the handset cord to the input jack marked  on the left side of the fax.
- 

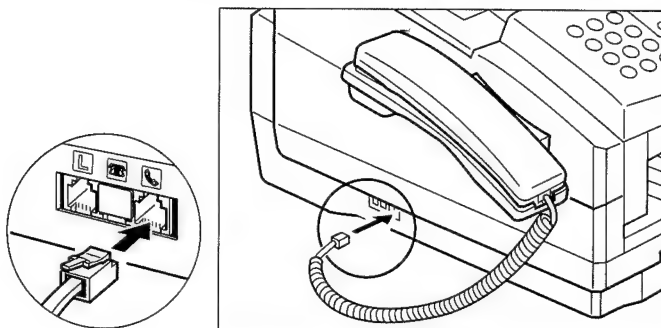


When carrying the fax unit, do not lift it by the handset cradle as it may break.

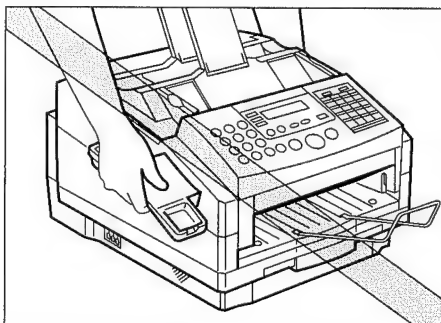


# Memory Board

You may want to increase your fax's memory if you send, receive or copy a lot of complex graphics. You can increase the fax's memory by adding a 2MB memory board.

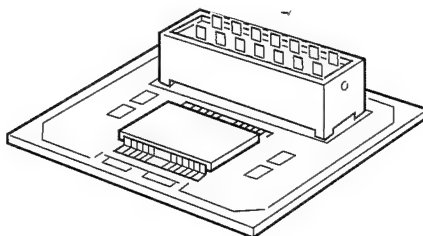

- Before touching the memory board, remove any static electricity from your hands by touching a grounded metal object. Static electricity can damage the memory board.
- Hold the edges of the memory board. Do not touch the delicate electronic circuitry with your fingers.

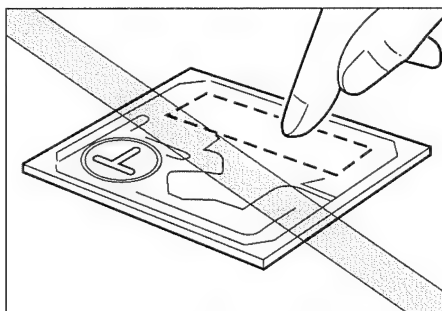

## Installing the Memory Board

To install the memory board in the FAX-L300 fax, follow these steps:




- Make sure the MEMORY lamp is off. If it is on, refer to page 5-21 for instructions on printing the documents in memory.
- Remove any documents or printed pages from the fax before installing the memory board.
- If documents remain stored in memory when the memory board is installed, the fax will print out the Memory Clear report when the fax is next plugged in.

**1**

Unplug the fax.



**2**

Remove the document support for scanned documents from the fax.

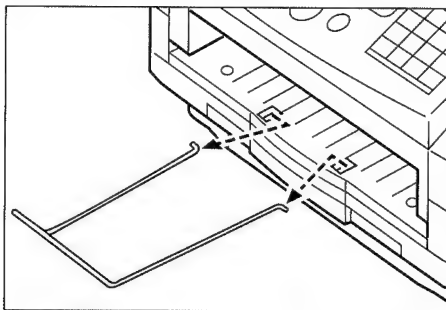


**3**


Use the front cover release latch to open the front cover.

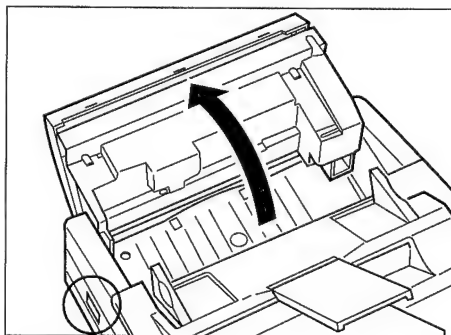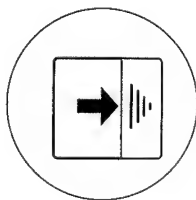


- 
- 4** Remove the two screws on the inner cover.

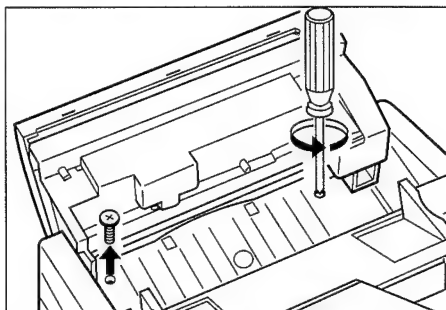

- 
- 5** Close the front cover.

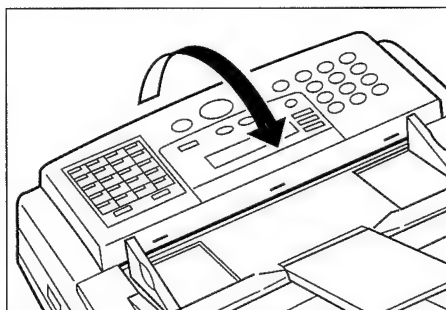


- 
- 6** Lift the inner cover slightly and remove it from the fax.

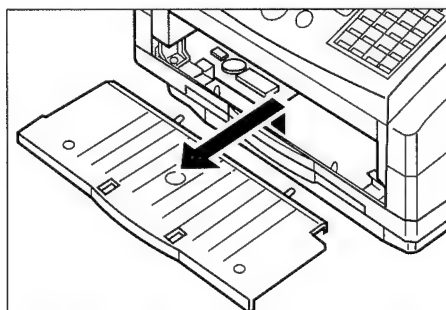

- 
- 7** Open the front cover again.

8



Remove the 0.5 MB memory board already installed in the unit.

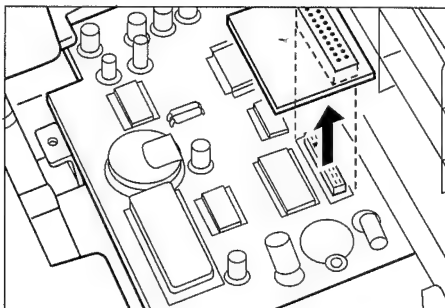

- Before touching the memory board, remove any static electricity from your hands by touching a grounded metal object. Static electricity can damage the memory board.
- Hold the edges of the memory board. Do not touch the delicate electronic circuitry with your fingers.
- When removing/connecting the memory board, be careful not to touch the components around the connector on the fax.

9


Hold the edges of the memory board and connect it to the connector.

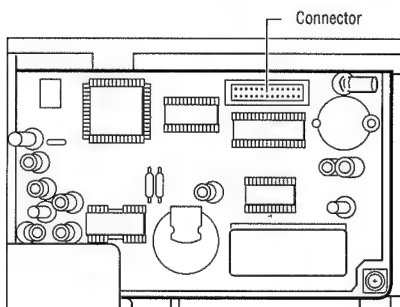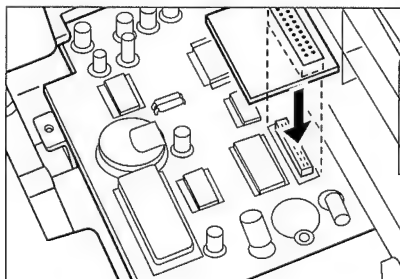

Top view

**10**

Replace the inner cover by holding the front cover horizontal and inserting the tabs on the inner cover into the slots on the fax.

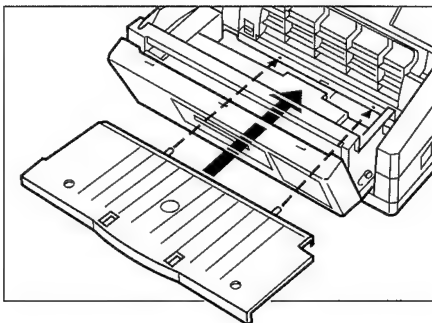**11**

Replace the screws.

**12**

Plug in the fax and make sure it is working properly.

**13**

Print the User's data list as described on page 6-7, and check the memory amount. It should say "TOTAL FAX MEMORY: 2.156 MB."







# Glossary



---

## Glossary

<b>auto halftone</b>	Auto halftone automatically distinguishes between the text areas and halftone areas (photographs, etc.) of a document, and scans accordingly. For text areas of a document, the fax scans faster, and for halftone areas, it scans more precisely. However, if the ground colour of the document is dark, the transmission speed will be slower.
<b>automatic dialling</b>	<p>Dialling numbers at the press of one or a few buttons. To use automatic dialling, you must register the numbers in the fax's memory. The fax has three types of automatic dialling:</p> <ul style="list-style-type: none"><li>● <b>One-Touch Speed Dialling:</b> Allows you to dial by pressing a single button.</li><li>● <b>Coded Speed Dialling:</b> Allows you to dial by pressing the <b>CODED DIAL</b> button and then entering a two-digit code.</li><li>● <b>Group Dialling:</b> Allows you to dial a group of numbers by pressing a single button.</li></ul>
<b>automatic image reduction</b>	The fax can print the date, time, company name, and a fax number at the top of the faxes it receives. To prevent this information from crowding the faxed image off the page and onto the next (thus possibly lengthening the fax), the fax automatically reduces the size of the image on the page.
<b>automatic redialling</b>	When the receiving fax machine is busy or does not answer, or when an error occurs while sending, the fax waits 2 minutes and then automatically redials the number. If the receiving fax is still busy or doesn't answer, the fax waits another two minutes and dials again. If the fax doesn't go through again, the fax prints an activity report.
<b>bps</b>	<i>Bits per second.</i> Refers to the speed with which a fax machine sends and receives data.
<b>Coded Speed Dialling</b>	Allows you to dial a fax number by pressing the <b>CODED DIAL</b> button and entering a two-digit code. The fax can store up to 100 fax numbers for Coded Speed Dialling.
<b>delayed transmission</b>	The fax can scan in a document for sending to one or more numbers at a later, preset time.
<b>document</b>	The sheet of paper that you want to send through the fax.
<b>document density</b>	The lightness or darkness of the faxes, which can be controlled through the fax's settings.
<b>dual access</b>	Enables the fax to receive a fax, even if it is already copying or printing. Also enables you to load other faxes into memory, make copies, print out reports, print documents or register information while the fax sends a fax from memory.
<b>ECM</b>	<i>Error Correction Mode.</i> Reduces system and line errors when sending or receiving from fax machines that have ECM capability. When using ECM, the fax checks each page of incoming or outgoing faxes for lost data; when it finds data that has been lost from a portion of a page, the fax transmits that portion again after confirming that all data within that portion can be transmitted successfully.

<b>FAX/TEL auto switch over</b>	<p>This feature automatically detects whether a call is from a fax machine or a telephone. If the call is from a fax machine, the fax is automatically received; if the call is from a telephone, the fax rings and you can answer the call using the handset. This feature allows the fax to use a single line for both fax and phone calls, and also enables you to use these variations:</p> <ul style="list-style-type: none"> <li>● <b>Voice answering:</b> When the fax receives a call, it responds with a built-in voice message: <i>"You are connected. Please hold,"</i></li> <li>● <b>Ring back tone:</b> While the fax rings, the fax sends an artificial ring back tone to the caller.</li> <li>● <b>Silent reception:</b> The fax receives faxes without ringing.</li> </ul>
<b>Group Dialling</b>	Allows you to dial up to 119 One-Touch Speed Dialling or Coded Speed Dialling numbers at once, with the press of a single button.
<b>manual receiving</b>	A method of receiving faxes in which you answer all incoming calls using the handset, and receive faxes by pressing <b>START/COPY</b> and then hanging up the handset.
<b>manual sending</b>	A method of sending faxes in which you dial the number, you speak with the other party and then press <b>START/COPY</b> to begin sending the document. Use manual sending if the memory is full, but you still want to send a document. Manual sending scans and sends one page at a time. The document is not scanned into the memory, so it takes a little more time to get your original document back.
<b>memory broadcast</b>	Allows you to send a scanned fax to as many as 121 locations at once, using a combination of One-Touch Speed Dialling, Coded Speed Dialling, or regular dialling.
<b>memory list</b>	<p>Shows the faxes stored in the fax's memory, along with the following information for each:</p> <ul style="list-style-type: none"> <li>● Transaction number</li> <li>● How the fax was stored</li> <li>● Name and number the fax was sent to (for One-Touch Speed Dialling or Coded Speed Dialling)</li> <li>● Number of pages</li> <li>● Date and time each document was stored in the memory and when it will be sent</li> <li>● Any errors that occurred when sending the document</li> </ul>
<b>memory sending</b>	A method of sending faxes in which you scan the document into the memory before the fax dials the number and sends the fax. Compare <i>manual sending</i> .
<b>One-Touch Speed Dialling</b>	Allows you to dial a fax number by pressing a single One-Touch Speed Dialling button. The fax can store up to 20 fax numbers for Coded Speed Dialling.
<b>PAUSE</b>	Pressing the <b>PAUSE</b> button enters a pause between digits of a telephone number.
<b>polling</b>	One fax machine requesting another to send a document. The receiving party calls the fax machine holding the document to be sent, and requests that it be sent.


## Glossary

<b>quick-on-line sending</b>	After a document is set in the automatic document feeder (ADF), the fax begins to scan the entire document into the memory. As the first page of a multiple document is being scanned, your FAX-L300 will begin to call the other party, and transmit the information even as the remaining pages are being scanned. The fax scans the document quickly so you can get it back in a few moments and return to work.
<b>regular dialling</b>	Dialling a number by using the numeric buttons.
<b>remote receiving ID</b>	The number you can dial from an extension phone to start receiving a fax.
<b>remote reception</b>	Receiving a fax by answering the extension phone. You may have to dial a remote receiving ID number to start remote reception.
<b>reports</b>	A document printed by the fax and containing information about the faxes it has sent and received.
<b>sender ID</b>	Information printed at the top of a fax: <ul style="list-style-type: none"><li>• Date and time the fax was sent</li><li>• Your fax/phone number</li><li>• Your name</li><li>• The other party's name</li><li>• Page number</li></ul>
<b>sending speed</b>	The rate at which faxes are transmitted through the phone line. See also <i>bps</i> .
<b>smoothing</b>	A function that allows the fax to print high-resolution images.
<b>standby mode</b>	The mode the fax is in when not currently performing an operation. The display shows the date and time in this mode.
<b>timed sending</b>	See <i>delayed transmission</i> .
<b>TONE dialling button</b>	Enables you to switch temporarily from pulse to tone dialling.
<b>transaction number</b>	A unique number assigned to each fax sent (TX NO.) or received (RX NO.) by the fax, and used to identify that fax.



# Index

1

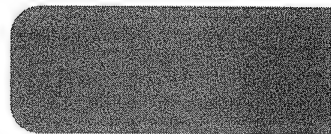

2

## A

- activity management report 6-2
  - printing 6-2
- ALARM lamp 2-10
- alternative phone services 5-29
  - registering 5-29
  - sending faxes through 5-30
    - using M button 5-31
- ANS HOOK UP / MANUAL button 2-11
- answering machine 2-11
  - connecting 2-14
  - receiving faxes with 4-2, 4-9
  - outgoing message 4-10
  - setting up 4-9
- answering service
  - using fax unit with 4-10
- automatic dialling 1-3
- automatic document feeder (ADF) 1-2
  - capacity 1-2
  - preventing jams in 3-2
- automatic receiving 4-2
  - fax only 4-3
  - fax/telephone auto-switching 4-3
    - setting up 4-4
  - options 4-3
- automatic switching
  - fax/telephone 1-2

## B

- B.T. adaptor (UK only) 2-13, 2-14
- backup battery
  - recharging 5-23
- broadcasting faxes 5-16
  - memory full during 5-16
- buttons. *See specific button name*

## C

- cancelling faxes
  - while receiving 4-13
  - while sending 3-8
    - from memory 3-8
- characters
  - entering 2-29
    - clearing 2-31
    - editing 2-31
    - example 2-30
- cleaning the fax unit
  - interior 7-3
  - outer casing 7-2
  - scanner components 7-4

- CLEAR button 2-12
- CODED DIAL button 2-11
- coded speed dialling 2-11, 5-5, 5-6, 5-7
  - long-distance settings 5-14
- M button 5-31<sup>T</sup>
  - multiple destinations 5-7
  - printing fax numbers 6-9
  - reports 6-8
  - sending with passwords 5-12
  - sending with subaddresses 5-12
  - settings 5-11
  - storing fax numbers 5-5
  - transmission speed 5-15
  - transmission time 5-11
  - transmission type 5-12
- connections 2-9, 2-13
  - answering machine 2-14
  - extension telephone 2-14
    - B.T. adaptor (UK only) 2-14
  - handset 2-13
  - telephone 2-13
    - telephone line 2-13
      - B.T. adaptor (UK only) 2-13
- contrast
  - setting 3-14
- copying 5-24
  - features 1-3
  - resolution 3-13
  - selecting delivery path of 2-26
  - settings 5-24
  - troubleshooting A-13
- cursor buttons 2-12

## D

- D.T. (dial tone) button 2-12
- DATA REGISTRATION button 2-12
- date and time
  - entering 2-34
- delayed sending 5-17
  - memory full during 5-17
- DELAYED TRANSMISSION button 2-12
- deleting faxes from memory 5-20
- delivery slots
  - capacity 2-26
  - selecting 2-26
- dial tone
  - confirming 5-19
- display
  - troubleshooting A-13

## E

- environmental requirements 1-7, 2-2
- error correction mode (ECM) 1-3
  - problems
    - receiving A-10
    - sending A-9
- extension telephone
  - connecting 2-14
    - B.T. adaptor (UK only) 2-14

## F

- fax numbers
  - printing 6-9
    - coded speed dialling 6-10
    - one-touch speed dialling 6-10
  - storing
    - coded speed dialling 5-5
    - one-touch speed dialling 5-2
    - your own 2-35
- fax unit
  - alternative phone services
    - using with 5-29
  - automatic receiving
    - fax only 4-3
    - fax/telephone auto-switching 4-3
    - options 4-3
  - cleaning 7-2
    - interior 7-3
    - outer casing 7-2
    - scanner components 7-4
  - components 2-8, 2-9
  - connections 2-8, 2-9
  - contrast 3-14
  - controls 2-8, 2-10
  - copying with 1-3, 2-26, 3-13, 3-14, 5-24
    - settings 5-24
  - environmental requirements 1-7, 2-2
  - fax/telephone auto-switch receiving
    - outgoing message 4-4
  - LCD display 2-10
  - loading documents into 3-4
  - maintaining 7-2, A-2
  - maximum fax size 3-3
  - memory capacity 1-3
  - moving 1-8
  - numbers. *See fax numbers*
  - operation panel 2-10
  - parts list 2-5
  - placement 1-7, 2-2
  - polling other fax units 5-25
  - power loss
    - stored faxes during 5-23
    - using during 5-23
  - power requirements 1-7, 2-2, 2-15
  - powering up 1-8
  - printing problems A-11, A-12
  - pulse line
    - using tone dialling 5-26
  - receiving faxes
    - methods 4-2
  - receiving mode
    - setting 4-2
  - replaceable parts 2-6
  - resolution
    - setting 2-10
  - restricting use 5-27
  - sending faxes
    - from memory 3-6
    - manually 3-6
    - methods 3-6
    - preparing the document 3-4
    - redialling 3-10
    - service 1-6, 1-7, 2-6
    - setting up 2-2, 2-7, 2-13, 2-14
      - help with 2-3
  - settings
    - reception 2-32
    - transmission 2-32
  - storing information in 2-29
    - guidelines for 2-29
  - transmission speed 1-3
  - troubleshooting A-2
  - unpacking 2-4
  - using with answering machine 4-9
    - outgoing message 4-10
  - using with answering service 4-10
  - ventilation requirements 1-7, 2-3
- fax-only receiving 4-3
- fax/telephone auto-switch receiving 4-3
  - setting up 4-4
- faxes
  - adding pages while sending 3-8
  - cancelling while sending 3-8
  - contrast 3-14
  - identification information 2-33
  - image quality
    - setting 3-13
  - maximum size 3-3



## Index

- memory
  - deleting from 5-20
  - printing from 5-21
  - printing list of stored 5-21
  - receiving into 4-11
  - sending from 3-6
- photographs 3-13
- printing
  - from memory 4-11
- receiving
  - answering machine 4-9
  - answering service 4-10
  - automatically 4-2
  - cancelling 4-13
  - errors during A-10
  - fax/telephone auto-switching 4-3
  - into memory 4-11
  - manually 4-2
  - polling 5-25
  - problems during A-10
  - problems with ECM A-10
  - with answering machine 4-2, 4-9
- receiving manually 4-8
- requesting 5-25
- resending 5-20, 5-22
- resolution
  - fine 3-13
  - standard 3-13
- selecting delivery path of 2-26
- sending
  - adding pages during 3-8
  - additional locations 5-22
  - alternative phone services 5-30
  - broadcast 5-16
  - cancelling 3-8
  - confirming dial tone 5-19
  - delayed 2-12, 5-17
  - errors during A-9
  - from memory 3-6
  - loading the document 3-4
  - long-distance 5-18
  - manually 3-6
  - messages during 3-9
  - multiple destinations 5-16
  - photos 3-13
  - preparing the document 3-4
  - problems with A-9
  - redialling 3-10, 3-11
  - through switchboards 5-18
  - using memory 3-6
- storing in memory 2-28
- transaction numbers 3-7
- FINE / STANDARD button 2-10
- FUNCTION button 2-12
- FUNCTION lamp 2-12

## G

- group dialling 5-10
  - creating groups 5-8, 5-16
  - reports 6-9

## H

- handset
  - attaching C-2
- HOOK button 2-11

## I

- identifying information
  - entering 2-33
  - with speed dialling 2-33
- IN USE lamp 2-10
- ink cartridge. *See toner cartridge*

## K

- keying in characters 2-29
  - example 2-30

## L

- lamps. *See specific lamp name*
- LCD display 2-10
  - troubleshooting A-13
- letter mode
  - lowercase 2-30
  - uppercase 2-30
- letters
  - entering 2-29, 2-30
  - example 2-30
  - letter mode 2-30
- long-distance settings
  - coded speed dialling 5-14
  - one-touch speed dialling 5-14

## M

- M button 5-30
  - using with speed dialling 5-31
- maintenance 7-2, A-2
  - cleaning the fax unit 7-2
    - interior 7-3
    - outer casing 7-2
  - scanner components 7-4
  - toner cartridge A-12
- manual receiving 4-2, 4-8
- memory
  - backup battery
    - recharging 5-23
  - backup function 5-23
  - capacity 1-3
    - pages received 4-11
    - phone numbers 5-2
    - with optional board 4-11
  - clear reports 6-6
  - deleting faxes from 2-12, 5-20
  - during power loss 4-11, 5-23
  - faxes stored in 2-28
  - full during sending 5-16, 5-17
  - installing additional C-5
  - printing faxes from 2-12, 4-11, 5-21
  - receiving faxes into 4-11
  - resending from 5-20, 5-22
  - sending from 2-12, 3-6, 5-22
    - cancelling 3-8
    - error during 5-20
  - stored faxes
    - printing list of 5-21
- memory clear reports 6-6
- MEMORY lamp 2-10
- MEMORY REFERENCE button 2-12
- menu system 2-32
- messages displayed. *See also specific message names*
  - error A-14
  - while receiving 4-11, 4-12, A-14
  - while sending 3-9, A-14
- moving the fax unit 1-8

## N

- name
  - entering your 2-35
- NO TEL # message 5-4, 5-7
- number mode 2-30
- numbers. *See fax numbers*
- numeric buttons 2-11

## O

- one-touch speed dial button 2-11, 2-31
- one-touch speed dialling 2-11, 5-4
  - long-distance settings 5-14
- M button 5-31
  - multiple destinations 5-4
  - maximum number 5-4
- printing numbers 6-9
- reports 6-8, 6-10
- sending with passwords 5-12
- sending with subaddresses 5-12
- settings 5-11
- storing fax numbers 5-2
- transmission speed 5-15
- transmission time 5-11
- transmission type 5-12
- operation panel 2-10
- OUTPUT TRAY FULL message 2-28

## P

- paper
  - adding 2-22
  - clearing jams A-2, A-3
    - at document feeder A-2, A-9
    - at paper cassette A-3
    - document feeder 3-2
    - inside fax unit A-5
    - recording paper A-3, A-10
  - loading 2-22
  - preventing jams 3-2
  - requirements 2-22, 3-2
  - storing before use 2-22, 2-23
  - usable area 3-3
  - using a different size 2-25
- paper cassette
  - capacity 1-2, 2-22
  - filling 2-22
  - troubleshooting A-13
- parts list 2-5
- passwords
  - coded speed dialling 5-12
  - one-touch speed dialling 5-12
- PAUSE button 2-12
- photographs
  - faxing 3-13
- placing the fax unit 1-7, 2-2
- polling 5-25
  - ID 5-25
  - troubleshooting A-13
- POLLING button 2-12
- power
  - loss
    - memory during 4-11
    - stored faxes 5-23
    - using fax during 5-23
  - requirements 1-7, 2-2, 2-15
- powering up 1-8, 2-15
  - delay in 2-15
- print cartridge. *See toner cartridge*
- print quality
  - auto halftone 3-13
  - contrast 3-14
  - maximizing 3-13
  - problems with A-11, A-12
  - resolution 1-2
    - fine 3-13
    - standard 3-13
  - setting
    - auto halftone 3-13
    - contrast 3-14
- printer settings 2-32
  - menu system 2-32
- private branch exchange (PBX)
  - sending through 5-18
- pulse line
  - tone dialling with 5-26

## R

- R button 2-10
- receiving faxes
  - answering machine 4-2
  - automatically 4-2
    - options 4-3
    - problems with A-10
  - cancelling 4-13
  - errors during A-10
  - fax/telephone auto-switching 4-3
    - setting up 4-4
  - into memory 4-11
  - manually 4-2
    - intercepting all calls 4-8
    - problems with A-10
  - messages during 4-12
  - mode 4-2
  - polling 5-25
  - problems during A-10
  - with an answering machine 4-9
    - setting up 4-9
- receiving mode
  - setting 4-2
- reception reports 4-12, 6-6
- reception settings
  - menu system 2-32
- REDIAL button 2-11
- redialling
  - automatically 3-10
  - cancelling 3-10
  - setting up 3-11
  - manually 3-10
  - setting up 3-11
    - number of attempts 3-11
    - time between attempts 3-11
- REPLACE CARTRIDGE message A-12
- replaceable parts 2-6
- REPORT button 2-12
- reports
  - coded speed dialling 6-8, 6-10
  - group dialling 6-9
  - memory clear 6-6
  - one-touch speed dialling 6-8, 6-10
  - printing 2-12, 6-2
  - reception 4-12, 6-6
  - settings 2-32
    - menu system 2-32
  - transmission 6-4
- resolution
  - setting 2-10

## S

- safety instructions 1-7, 2-15
- search buttons 2-12
- sending faxes
  - adding pages during 3-8
  - additional locations 5-22
  - alternative phone services 5-30
  - broadcast 5-16
    - memory full 5-16
  - cancelling 3-8
  - confirming dial tone 5-19
  - delayed 2-12, 5-17
    - memory full 5-17
  - errors during A-9
  - from memory 3-6
    - cancelling 3-8
  - loading the document 3-4
  - long-distance 5-18
    - using pauses 5-18
  - manually 3-6
  - messages during 3-9
  - multiple destinations 5-16
  - multiple locations 5-16
    - memory full 5-16
  - photographs 3-13
  - preparing the document 3-4
  - print quality
    - auto halftone 3-13
    - contrast 3-14
    - maximizing 3-13
    - resolution 3-13
  - problems with A-9
    - using ECM A-9
  - redialling 3-10
    - setting up 3-11
  - resending 5-20, 5-22
  - through switchboards 5-18
- service 1-6, 1-7, 2-6
  - when needed 1-8
- SET button 2-12
- SET DOCUMENT message 5-4, 5-7
- setting up the fax unit 2-2, 2-7, 2-13, 2-14
  - connections 2-13
  - handset (optional) C-2
  - help with 2-3
  - power requirements 2-15
  - shipping materials 2-4, 2-6
  - SPACE button 2-12
  - SPEAKER VOLUME switch 2-11
  - special function buttons 2-11, 2-31
  - speed dialling
    - coded 5-5, 5-6, 5-7
      - multiple destinations 5-7
      - printing fax numbers 6-9
      - reports 6-8 – 6-10
      - storing fax numbers 5-5
    - dialling order 5-16
    - group 5-10
      - reports 6-9
    - M button 5-31
    - multiple locations 5-16
      - memory full 5-16
    - one-touch 5-4
      - multiple destinations 5-4
      - printing numbers 6-9
      - reports 6-8, 6-10
      - storing fax numbers 5-2
    - settings
      - menu system 2-32
      - storing numbers for 5-2
  - speed dialling buttons 2-31
  - START/COPY button 2-11
  - STOP button 2-11
  - storing fax numbers
    - coded speed dialling 5-5
    - one-touch speed dialling 5-2
  - storing information 2-29
    - deleting 2-31
    - editing 2-31
    - guidelines for 2-29
    - keying in 2-29, 2-31
  - subaddresses
    - coded speed dialling 5-12
    - one-touch speed dialling 5-12
  - SUPPLY REC. PAPER message 2-22
  - switchboards
    - sending through 5-18
  - switching
    - automatic fax/telephone 1-2
  - system settings
    - menu system 2-32

## T

- telephone
  - calls
    - receiving during power loss 5-23
  - extension 2-14
    - connecting 2-14
  - features 1-3
  - line
    - connecting 2-13
    - entering type 2-36
  - troubleshooting A-13
- TONE button 2-12
- tone dialling
  - with pulse line 5-26
- toner cartridge
  - handling 2-17
  - installing 2-18
  - maintaining 2-17, A-12
  - replacing 2-6, 2-17, 2-18
  - storing 2-17
  - troubleshooting A-13
- transaction numbers 3-7, 4-8
- transmissions
  - cancelling 3-8
  - reports 6-4
    - after sending 3-9
  - settings
    - menu system 2-32
  - speed 1-3
    - coded speed dialling 5-15
    - one-touch speed dialling 5-15
  - times
    - coded speed dialling 5-11
    - one-touch speed dialling 5-11
  - types
    - coded speed dialling 5-12
    - one-touch speed dialling 5-12
- transmit terminal identification (TTI)
  - entering 2-33
- transporting the fax unit 1-8

- troubleshooting A-2
  - blank display A-13
  - copying A-13
  - paper cassette A-13
  - paper jams A-2
    - document misfeeds A-2
    - recording paper A-3, A-10
  - polling A-13
  - printing problems A-11, A-12
  - receiving faxes
    - errors during A-10
    - problems with A-10
  - sending faxes
    - errors during A-9
    - problems with A-9
    - problems with ECM A-9
  - telephone A-13
  - toner cartridge A-13
- type conventions
  - in this manual 1-5

## U

- unpacking the fax unit 2-4
- user information
  - date and time 2-34
  - entering 2-33
    - example 2-34
  - fax number 2-35
  - name 2-35
  - printing 6-7
  - telephone line type 2-36
- user settings
  - menu system 2-32

## V

- ventilation requirements 1-7, 2-3